JVC

SERVICE MANUAL

COMPACT COMPONENT SYSTEM

MX-JD8

Area suffix

US ---------- Singapore
UW ---------- Brazil,Mexico,Peru
UX ---------- Saudi Arabia
UN ---------- Asean

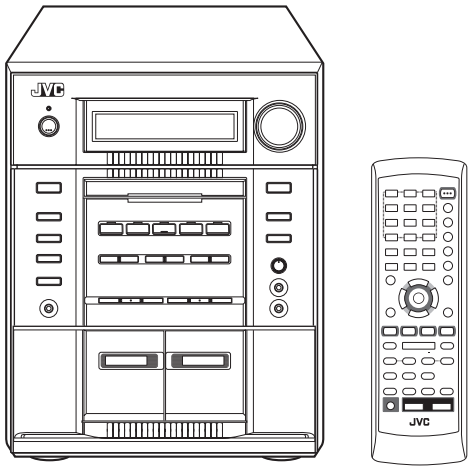

CA-MXJD8

AV COMPU LINK EXTENDED SUPER BASS

TABLE OF CONTENTS

1 PRECAUTION 1-3
2 SPECIFIC SERVICE INSTRUCTIONS 1-6
3 DISASSEMBLY 1-7
4 ADJUSTMENT 1-37
5 TROUBLESHOOTING 1-44

COPYRIGHT © 2004 Victor Company of Japan, Limited

No.MB282
2004/7

SPECIFICATION

Amplifier section	Output Power	FRONT MAIN SPEAKERS	55 W per channel, min. RMS, driven into 6 Ω at 1 kHz with no more than 10% total harmonic distortion.
		FRONT SUBWOOFERS	140 W per channel, min. RMS, driven into 6 Ω at 63 Hz with no more than 10% total harmonic distortion.
		CENTER SPEAKER	50 W, min. RMS, driven into 8 Ω at 1 kHz with no more than 10% total harmonic distortion.
		SURROUND SPEAKERS	30 W per channel, min. RMS, driven into 16 Ω at 1 kHz with no more than 10% total harmonic distortion.
	Digital output	OPTICAL DIGITAL OUTPUT	-21 dBm to -15 dBm (660 nm ±30 nm)
	Audio input sensitivity/Impedance (Measured at 1 kHz, with tape recording signal 300 mV)	AUX IN	300 mV/47 kΩ
		MIC 1/2	3.0 mV/50 kΩ
	VIDEO OUT	Color system	NTSC/PAL selectable
		VIDEO (composite)	1 V(p-p)/75 Ω
		S-VIDEO	Y (luminance):1 V(p-p)/75 Ω
			C (chrominance, burst):0.286 V(p-p)/75 Ω
		COMPONENT (Interlace/ Progressive)	(Y):1 V(p-p)/75 Ω
			(PB/PR):0.7 V(p-p)/75 Ω
	Speaker Terminals	Front main speakers	6 Ω - 16 Ω
		Center speakers	8 Ω - 16 Ω
		Surround speakers	16 Ω - 32 Ω
		Front subwoofers	6 Ω - 16 Ω
Others			AV COMPU LINKx2 (Ø 3.5)
Tuner section	FM tuning range		87.50 MHz - 108.00 MHz
	AM (MW) tuning range		531 kHz - 1 710 kHz (at 9 kHz) 530 kHz - 1 710 kHz (at 10 kHz)
Disc player section	Playable disc		DVD Video/DVD Audio/CD/VCD/SVCD CD-R/CD-RW (recorded in Audio CD/ Video CD/ Super Video CD/ MP3/ WMA/ JPEG/MPEG-4 format) DVD-R/DVD-RW (recorded in video format)
	Dynamic range		90 dB
	Horizontal resolution		500 lines
	Wow and flutter		Immeasurable
Cassette deck section	Frequency response Normal (type I)		50 Hz - 14 000 Hz
	Wow and flutter		0.15% (WRMS)
General	Power requirement		AC 110 V / AC 127 V / AC 220 V / AC 230 V - AC 240 V , (adjustable with the voltage selector), 50 Hz / 60 Hz
	Power consumption		325 W (at operation) 22 W (on standby)
	Dimensions (approx.)		265 mm × 335 mm × 352 mm (W/H/D)
	Mass (approx.)		9.1 kg

Design and specifications are subject to change without notice.

SECTION 1
PRECAUTION

1.1 Safety Precautions

(1) This design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.

(2) Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturers warranty and will further relieve the manufacture of responsibility for personal injury or property damage resulting therefrom.

(3) Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (⚠) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.

(4) The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after reassembling.

(5) Leakage shock hazard testing
After reassembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.Do not use a line isolation transformer during this check.
- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal parts of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.).
- Alternate check method
Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having, 1,000Ω per volt or more sensitivity in the following manner. Connect a 1,500Ω 10W resistor paralleled by a 0.15μF AC-type capacitor between an exposed metal part and a known good earth ground.
Measure the AC voltage across the resistor with the AC voltmeter.
Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Voltage measured any must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

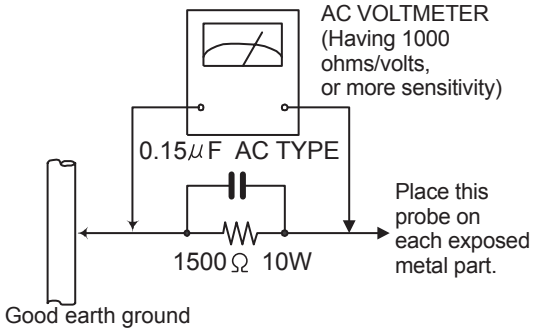

1.2 Warning

(1) This equipment has been designed and manufactured to meet international safety standards.
(2) It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
(3) Repairs must be made in accordance with the relevant safety standards.
(4) It is essential that safety critical components are replaced by approved parts.
(5) If mains voltage selector is provided, check setting for local voltage.

1.3 Caution

Burrs formed during molding may be left over on some parts of the chassis.
Therefore, pay attention to such burrs in the case of preforming repair of this system.

1.4 Critical parts for safety

In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (▬), diode (▮) and ICP (●) or identified by the " ⚠ " mark nearby are critical for safety. When replacing them, be sure to use the parts of the same type and rating as specified by the manufacturer.
(This regulation dose not Except the J and C version)

1.5 Preventing static electricity

Electrostatic discharge (ESD), which occurs when static electricity stored in the body, fabric, etc. is discharged, can destroy the laser diode in the traverse unit (optical pickup). Take care to prevent this when performing repairs.

1.5.1 Grounding to prevent damage by static electricity

Static electricity in the work area can destroy the optical pickup (laser diode) in devices such as laser products.
Be careful to use proper grounding in the area where repairs are being performed.

(1) Ground the workbench
Ground the workbench by laying conductive material (such as a conductive sheet) or an iron plate over it before placing the traverse unit (optical pickup) on it.

(2) Ground yourself
Use an anti-static wrist strap to release any static electricity built up in your body.

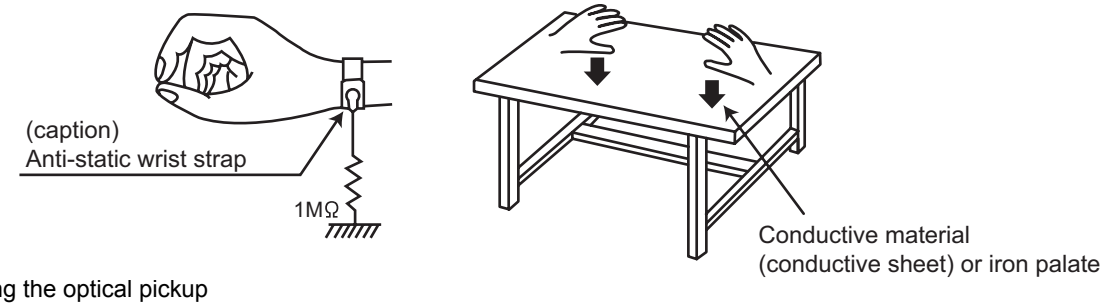

(3) Handling the optical pickup
- In order to maintain quality during transport and before installation, both sides of the laser diode on the replacement optical pickup are shorted. After replacement, return the shorted parts to their original condition. (Refer to the text.)
- Do not use a tester to check the condition of the laser diode in the optical pickup. The tester's internal power source can easily destroy the laser diode.

1.6 Handling the traverse unit (optical pickup)

(1) Do not subject the traverse unit (optical pickup) to strong shocks, as it is a sensitive, complex unit.
(2) Cut off the shorted part of the flexible cable using nippers, etc. after replacing the optical pickup. For specific details, refer to the replacement procedure in the text. Remove the anti-static pin when replacing the traverse unit. Be careful not to take too long a time when attaching it to the connector.
(3) Handle the flexible cable carefully as it may break when subjected to strong force.
(4) I t is not possible to adjust the semi-fixed resistor that adjusts the laser power. Do not turn it.

1.7 Attention when traverse unit is decomposed

***Please refer to "Disassembly method" in the text for the pickup unit.**

- Apply solder to the short land sections before the flexible wire is disconnected from the connecto on the servo board. (If the flexible wire is disconnected without applying solder, the pickup may be destroyed by static electricity.)
- In the assembly, be sure to remove solder from the short land sections after connecting the flexible wire.

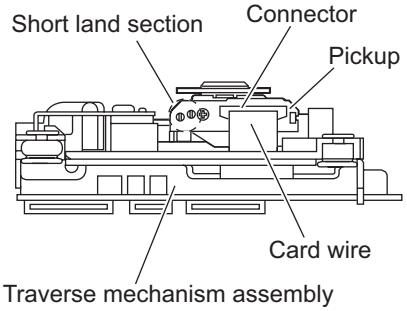

1.8 Important for laser products

1.CLASS 1 LASER PRODUCT

2.DANGER : Invisible laser radiation when open and inter lock failed or defeated. Avoid direct exposure to beam.

3.CAUTION : There are no serviceable parts inside the Laser Unit. Do not disassemble the Laser Unit. Replace the complete Laser Unit if it malfunctions.

4.CAUTION : The CD,MD and DVD player uses invisible laser radiation and is equipped with safety switches which prevent emission of radiation when the drawer is open and the safety interlocks have failed or are defeated. It is dangerous to defeat the safety switches.

5.CAUTION : If safety switches malfunction, the laser is able to function.

6.CAUTION : Use of controls, adjustments or performance of procedures other than those specified here in may result in hazardous radiation exposure.

⚠ ***CAUTION*** **Please use enough caution not to see the beam directly or touch it in case of an adjustment or operation check.**

CAUTION : Visible and invisible laser radiation when open and interlock failed or defeated.
AVOID DIRECT EXPOSUREBTO BEAM.

ADVARSEL : Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling.

VARNING : Synlig och osynlig laserstråling när den öppnas och spärren är urkopplad. Betrakta ej strålen.

VARO : Avattaessa ja suojalukitus ohitettuna tai viallisena olet alttiina näkyvälle ja näkymätttömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi.

REPRODUCTION AND POSITION OF LABELS

WARNING LABEL


CAUTION : Visible and Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)
ADVARSEL : Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling. (d)
VARNING : Synlig och osynling laserstrålning när den öppnas och spärren är urkopplad. Betrakta ej strålen. (s)
VARO : Avattaessa ja suojalukitus ohitettuna tai viallisena olet alttiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)

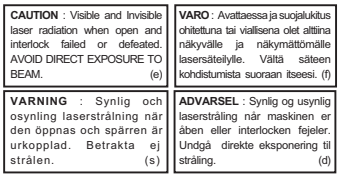
CAUTION : Visible and Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)
VARO : Avattaessa ja suojalukitus ohitettuna tai viallisena olet alttiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)
VARNING : Synlig och osynling laserstrålning när den öppnas och spärren är urkopplad. Betrakta ej strålen. (s)
ADVARSEL : Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling. (d)

SECTION 2
SPECIFIC SERVICE INSTRUCTIONS

This service manual does not describe SPECIFIC SERVICE INSTRUCTIONS.

SECTION 3
DISASSEMBLY

3.1 Main body section

3.1.1 Removing the metal cover (See Figs.1 to 3)

(1) From the both sides of the main body, remove the two screws **A** attaching the metal cover. (See Figs.1 and 2.)
(2) From the back side of the main body, remove the six screws **B** attaching the metal cover. (See Fig.3.)
(3) Remove the metal cover from the main body while lifting the rear section of the metal cover in the direction of the arrow. (See Figs.1 and 2.)

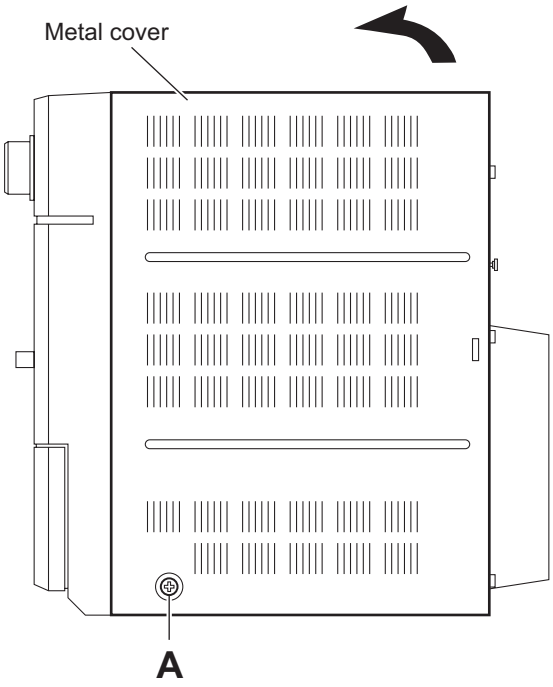

Fig.1

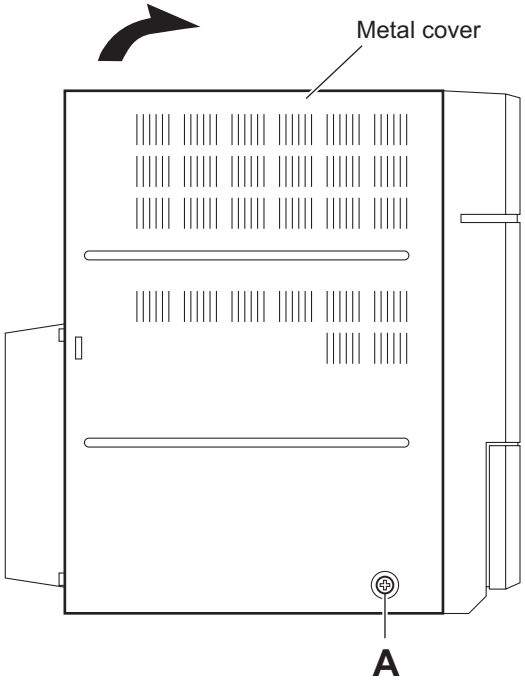

Fig.2

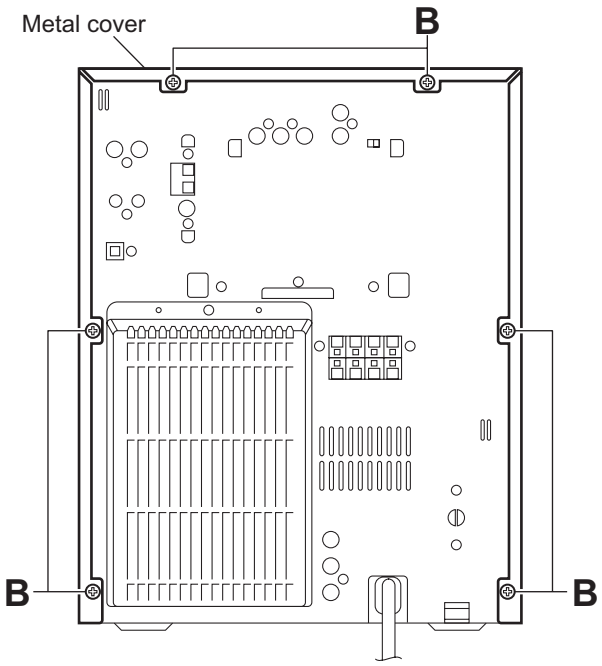

Fig.3

3.1.2 Removing the front panel assembly (See Figs.4 to 7)

- Prior to performing the following procedures, remove the metal cover.

(1) From the right side of the main body, remove the screw **C** attaching the earth wires on the reverse side of the main board. (See Fig.4.)

Reference:
After attaching the earth wires, fix them with a spacer as before. (See Fig.4.)

(2) Remove the plastic rivet attaching the main board. (See Fig.4.)

(3) From the inside of the main body, disconnect the card wires from the connectors (CN303, CN860, CN880) on the forward side of the main board. (See Fig.4.)

(4) Remove the wire clamp fixing the wires and disconnect the wires from the connectors (CN301, CN302) on the forward side of the main board. (See Fig.5.)

Reference:
After connecting the wires to the connectors, fix the wires with the wire clamp as before. (See Fig.5.)

(5) Disconnect the wire from the connector CN454 on the forward side of the main board. (See Fig.5.) **[UW version only]**

(6) From the left side of the main body, disconnect the parallel wire from the connector CN101 on the transformer board. (See Fig.5.)

(7) Disconnect the wire from the connector CN119 on the transformer board. (See Fig.5.)

Reference:
After connecting the wire, pass the wire through the slot **a** of the holder board as before. (See Fig.5.)

(8) Remove the tie band fixing the wire and disconnect the wire from the connector CN106 on the speaker terminal board. (See Fig.5.)

Reference:
- After connecting the wire, fix the wire with a new tie band as before. (See Fig.5.)
- After connecting the wire, pass the wire through the slot **a** of the holder board as before. (See Fig.5.)

(9) From the top side of the main body, remove the two screws **D** attach the front panel assembly to the main body. (See Fig.6.)

(10) From the bottom side of the main body, remove the three screws **E** and two screws **F** attaching the front panel assembly. (See Fig.7.)

(11) Release the claws **b**, remove the front panel assembly from the main body in the direction of the arrow. (See Fig.7.)

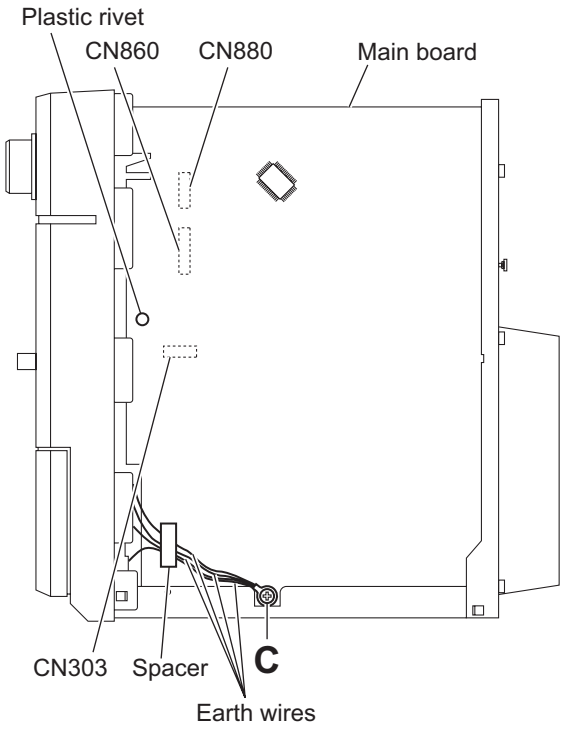

Fig.4

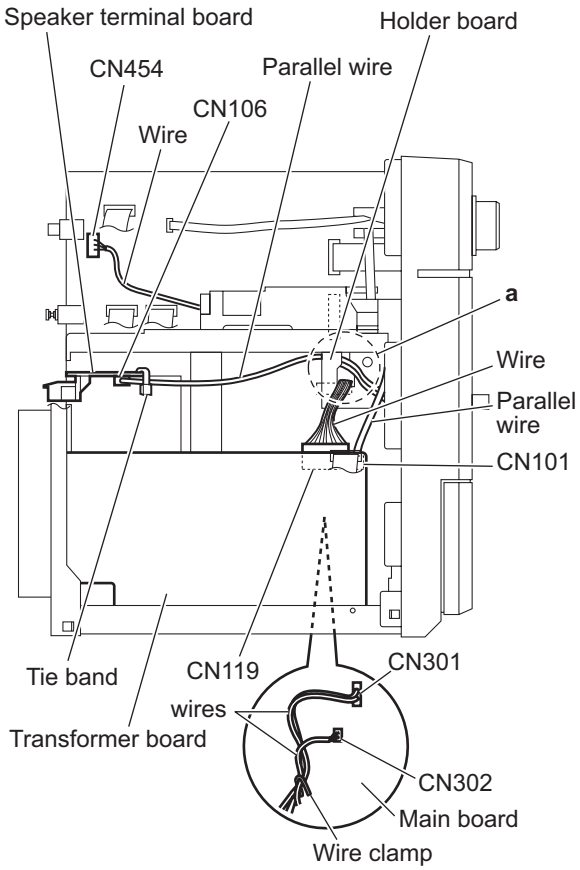

Fig.5

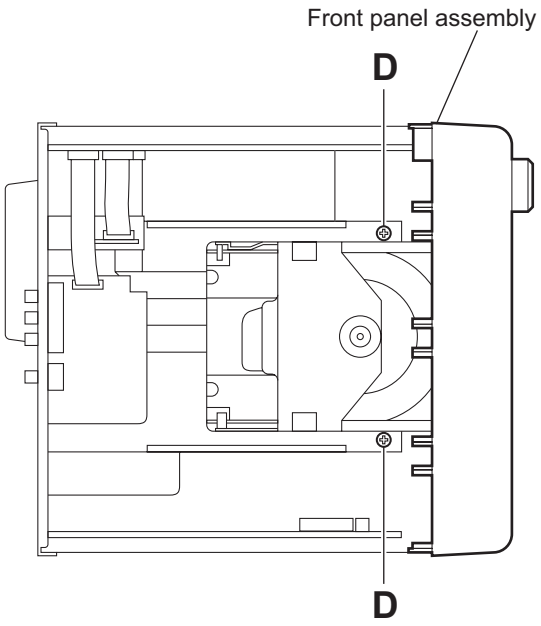

Fig.6

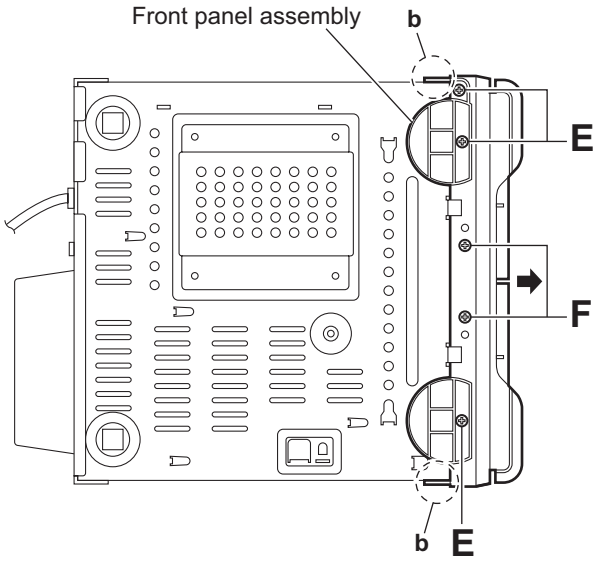

Fig.7

3.1.3 Removing the tuner
(See Figs.8 and 9.)

- Prior to performing the following procedures, remove the metal cover.
  (1) From the top side of the main body, disconnect the card wire from the connector CN21 on the main board. (See Fig.8.)
  (2) From the back side of the main body, remove the two screws **G** attaching the tuner to the rear panel. (See Fig.9.)

3.1.4 Removing the video board
(See Figs.8 and 9.)

- Prior to performing the following procedures, remove the metal cover.
  (1) From the top side of the main body, disconnect the card wire from the connector CN410 on the main board. (See Fig.8.)
  (2) From the back side of the main body, remove the three screws **H** attaching the video board to the rear panel. (See Fig.9.)

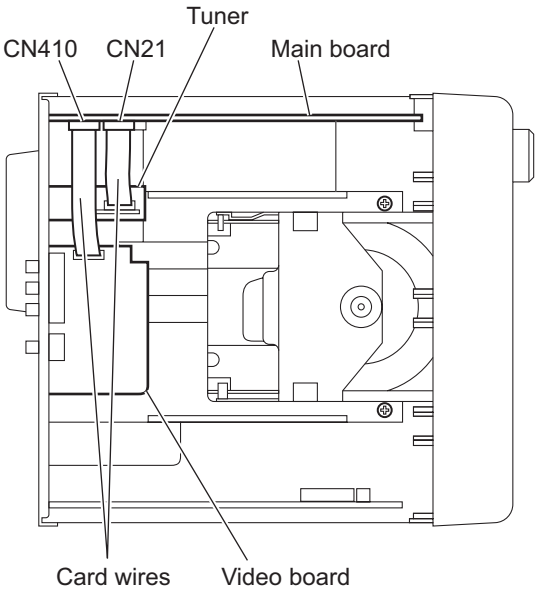

Fig.8

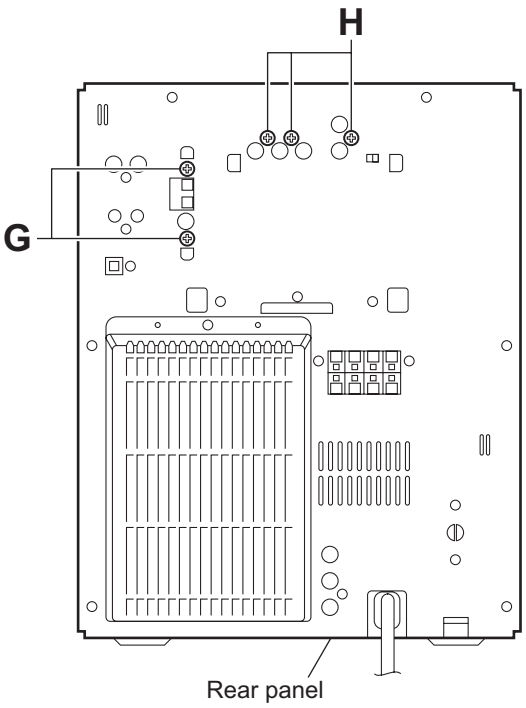

Fig.9

3.1.5 Removing the rear panel (See Figs.8 to 11)

- Prior to performing the following procedures, remove the metal cover.
  (1) From the back side of the main body, remove the screw **J** attaching the rear cover. (See Fig.10.)
  (2) Release the sections **c** and remove the rear cover from the rear panel. (See Fig.10.)
  (3) Remove the two screws **K** and eighteen screws **L** attaching the rear panel. (See Fig.11.)
  (4) Remove the screw **L'** attaching the rear panel.(See Fig.11.) **[US/UX/UN version only]**

  Reference:
  Remove the tuner and video board as required. (See Figs.8 and 9.)
  (5) From the both sides of the main body, release the sections **d** of the center chassis in the direction of the arrow and release the joints e attaching the rear panel to the bottom chassis. (See Fig. 11.)

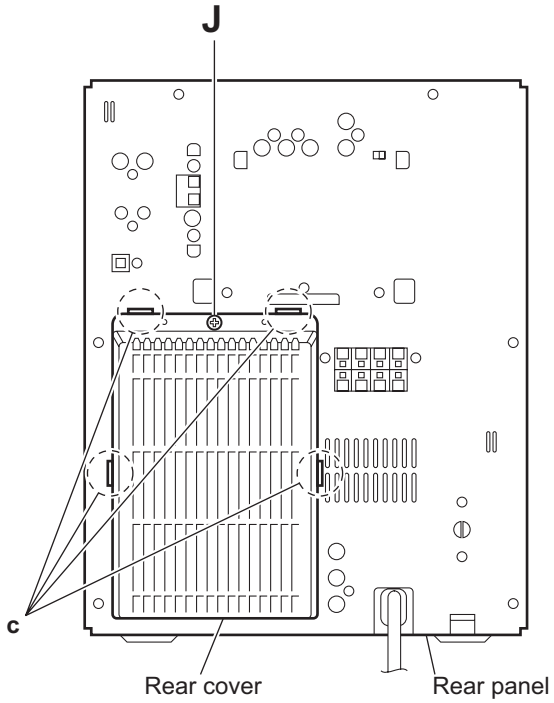

Fig.10

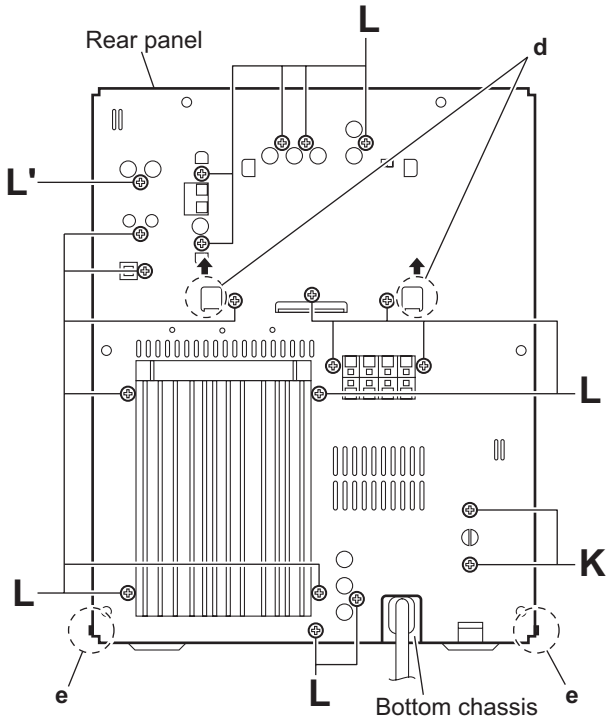

Fig.11

3.1.6 Removing the DVD mechanism assembly (See Figs.12 and 13)

- Prior to performing the following procedures, remove the metal cover, tuner and video board.

(1) From the top side of the main body, remove the three screws **M** attaching the DVD mechanism assembly on the center chassis. (See Fig.12.)

(2) From the forward side of the main board, disconnect the card wires from the connectors (CN11, CN522, CN523, CN524, CN531). (See Fig.12.)

Reference:

When reassembling, pass the card wire through the section **f** of the main board before connecting the card wire to the connector CN11. (See Fig.12.)

(3) Remove the spacer fixing the card wires. (See Fig.12.)

Reference:

After connecting the card wires, fix them with the spacer as before. (See Fig.12.)

(4) From the inside of the main body, take out the DVD mechanism assembly.

(5) Remove the tray fitting from the DVD mechanism assembly in the direction of the arrow. (See Fig.13.)

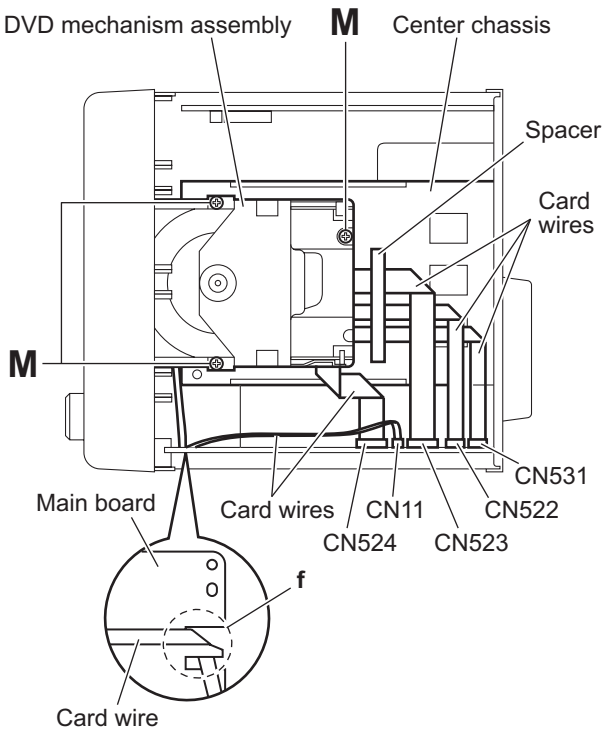

Fig.12

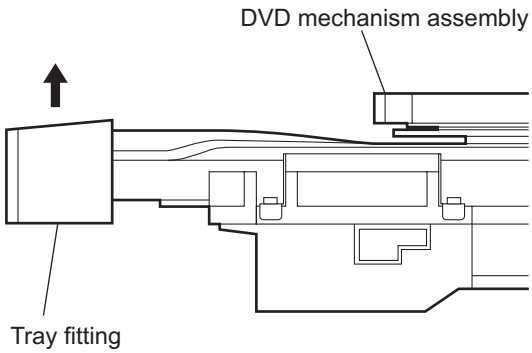

Fig.13

3.1.7 Removing the main board (See Figs.14 and 15)

- Prior to performing the following procedures, remove the metal cover, tuner, video board and rear panel.

(1) From the right side of the main body, remove the screw **N** attaching the earth wires on the reverse side of the main board. (See Fig.14.)

Reference:
After attaching the earth wires, fix them with a spacer as before. (See Fig.14.)

(2) Remove the plastic rivet attaching the main board. (See Fig.14.)

(3) From the inside of the main body, disconnect the card wires from the connectors (CN11, CN303, CN522, CN523, CN524, CN860, CN880) on the forward side of the main board. (See Figs.14 and 15.)

Reference:
When reassembling, pass the card wire through the section **f** of the main board before connecting the card wire to the connector CN11. (See Figs.14 and 15.)

(4) Disconnect the wire from the connector CN454 on the forward side of the main board. (See Figs.14 and 15.) **[UW version only]**

(5) Remove the wire clamp fixing the wires and disconnect the wires from the connector (CN301, CN302) on the forward side of the main board. (See Fig.15.)

Reference:
After connecting the wires to the connectors, fix the wires with the wire clamp as before. (See Fig.15.)

(6) Disconnect the parallel wire from the connectors (CN217, CN218, CN219) on the main board. (See Fig.15.)

(7) Release the lock **g** of the connector CN216 on the main board in the direction of the arrow 1 and disconnect the main board from the connector CN206 on the speaker terminal board toward this side. (See Fig.14.)

Note:
When releasing the lock **g** of the connector CN216, take care not to break the lock. (See Fig.14.)

(8) Release the lock **h** of the connector CN201 on the primary board in the direction of the arrow 2 and disconnect the connector CN211 on the main board from the connector CN201 in the direction of the arrow 3. (See Fig.14.)

Note:
When releasing the lock **h** of the connector CN201, take care not to break the lock. (See Fig.14.)

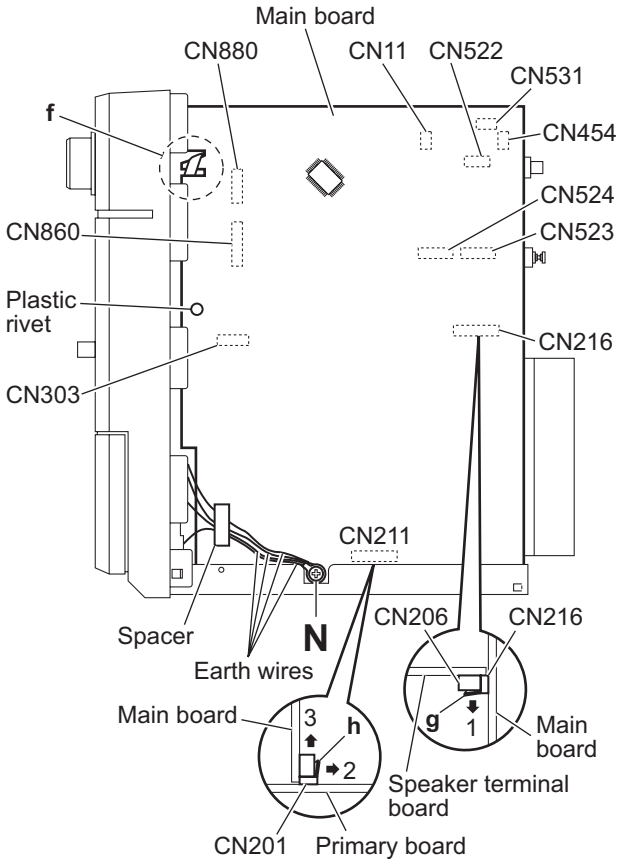

Fig.14

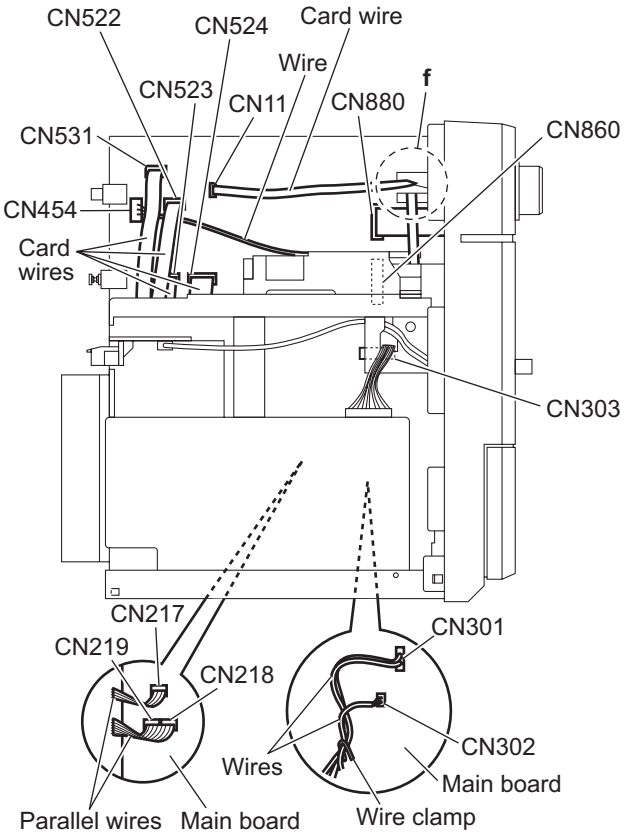

Fig.15

3.1.8 Removing the center chassis assembly (See Fig.16)

- Prior to performing the following procedures, remove the metal cover, tuner, video board and rear panel.
  (1) From the top side of the main body, disconnect the card wires from the connectors (CN11, CN522, CN523, CN524) on the main board.

  Reference:

  When reassembly, pass the card wire through the section **f** of the main board before connecting the card wire to the connector CN11.
  (2) Disconnect the wire from the connector CN105 on the speaker terminal board.
  (3) Remove the two screws **P** attaching the center chassis assembly.
  (4) Take out the center chassis assembly from the main body.

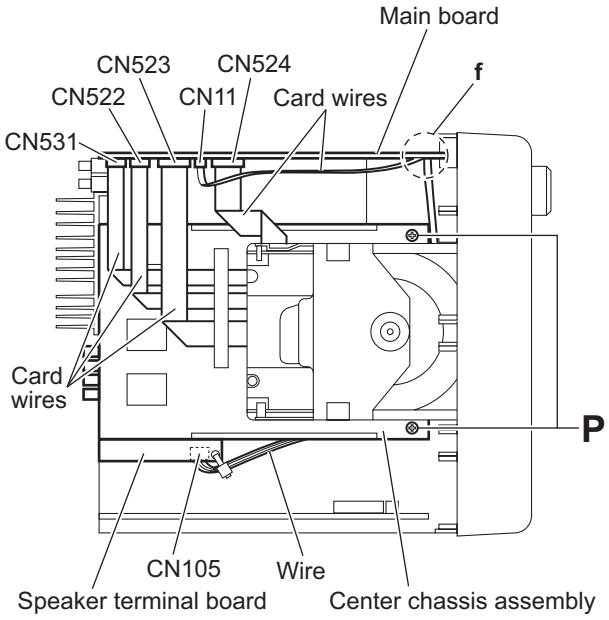

Fig.16

3.1.9 Removing the fan (See Fig.17)

- Prior to performing the following procedure, remove the metal cover, tuner, video board, rear panel and center chassis assembly.
  From the bottom side of the center chassis assembly, remove the two screws **Q** attaching the fan.

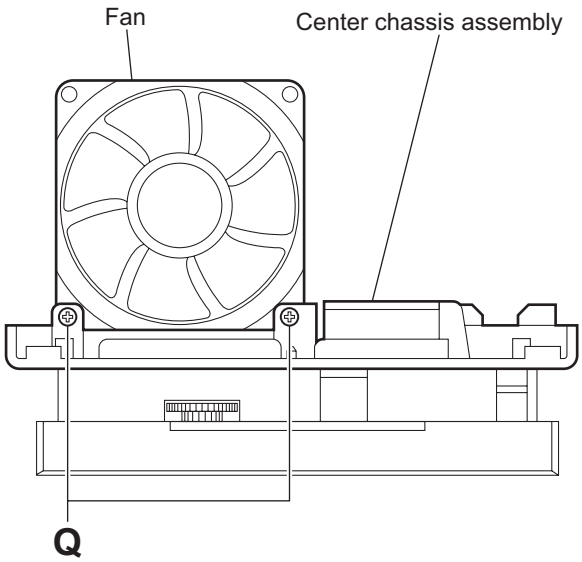

Fig.17

3.1.10 Removing the transformer board
(See Fig.18)

- Prior to performing the following procedure, remove the metal cover, tuner, video board, rear panel and center chassis assembly.
  (1) From the top side of the main body, disconnect the wire and power cord from the connectors (CN119, CN250) on the transformer board.
  (2) Disconnect the parallel wire from the connector CN101 on the transformer board.
  (3) Remove the four screws **R** attaching the transformer board and take out the transformer board from the main body.

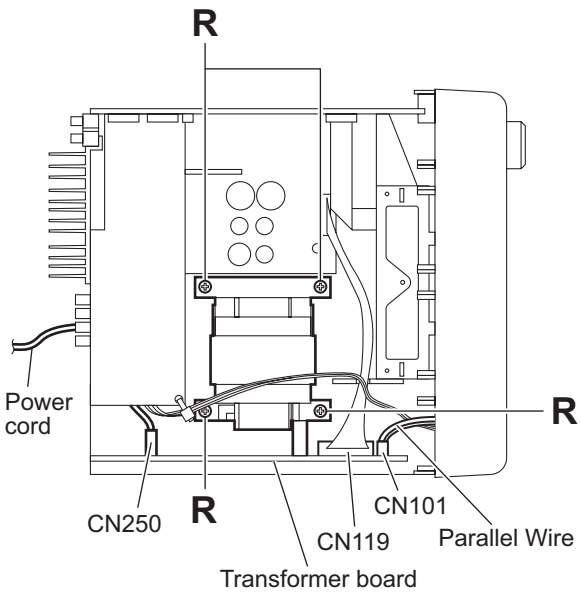

Fig.18

3.1.11 Removing the speaker terminal board
(See Fig.19.)

- Prior to performing the following procedure, remove the metal cover, tuner, video board, rear panel, main board and center chassis assembly.
  (1) From the top side of the main body, remove the tie band fixing the parallel wire.

  Reference:
  After connecting the parallel wire, fix it with the new tie band.
  (2) Disconnect the parallel wire from the connector CN106 on the speaker terminal board.
  (3) Release the locks (**i**, **j**) of the connectors (CN205, CN214) and disconnect the speaker terminal board in an upward direction.

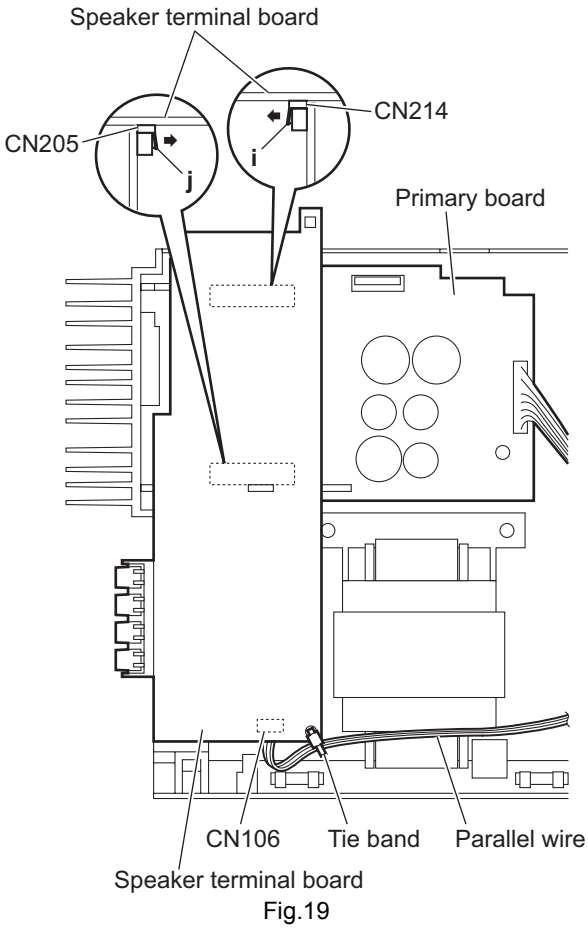

Fig.19

3.1.12 Removing the regulator & surround amplifier board and main & subwoofer amplifier board (See Figs.20 and 21)

- Prior to performing the following procedure, remove the metal cover, tuner, video board, rear panel, main board, center chassis assembly and speaker terminal board.
  (1) From the top side of the main body, disconnect the regulator & surround amplifier and main & subwoofer amplifier boards in an upward direction while releasing the locks (**k**, **m**) of the connectors (CN202, CN203) on the primary board. (See Fig.20.)
  (2) Take out the regulator & surround amplifier and main & subwoofer amplifier boards at the same time from the main body.
  (3) Remove the two screws **S** attaching the leaf spring to the heat sink.
  (4) Remove the two screws **T** attaching the regulator & surround amplifier board and remove the regulator & surround amplifier board from the heat sink. (See Fig.21.)
  (5) Remove the four screws **U** attaching the main & subwoofer amplifier board to the heat sink. (See Fig.21.)

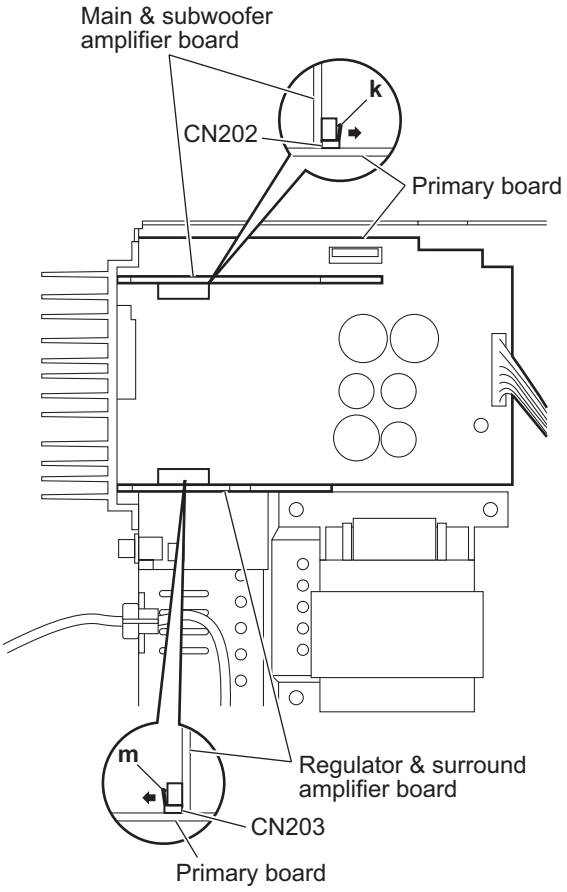

Fig.20

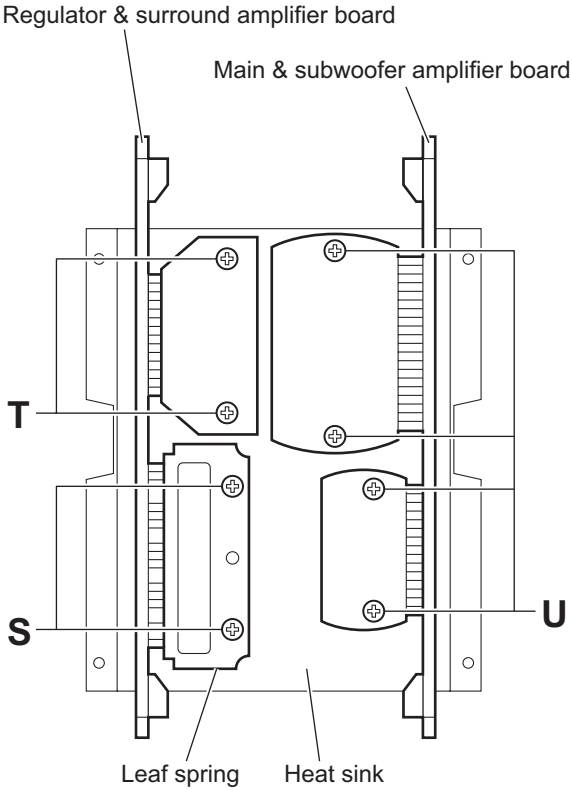

Fig.21

3.1.13 Removing the primary board
(See Fig.22)

- Prior to performing the following procedure, remove the metal cover, tuner, video board, rear panel, main board, center chassis assembly, speaker terminal board and regulator & surround amplifier board and main & subwoofer amplifier board.
  (1) From the top side of the main body, disconnect the wire from the connector CN119 on the transformer board.

  Reference:

  Pass the wire through the slot **n** of the holder board before connecting the wire to the connector CN119.
  (2) Remove the screw **V** attaching the primary board on the bottom chassis.
  (3) Remove the section **p** of the primary board and take out the primary board from the main body.

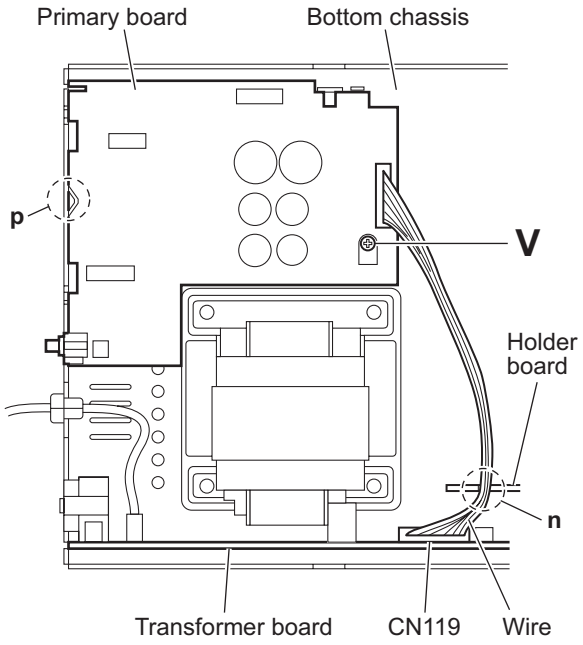

Fig.22

3.1.14 Removing the FL board (See Figs.23 and 24)

- Prior to performing the following procedures, remove the metal cover and front panel assembly.
  (1) From the front side of the front panel assembly, pull the volume knob out of the front panel assembly. (See Fig.23.)
  (2) From the inside of the front panel assembly, remove the six screws **W** attaching the FL board. (See Fig.24.)
  (3) Release the claws **q** in the direction of the arrow and take out the FL board from the front panel assembly. (See Fig.24.)

3.1.15 Removing the switch board (See Figs.23 to 25)

- Prior to performing the following procedures, remove the metal cover and front panel assembly.
  (1) From the front side of the front panel assembly, pull the microphone knob out of the front panel assembly. (See Fig.23.) **[US/UX/UN version only]**
  (2) From the inside of the front panel assembly, remove the three screws **X** and screw **X'** attaching the stay bracket. (See Fig.24.)

  Reference:
  When attaching the screw **X'**, attach the earth wire with it.
  (3) Remove the ten screws **Y** and screw **Y'** attaching the switch board. (See Fig.25.)

  Reference:
  When attaching the screw **Y'**, attach the wire holder with it.
  (4) Take out the switch board from the front panel assembly.

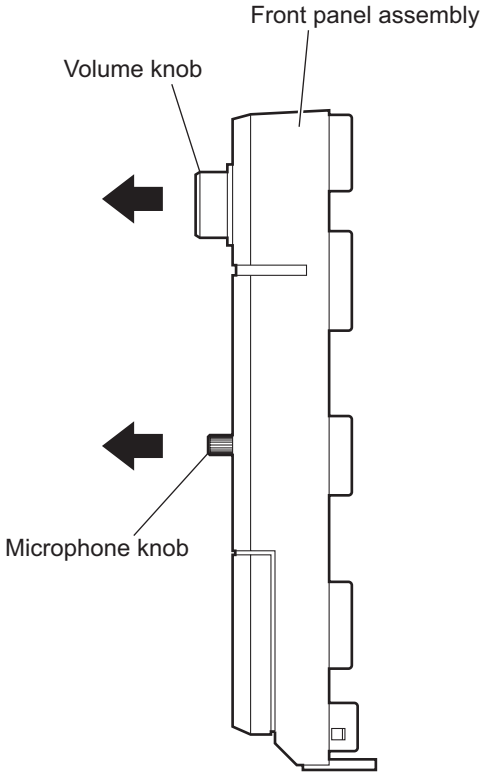

Fig.23

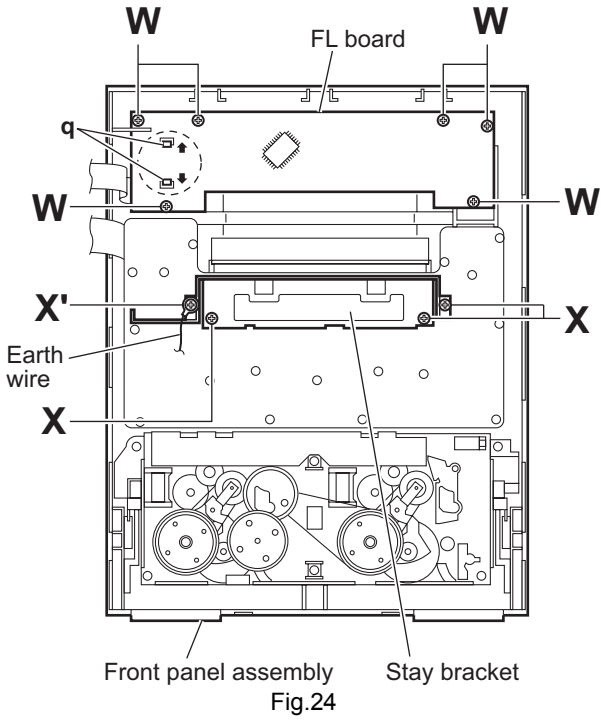

Fig.24

3.1.16 Removing the cassette mechanism assembly (See Fig.25)

- Prior to performing the following procedures, remove the metal cover and front panel assembly.
  (1) From the inside of the front panel assembly, remove the five screws **Z**, screw **Z'** attaching the cassette mechanism assembly.
  (2) Take out the cassette mechanism assembly from the front panel assembly.

Reference:

- When attaching the screw **Y'**, attach the earth wire with it.
- When attaching the screws **Z**, attach the swing cam (L)/(R) with them.

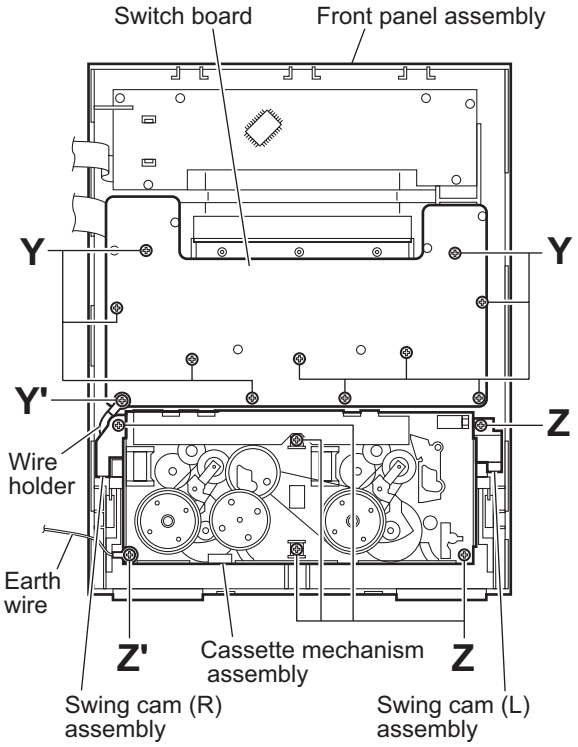

Fig.25

3.2 DVD mechanism section

- Prior to performing the following procedures, remove the DVD mechanism assembly from the main body. (See “3.1.6 Removing the DVD mechanism assembly”.)

3.2.1 Removing the tray assembly (See Figs.1 to 3)

(1) From the right side of the DVD mechanism assembly, push the slide cam and pull the tray assembly out of the DVD mechanism assembly in the direction of the arrow. (See Fig.1.)
(2) From the top side of the DVD mechanism assembly, remove the two screws **A** attaching the leaf spring to the bushing and remove the leaf spring. (See Fig.2.)
(3) Remove the bushing of the tray assembly from the projection **a** on the DVD mechanism assembly and move the tray assembly in the direction of the arrow. (See Fig.3.)
(4) Remove the claw **b** of the tray assembly from the DVD mechanism assembly and take out the tray assembly. (See Fig.3.)

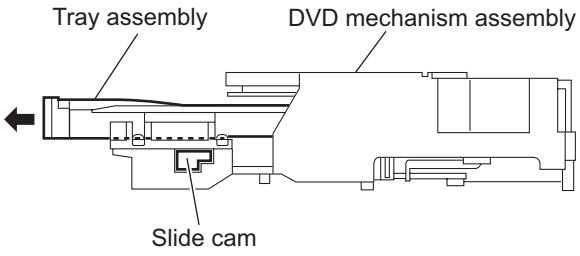

Fig.1

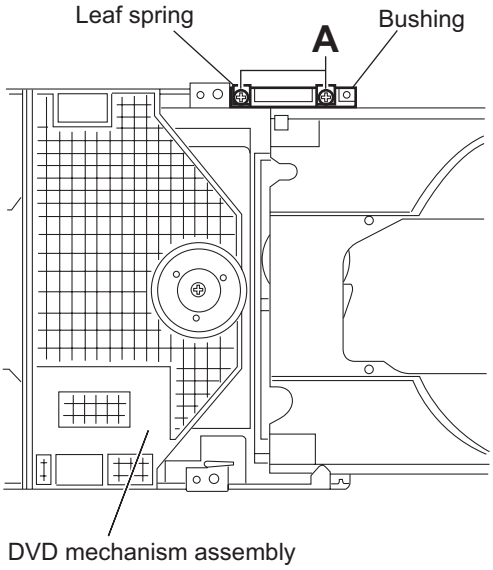

Fig.2

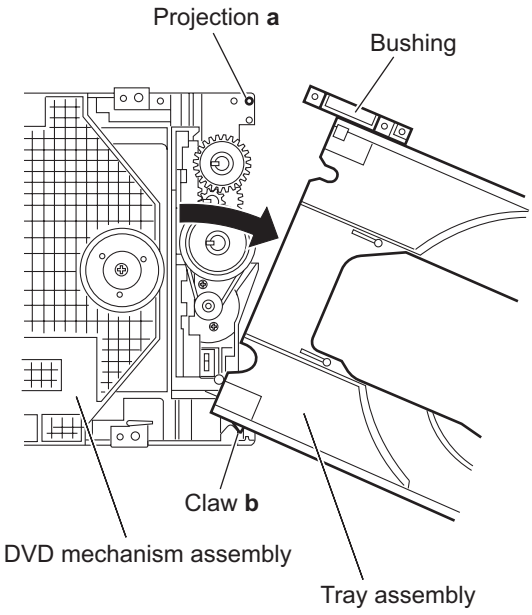

Fig.3

3.2.2 Removing the traverse mechanism assembly (See Figs.4)

From the bottom side of the DVD mechanism assembly, remove the three screws **B** and screw **B'** attaching the traverse mechanism assembly and take out the DVD traverse mechanism assembly with the DVD servo board.

Reference:

When attaching the screw **B'**, attach the washer with it.

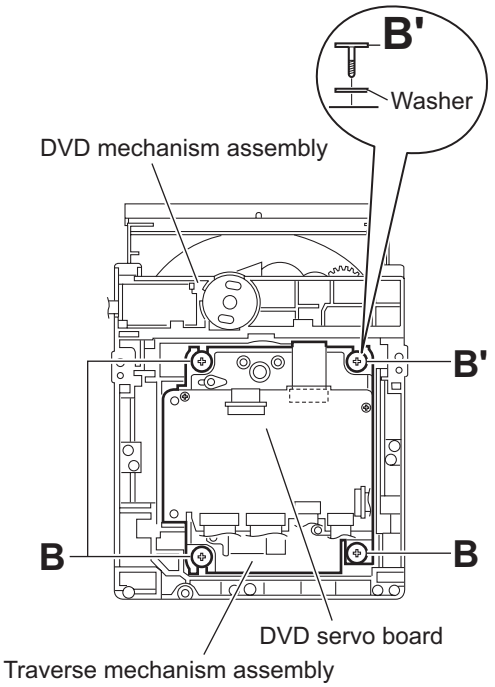

Fig.4

3.2.3 Removing the DVD servo board (See Figs.5 and 6)

- Prior to performing the following procedures, remove the traverse mechanism assembly.

(1) From the side of the traverse mechanism assembly, solder the short land sections **c** on the pickup. (See Fig.5.)

(2) From the bottom side of the traverse mechanism assembly, release the lock of the connector CN101 on the DVD servo board in the direction of the arrow 1 and disconnect the card wire. (See Fig.6.)

Caution:

- Solder the short land sections **c** on the pickup before disconnecting the card wire from the connector CN101 on the DVD servo board. If the card wire is disconnected without attaching solder, the pickup may be destroyed by static electricity. (See Figs.5 and 6.)
- When attaching the DVD servo board, be sure to remove solders from the short land sections **c** after connecting the card wire to the connector CN101 on the DVD servo board. (See Figs.5 and 6.)

(3) Disconnect the card wire from the connector CN201 on the DVD servo board. (See Fig.6.)

(4) Remove the two screws **C** attaching the DVD servo board. (See Fig.6.)

(5) Remove the DVD servo board from the engagement section **d** in an upward and remove the engagement section **f** in the direction 3 while removing the engagement section **e** in the direction of the arrow 2. (See Fig.6.)

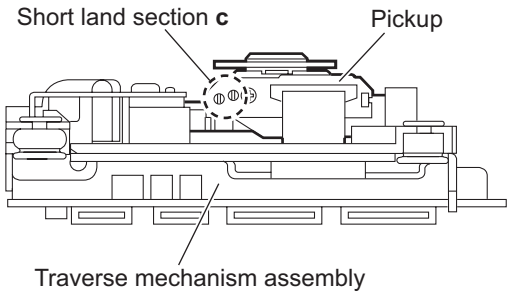

Fig.5

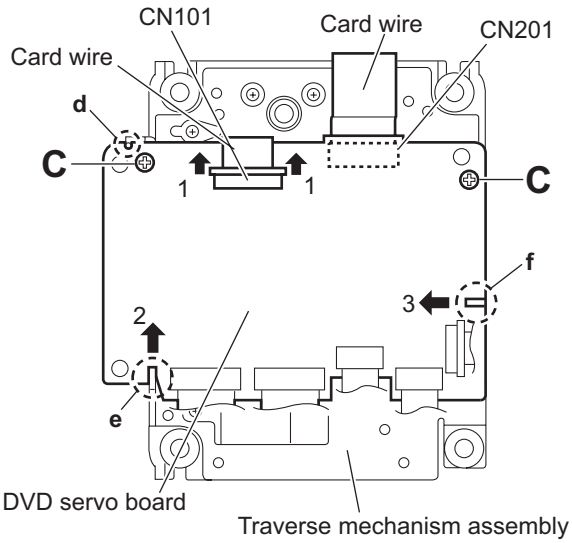

Fig.6

3.2.4 Removing the pickup (See Figs.5, 7 to 9)

- Prior to performing the following procedures, remove the traverse mechanism assembly.
  (1) From the side of the traverse mechanism assembly, solder the short land sections **c** on the pickup. (See Fig.5.)
  (2) Release the lock of the connector on the pickup in the direction of the arrow and disconnect the card wire. (See Fig.7.)

  Caution:
  - Solder the short land sections **c** on the pickup before disconnecting the card wire from the connector on the pickup. If the card wire is disconnected without attaching solder, the pickup may be destroyed by static electricity. (See Figs.5 and 7.)
  - When attaching the pickup, be sure to remove solders from the short land sections **c** after connecting the card wire to the connector on the pickup. (See Figs.5 and 7.)

  (3) Remove the screw **D** attaching the plate and thrust spring. (See Fig.7.)
  (4) Remove the engagement section **g** attaching the plate to the feed holder and remove the plate with the thrust spring. (See Fig.7.)
  (5) Remove the shaft of the pickup from the section **h** on the traverse mechanism assembly and remove the shaft from the section **i** while moving it in the direction of the arrow. (See Fig.8.)
  (6) Remove the pickup from the section **j** of the traverse mechanism assembly and take out the pickup with the shaft. (See fig.8.)
  (7) From the bottom side of the pickup, remove the two screws **E** attaching the SW actuator and LEAD spring. (See Fig.9.)
  (8) Pull the shaft out of the pickup. (See Fig.9.)

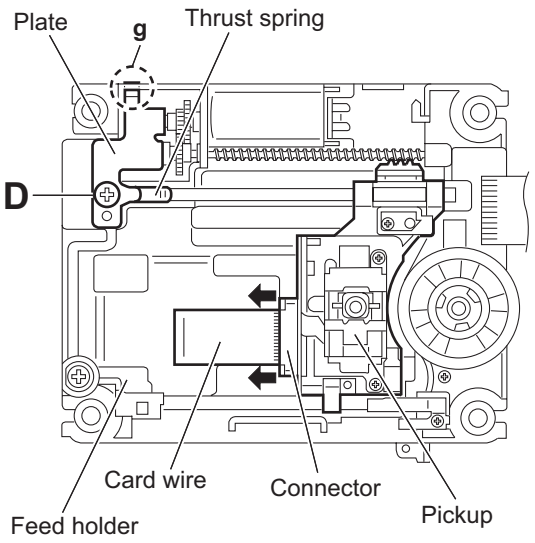

Fig.7

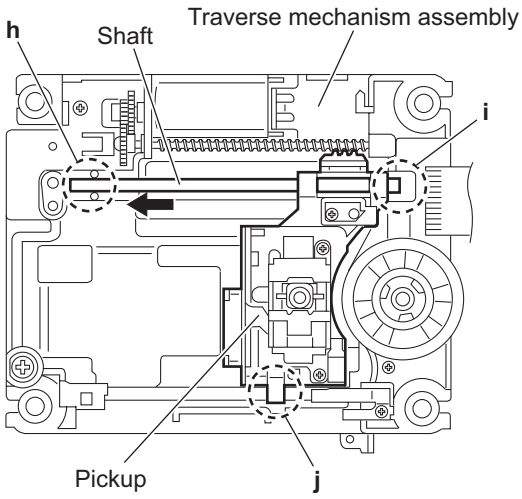

Fig.8

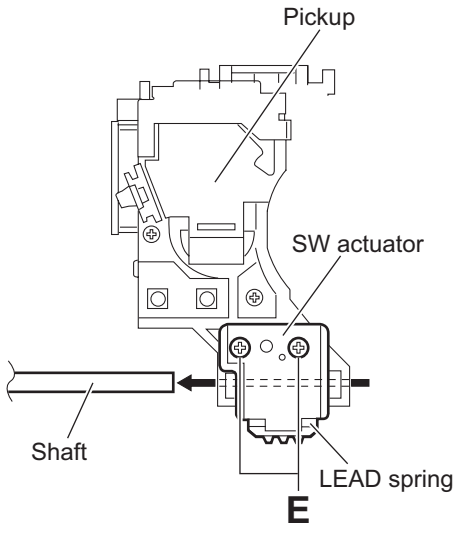

Fig.9

3.2.5 Attaching the pickup (See Figs.5, 7 to 10)

- See “3.2.4 Removing the pickup”.
  (1) Attach the shaft, SW actuator and LEAD spring to the pick-up. (See Fig.9.)
  (2) Align the pickup to the section **j** of the traverse mechanism assembly first, and set the both ends of the shaft of the pickup in the sections **g** and **i** of the traverse mechanism assembly. (See Fig.8.)
  (3) Attach the plate and thrust spring. (See Fig.7.)
  (4) Remove solders from the short land sections **c** after connecting the card wire to the connector on the pickup. (See Figs.5 and 7.)
  (5) Turn the feed gear M in the direction of the arrow 1 to move the pickup in the direction of the arrow 2. (See Fig.10.)

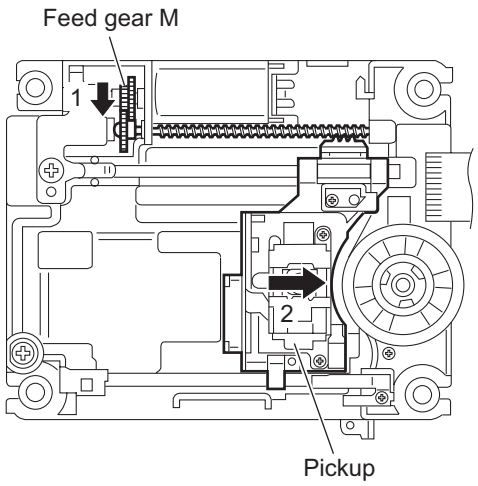

Fig.10

3.2.6 Removing the feed motor (See Figs.7, 11 and 12)

- Prior to performing the following procedures, remove the traverse mechanism assembly.
  (1) From the top side of the traverse mechanism assembly, remove the screw **D** attaching the plate and thrust spring. (See Fig.7.)
  (2) Remove the engagement section **g** attaching the plate to the feed holder and remove the plate with the thrust spring. (See Fig.7.)
  (3) Remove the wires from the soldered section **k** on the spindle motor board. (See Fig.11.)

  Reference:

  When attaching the feed motor, pass the wire through the section **m** on the spindle base. (See Fig.11.)
  (4) Remove the feed holder, feed motor, lead screw, feed gear E and feed gear M at the same time after removing the two screws **F** attaching the feed holder. (See Fig.11.)
  (5) From the side of the feed holder, remove the two screws **G** attaching the feed motor. (See Fig.12.)

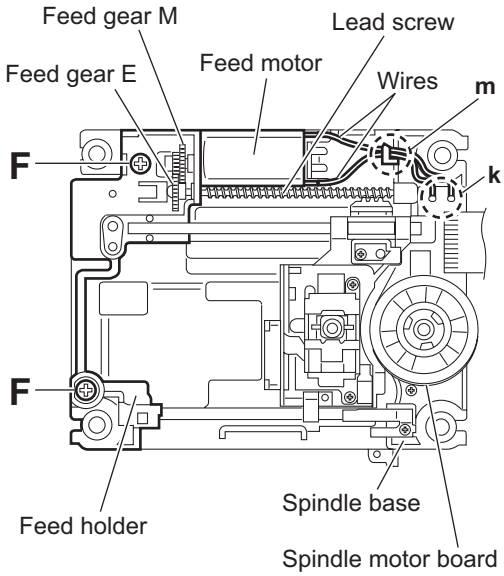

Fig.11

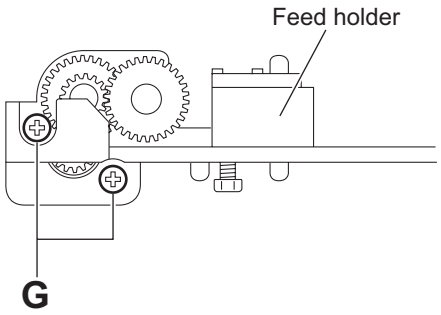

Fig.12

3.2.7 Removing the spindle motor board (See Figs.11 and 13)

- Prior to performing the following procedures, remove the traverse mechanism assembly and DVD servo board.
  (1) From the top side of the traverse mechanism assembly, remove the wires from the soldered section **k** on the spindle motor board. (See Fig.11.)
  (2) From the bottom side of the traverse mechanism assembly, remove the three screws **H** attaching the spindle motor board. (See Fig.13.)

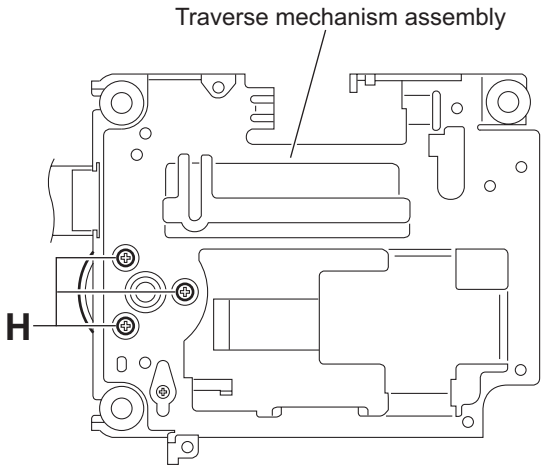

Fig.13

3.2.8 Removing the switch board (See Fig.14.)

(1) From the bottom side of the DVD mechanism assembly, remove the wires from the soldered section **n** on the switch board.
(2) Lift the switch board while pressing the claw **p** of the DVD mechanism assembly in the direction of the arrow and remove it from the section **q**.

Reference:

- Put the wires on the section **r** after attaching the switch board to the DVD mechanism assembly.
- Fix the claw **p** on the DVD mechanism assembly with bonds after attaching the switch board.

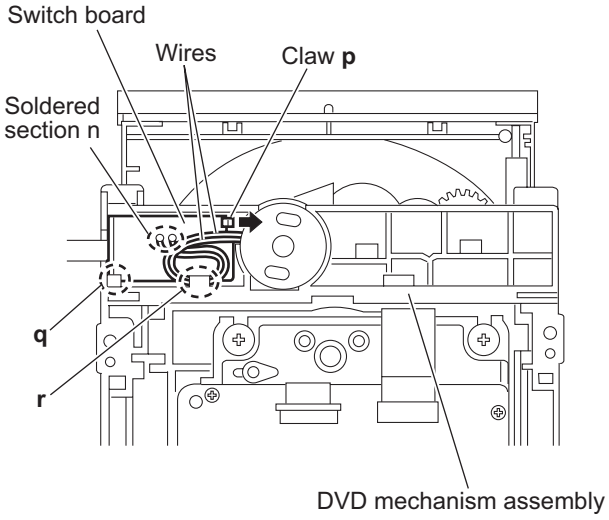

Fig.14

3.2.9 Removing the motor (See Figs.14 and 15)

- Prior to performing the following procedures, remove the tray assembly.
  (1) From the bottom side of the DVD mechanism assembly, remove the wires from the soldered section **n** on the switch board. (See.Fig.14.)
  (2) From the top side of the DVD mechanism assembly, remove the belt from the motor pulley. (See Fig.15.)

  Note:
  Take care not to attach grease on the belt.
  (3) Remove the two screws **J** attaching the motor to the DVD mechanism assembly and take out the motor from the bottom side of the DVD mechanism assembly. (See Fig.15.)

Reference:

Put the wires on the section **r** after attaching the motor to the DVD mechanism assembly. (See Fig.14.)

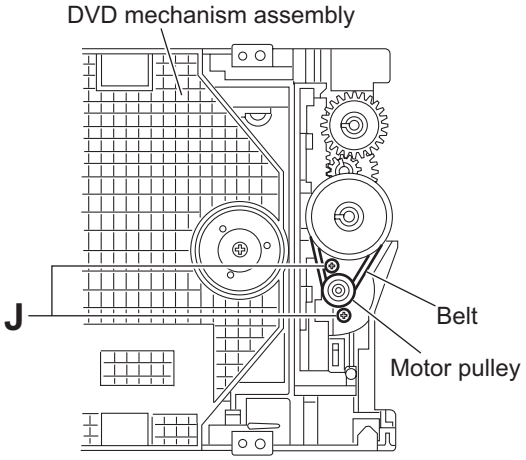

Fig.15

3.3 Cassette mechanism assembly section

- Prior to performing the following procedures, remove the cassette mechanism assembly. (See "3.1.16 Removing the cassette mechanism assembly".)

3.3.1 Removing the main motor and replacing the main belts (See Figs.1 and 2)

(1) From the front side of the cassette mechanism assembly, remove the two screws **A** attaching the main motor. (See Fig.1.)

(2) From the back side of the cassette mechanism assembly, remove the wires from the soldered sections **a** on the switch board. (See Fig.2.)

Caution:
After reassembling, check the direction of the main motor and polarity of the wires. (See Fig.2.)

(3) Remove the main motor and main belts. (See Fig.2.)

Note:
When attaching the main belts, take care not to attach grease on the main belts.

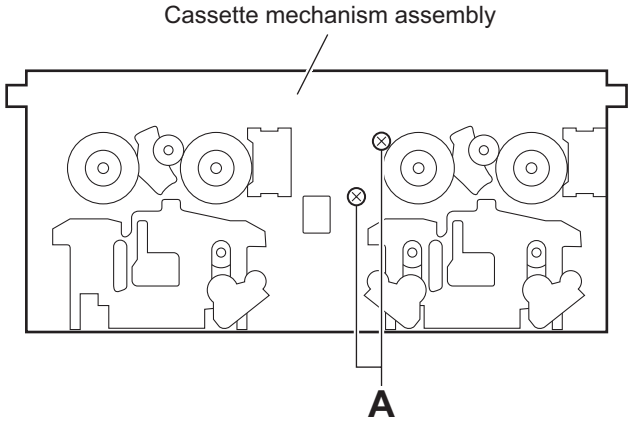

Fig.1

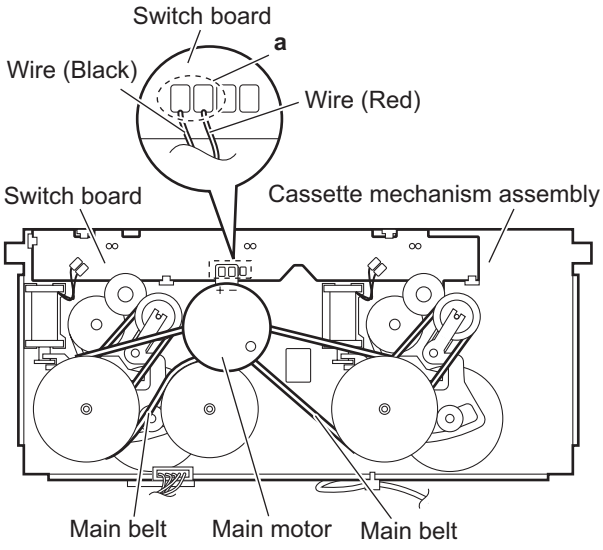

Fig.2

3.3.2 Replacing the F/R belts (See Fig.3)

- Prior to performing the following procedures, remove the main motor and main belts.
- Remove the wires of the main motor as required.
  From the back side of the cassette mechanism assembly, remove the F/R belts from the flywheel 1 and flywheel 2.

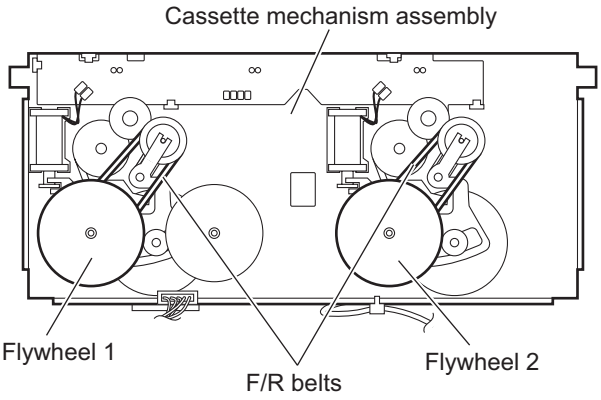

Fig.3

3.3.3 Removing the clutch assemblies (See Figs.4 to 7)

- Prior to performing the following procedures, remove the main motor, main belts and F/R belts.
- Remove the wires of the main motor as required.

(1) From the front side of the cassette mechanism assembly, remove the three slit washers attaching the flywheel 1, flywheel 2 and flywheel 3. (See Fig.4.)
(2) From the back side of the cassette mechanism assembly, pull out the flywheel 1, flywheel 2 and flywheel 3. (See Fig.5.)
(3) Remove the stoppers in an upward direction. (See Fig.5.)
(4) Remove the springs from the sections **b**. (See Fig.6.)
(5) Release the claws **c** in the direction of the arrow, remove the plates and pulleys. (See Fig.6.)
(6) Release the claws **d** in the direction of the arrow, remove the guide arms. (See Fig.7.)

Note:
When attaching the guide arms, attach the springs with them as before. (See Fig.7.)

(7) Remove the cam gears in an upward direction. (See Fig.7.)
(8) Take out the clutch assemblies from the cassette mechanism assembly. (See Fig.7.)

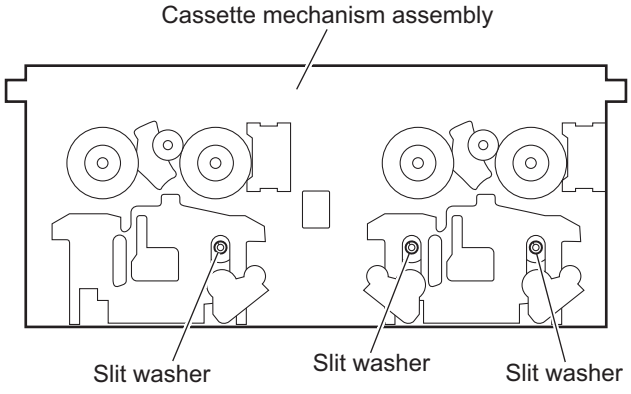

Fig.4

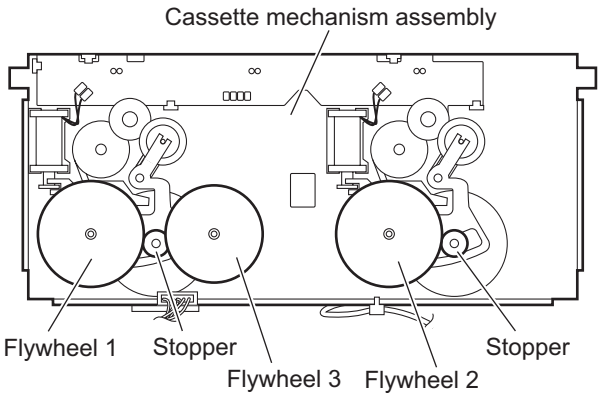

Fig.5

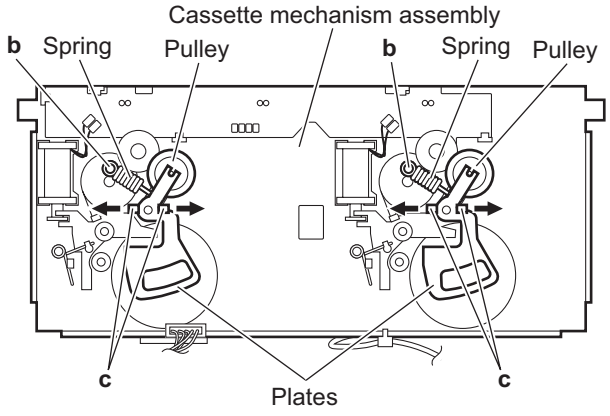

Fig.6

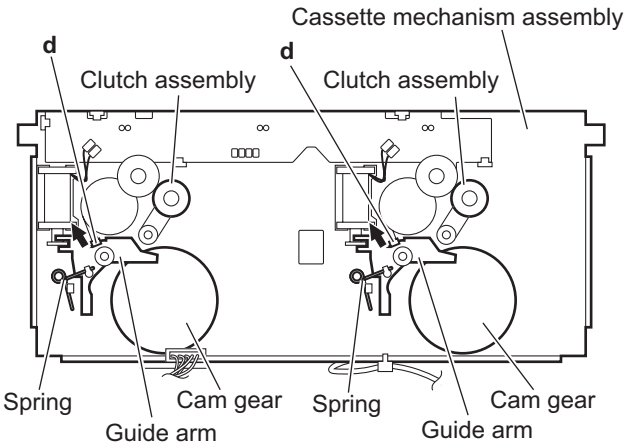

Fig.7

3.3.4 Removing the leaf switches (See Fig.8)

(1) From the back side of the cassette mechanism assembly, remove the solders from the soldered sections **e** attaching the leaf switches on the switch board.
(2) From the front side of the cassette mechanism assembly, pull out the leaf switches.

3.3.5 Removing the switch board (See Fig.8)

(1) From the back side of the cassette mechanism assembly, remove the solders from the soldered sections (**f**, **g**) connecting the wires.

Note:
After reassembling, check the polarity of the wires.

(2) Release the claws **h** in the direction of the arrow and remove the switch board from the cassette mechanism assembly.

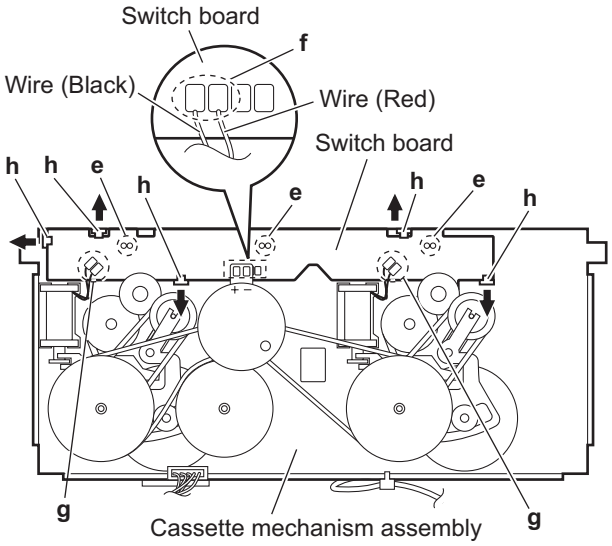

Fig.8

3.3.6 Removing the PB head block (See Fig.9)

(1) From the bottom side of the cassette mechanism assembly, remove the tie band fixing the wire.

Reference:
After reassembling, fix the wire with a new tie band as before.

(2) From the front side of the cassette mechanism assembly, release the claw **i** in the direction of the arrow **1** and pull out the pinch roller in an upward direction.
(3) Remove the screw **B** attaching the PB head.
(4) Remove the spring from the section **j**.
(5) Move the PB head block in the direction of the arrow **2** and remove the hooks k from the PB head block.
(6) Take out the PB head block from the cassette mechanism assembly.

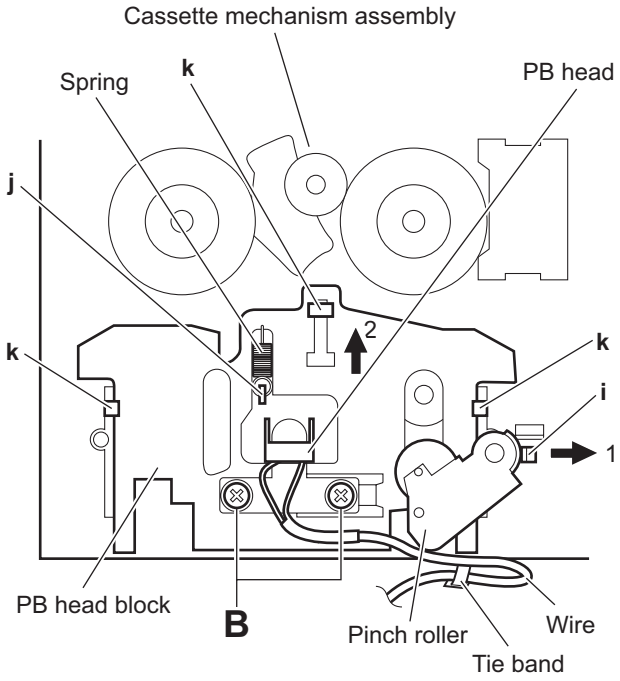

Fig.9

3.3.7 Removing the R/P head block (See Fig.10)

(1) From the front side of the cassette mechanism assembly, release the claw **m** in the direction of the arrow **1** and pull out the pinch roller **L** in an upward direction.
(2) Release the claw **n** in the direction of the arrow **2** and pull out the pinch roller **R** in an upward direction.
(3) From the bottom side of the cassette mechanism assembly, remove the screw **C** attaching the R/P head board.
(4) From the front side of the cassette mechanism assembly, remove the two screws **D** attaching the R/P head.
(5) Take out the R/P head block (R/P head and R/P head board) from the cassette mechanism assembly.

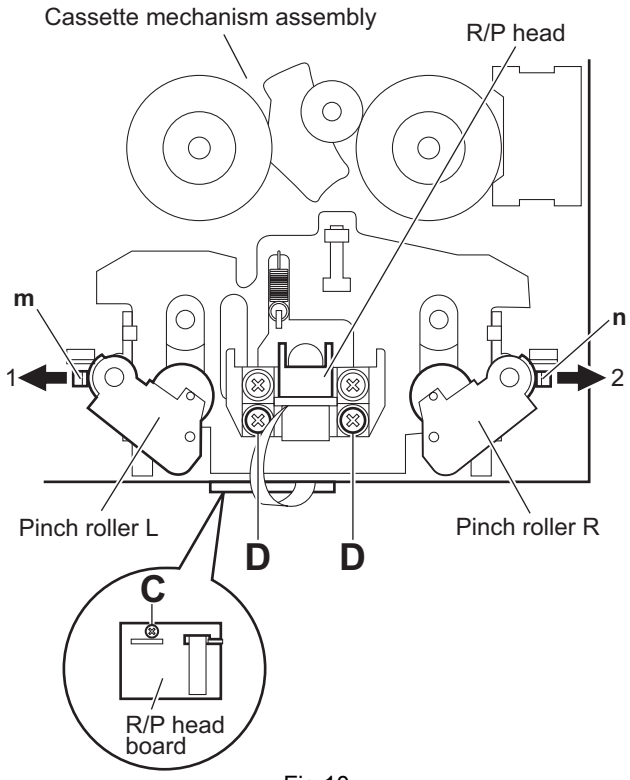

Fig.10

3.4 Subwoofer section

3.4.1 Removing the net assembly (See Fig.1)

(1) From the front side of the subwoofer main body, remove the sections **a** of the net assembly toward this side.

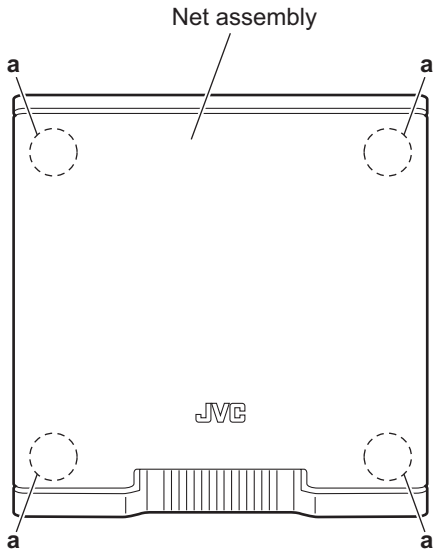

Fig.1

3.4.2 Removing the front panel assembly (See Figs.2 and 3)

- Remove the net assembly as required.

(1) Insert the tip of a flat-bladed screwdriver or similar tool into the sections **b** between the subwoofer main body and front panel assembly, and lift the front panel assembly little by little to remove the sections **c**. (See Figs.2 and 3.)

Note:

To prevent damaging the front panel assembly and subwoofer main body, insert cushioning plates etc. into the space between the subwoofer main body and front panel assembly. (See Fig.3.)

(2) Remove the front panel assembly from the subwoofer main body.

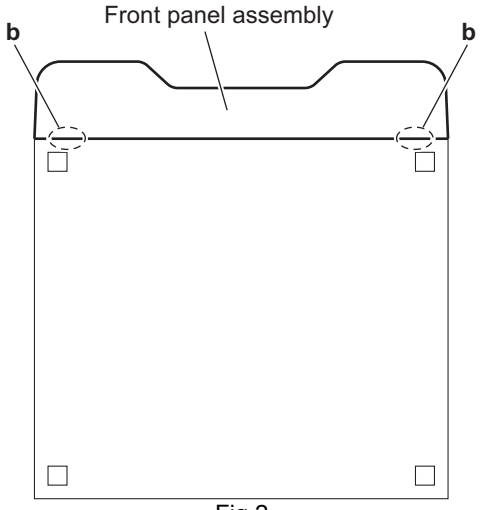

Fig.2

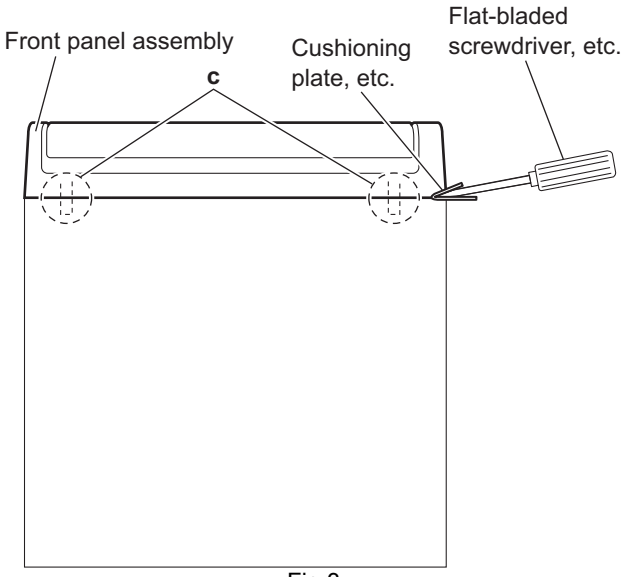

Fig.3

3.4.3 Removing the front woofer (See Figs.4 and 5)

- Prior to performing the following procedures, remove the front panel assembly.
  (1) From the front side of the subwoofer main body, remove the four screws **A** attaching the front woofer. (See Fig.4.)
  (2) Take out the front woofer from the subwoofer main body and disconnect the wires (red and black wires) from the terminal of the front woofer. (See Fig.5.)

3.4.4 Removing the rear woofer (See Figs.5 and 6)

(1) From the back side of the subwoofer main body, remove the four screws **B** attaching the rear woofer and woofer grille. (See Fig.6.)
(2) Take out the rear woofer from the subwoofer main body and disconnect the wires (red and black wires) from the terminal of the rear woofer. (See Fig.5.)

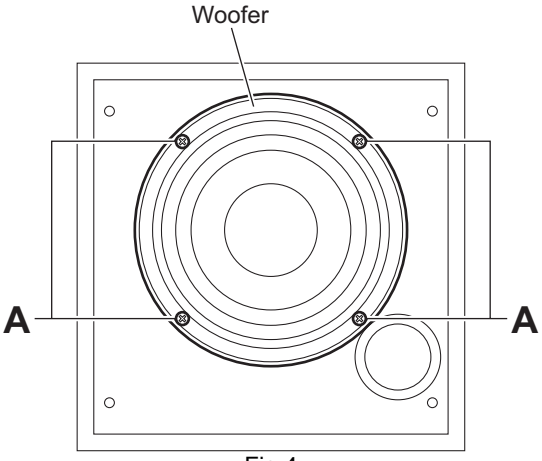

Fig.4

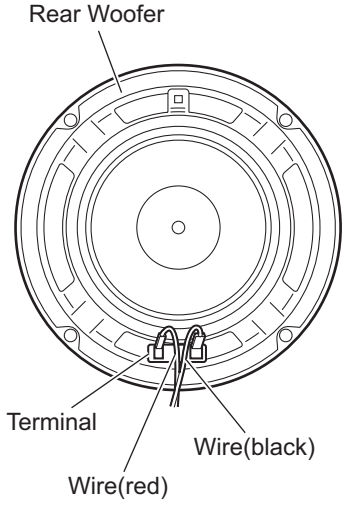

Fig.5

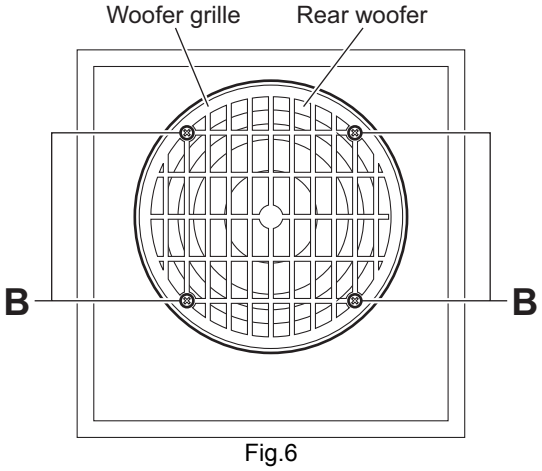

Fig.6

3.5 Front speaker section

3.5.1 Removing the net assembly (See Fig.1)

From the front side of the front speaker main body, remove the sections **a** of the net assembly toward this side.

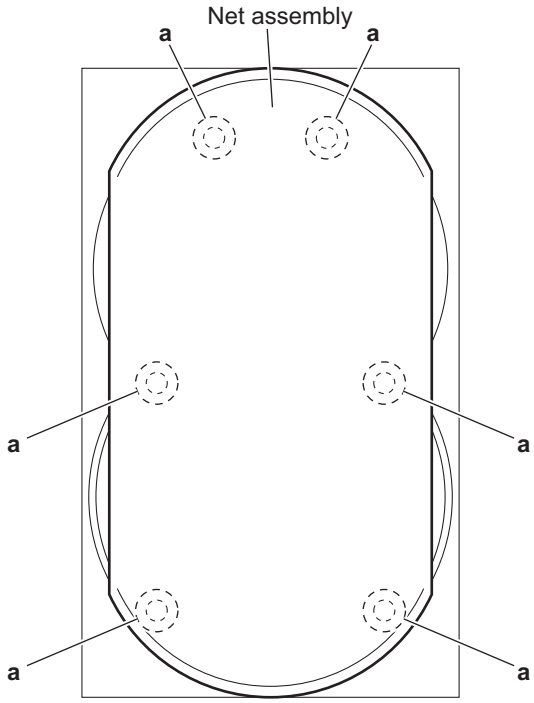

Fig.1

3.5.2 Removing the front panel assembly (See Figs.2 and 3)

- Remove the net assembly as required.
  (1) Insert the tip of a flat-bladed screwdriver or similar tool into the space between the front speaker main body and front panel assembly, and lift the front panel assembly little by little to remove the sections **b**. (See Fig.2.)

  Note:
  To prevent damaging the front panel assembly and front speaker main body, insert cushioning plates etc. into the space between the front speaker main body and front panel assembly. (See Fig.2.)
  (2) From the inside of the front panel assembly, disconnect the red and black wires from the terminals of the tweeter. (See Fig.3.)

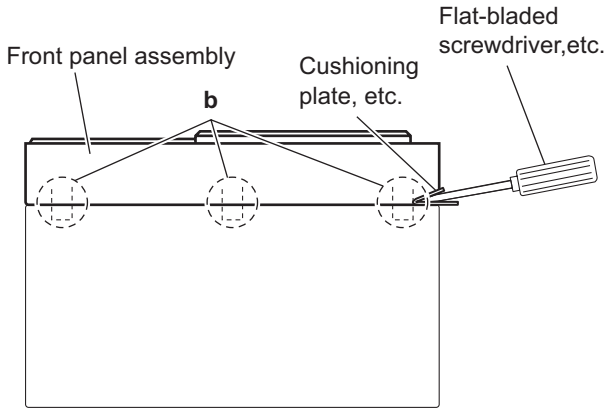

Fig.2

3.5.3 Removing the tweeter (See Fig.3)

- Prior to performing the following procedures, remove the front panel assembly.
  (1) Disconnect the wires (blue and white wires) from the terminals of the tweeter.
  (2) Remove the two screws **A** attaching the tweeter.
  (3) Take out the tweeter from the front panel assembly.

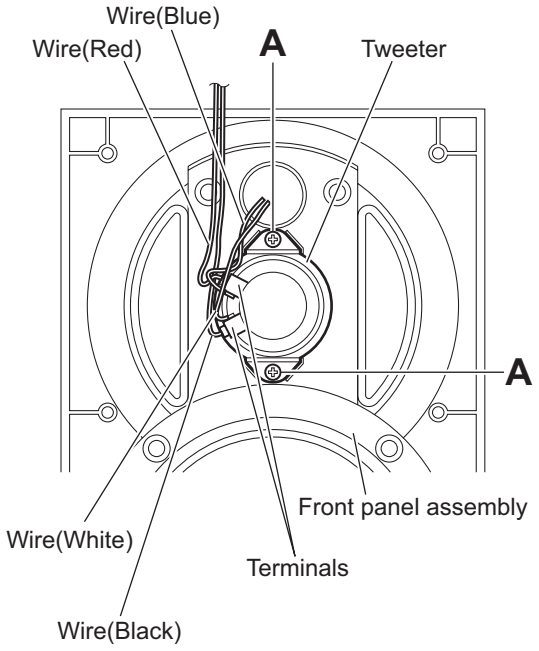

Fig.3

3.5.4 Removing the speaker (See Figs.4 and 5)

- Prior to performing the following procedures, remove the front panel assembly.
  (1) From the front side of the front speaker main body, remove the four screws **B** attaching the speaker. (See Fig.4.)
  (2) Take out the speaker from the front speaker main body and disconnect the wires (red/black and yellow/black wires) from the terminal of the speaker. (See Fig.5.)

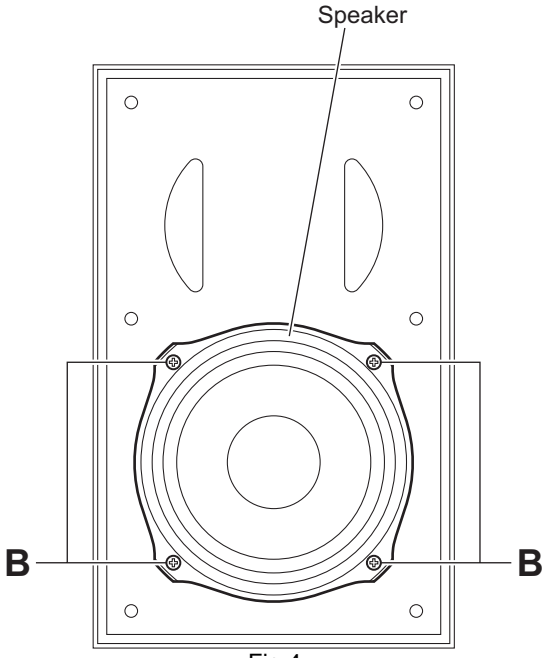

Fig.4

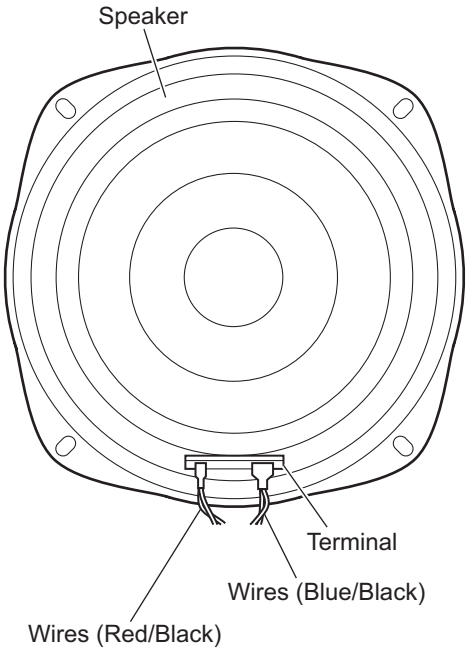

Fig.5

3.6 Surround speaker section

3.6.1 Removing the net assembly (See Fig.1)

From the front side of the surround speaker main body, remove the sections **a** of the net assembly toward this side.

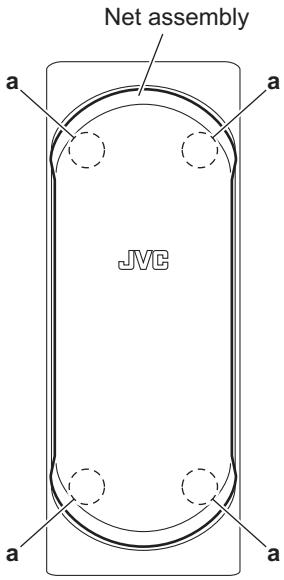

Fig.1

3.6.2 Removing the front panel assembly (See Figs.2 and 3)

- Remove the net assembly as required.
  (1) Insert the tip of a flat-bladed screwdriver or similar tool into the space between the front surround speaker main body and front panel assembly, and lift the front panel assembly little by little to remove the sections **b**. (See Fig.2.)

  Note:
  To prevent damaging the front panel assembly and surround speaker main body, insert cushioning plates etc. into the space between the surround speaker main body and front panel assembly. (See Fig.2.)
  (2) From the inside of the front panel assembly, disconnect the wire (white) from the terminal of the speaker. (See Fig.3.)

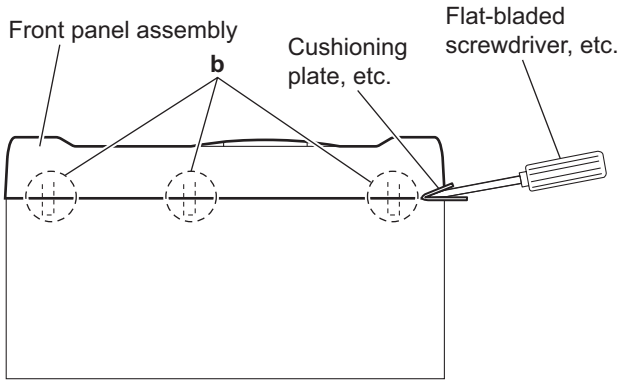

Fig.2

3.6.3 Removing the speaker (See Fig.3)

- Prior to performing the following procedures, remove the front panel assembly.
  (1) From the inside of the front panel assembly, disconnect the wire (white/red) from the terminal of the speaker.
  (2) Remove the four screws **A** attaching the speaker.
  (3) Take out the speaker from the front panel assembly.

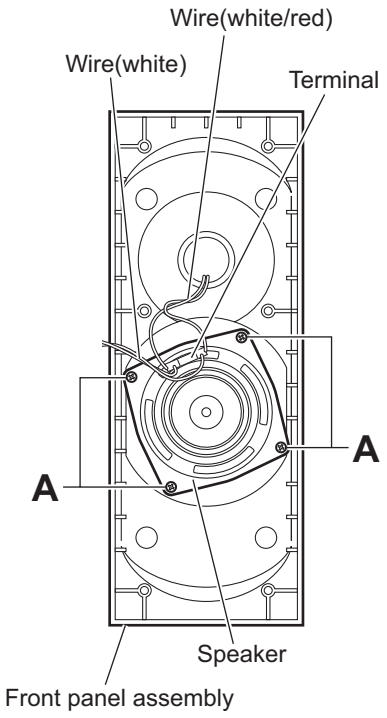

Fig.3

SECTION 4
ADJUSTMENT

4.1 Adjustment method

4.1.1 Measurement Instruments Required for Adjustment

(1) Low frequency oscillator
This oscillator should have a capacity to output 0dBs to 600Ω at an oscillation frequency of 50Hz-20kHz.
(2) Attenuator impedance : 600Ω
(3) Electronic voltmeter
(4) Distortion meter
(5) Frequency counter
(6) Wow & flutter meter
(7) Test tape
VTT703 : Head azimuth
(8) Blank tape
TYPE I : AC-514
(9) Test disc: VT-501, CTS-1000

4.1.2 Measurement conditons

Power supply voltage	AC110V / AC127V / AC220V / AC230V to AC240V 50Hz / 60Hz (Adjustable with the voltage selector)
Reference output	Speaker : 0.775V/4Ω Headphone : 0.077V/32Ω
Reference frequency and input level	1kHz, AUX : -8dBs
Measurement output terminal	at Speaker J200
Load resistance	4Ω

4.1.3 Radio Input signal

AM frequency	400Hz
AM modulation	30%
FM frequency	400Hz
FM frequency deviation	22.5kHz

4.1.4 Tuner section

FM Band cover	87.5~108.0MHz
AM Band cover	531~1,602kHz (at 9kHz) 530~1,600kHz (at 10kHz)
Voltage applied to tuner	+B : DC5.7V VT : DC 12V
Reference measurement output	26.1mV(0.28V)/3Ω
Input positions	AM : Standard loop antenna FM : TP1 (hot) and TP2 (GND)

4.1.5 Standard measurement position of volume

Function switch to Tape
Beat cut switch to Cut
Super Bass/Active hyper Bass to OFF
Bass Treble to Center
Adjustment of main volume to reference output VOL : 28

Precautions for measurement

(1) Apply 30pF and 33kΩ to the IF sweeper output side and 0.082μ F and 100kΩ in series to the sweeper input side.
(2) The IF sweeper output level should be made as low as possible within the adjustable range.
(3) Since the IF sweeper is a fixed device, there is no need to adjust this sweeper.
(4) Since a ceramic oscillator is used, there is no need to perform any MIX adjustment.
(5) Since a fixed coil is used, there is no need to adjust the FM tracking.
(6) The input and output earth systems are separated. In case of simultaneously measuring the voltage in both of the input and output systems with an electronic voltmeter for two channels, therefore, the earth should be connected particularly carefully.
(7) In the case of BTL connection amp., the minus terminal of speaker is not for earthing. Therefore, be sure not to connect any other earth terminal to this terminal. This system is of an BTL system.
(8) For connecting a dummy resistor when measuring the output, use the wire with a greater code size.
(9) Whenever any mixed tape is used, use the band pass filter (DV-12).

4.2 Arrangement of adjusting positions

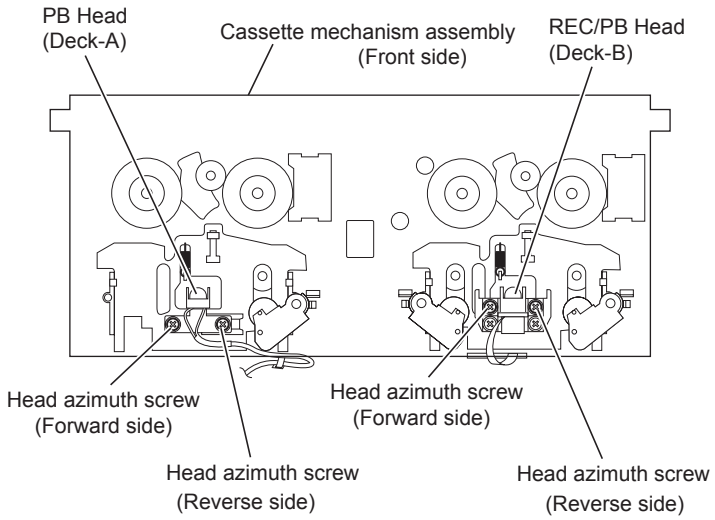

4.2.1 Tape recorder section

Item	Measurement conditions	Measurement method	Ref. value	Adjustment position
Cassette Head Azimuth Alignments	Test tape :VT703 (10kHz) Measurement output terminal :Left and Right speaker output (6Ω loaded) or Headphone Output (32Ω loaded)	(1) Playback the test tape VT703 (10KHz) or equivalent. (2) Adjust the head azimuth screw to obtain maximum output and both output of L / R is in 3dB. (3) Put on the screw lock paint after alignments.	Maximum output	Adjust the head azimuth screw only when the head has been changed.
Recording Bias Frequency Alignment	Test tape :TYPE Ⅰ AC-514 Measurement output terminal :Erase head terminal (CN308 8-Pin)	(1) Insert the recording tape in deck-B. (2) Starting the recording. (3) Adjust the oscillation frequency to 80kHz+/-3kHz by core of Oscillation coil of L301.	80kHz+/-3kHz	Use the High Impedance Probe or Frequency counter input.

4.3 Service mode

4.3.1 Confirming contents

(1) System micon reset
(2) System micon cold start
(3) FL display check
(4) Micon version check
(5) DVD region check
(6) DVD test mode

4.3.2 Confirming methods

1. System micon reset
   When DVD mechanism stuck, this may solve the problem without removing/inserting power cord.

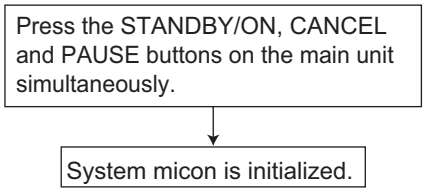

2. System micon cold start
   This function clears all user setting, and return to initial setting.

   - Daily timer, REC timer
   - Tuner preset
   - SEA preset
   - Last condition (Source, Volume)

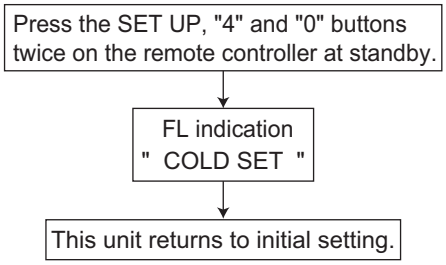
Press the SET UP, "4" and "0" buttons twice on the remote controller at standby.
FL indication
" COLD SET "
This unit returns to initial setting.

3. FL display check
   This enables all FL segment light up.

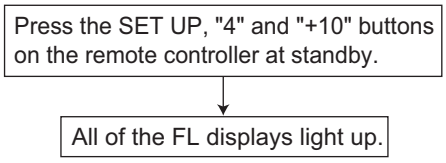

4. Micon version check
You can confirm Micon version and destination.

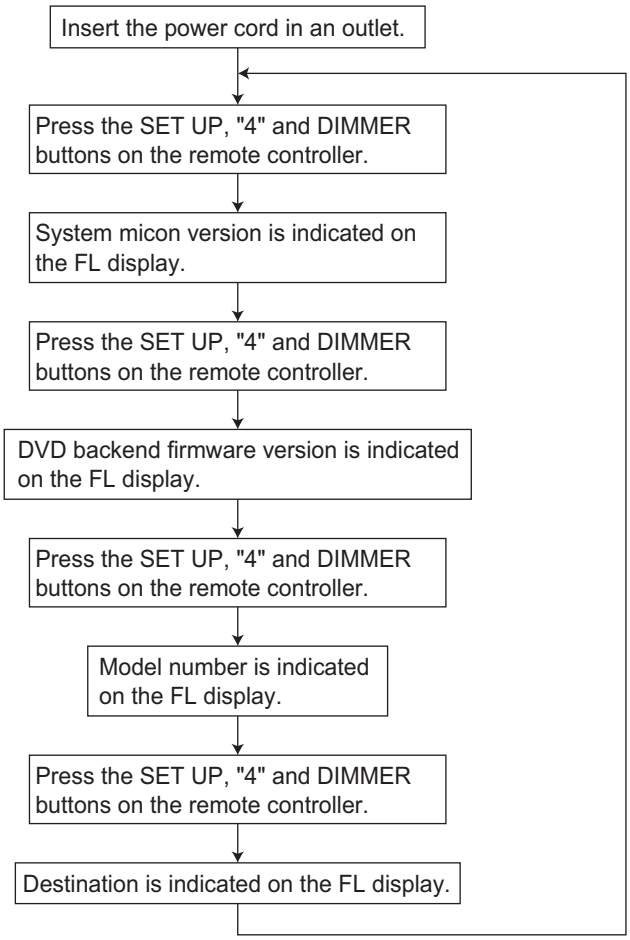
Insert the power cord in an outlet.
Press the SET UP, "4" and DIMMER buttons on the remote controller.
System micon version is indicated on the FL display.
Press the SET UP, "4" and DIMMER buttons on the remote controller.
DVD backend firmware version is indicated on the FL display.
Press the SET UP, "4" and DIMMER buttons on the remote controller.
Model number is indicated on the FL display.
Press the SET UP, "4" and DIMMER buttons on the remote controller.
Destination is indicated on the FL display.

5. DVD region check
You can confirm DVD region number.

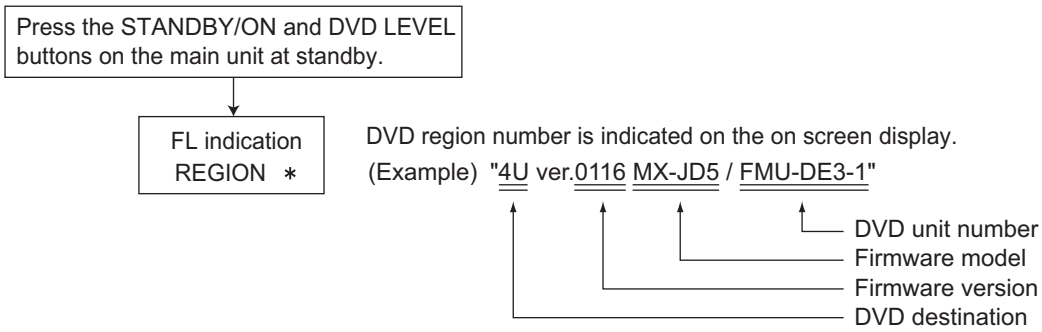
Press the STANDBY/ON and DVD LEVEL buttons on the main unit at standby.
FL indication
REGION ∗
DVD region number is indicated on the on screen display.
(Example) "4U ver.0116 MX-JD5 / FMU-DE3-1"
DVD unit number
Firmware model
Firmware version
DVD destination

6. DVD test mode

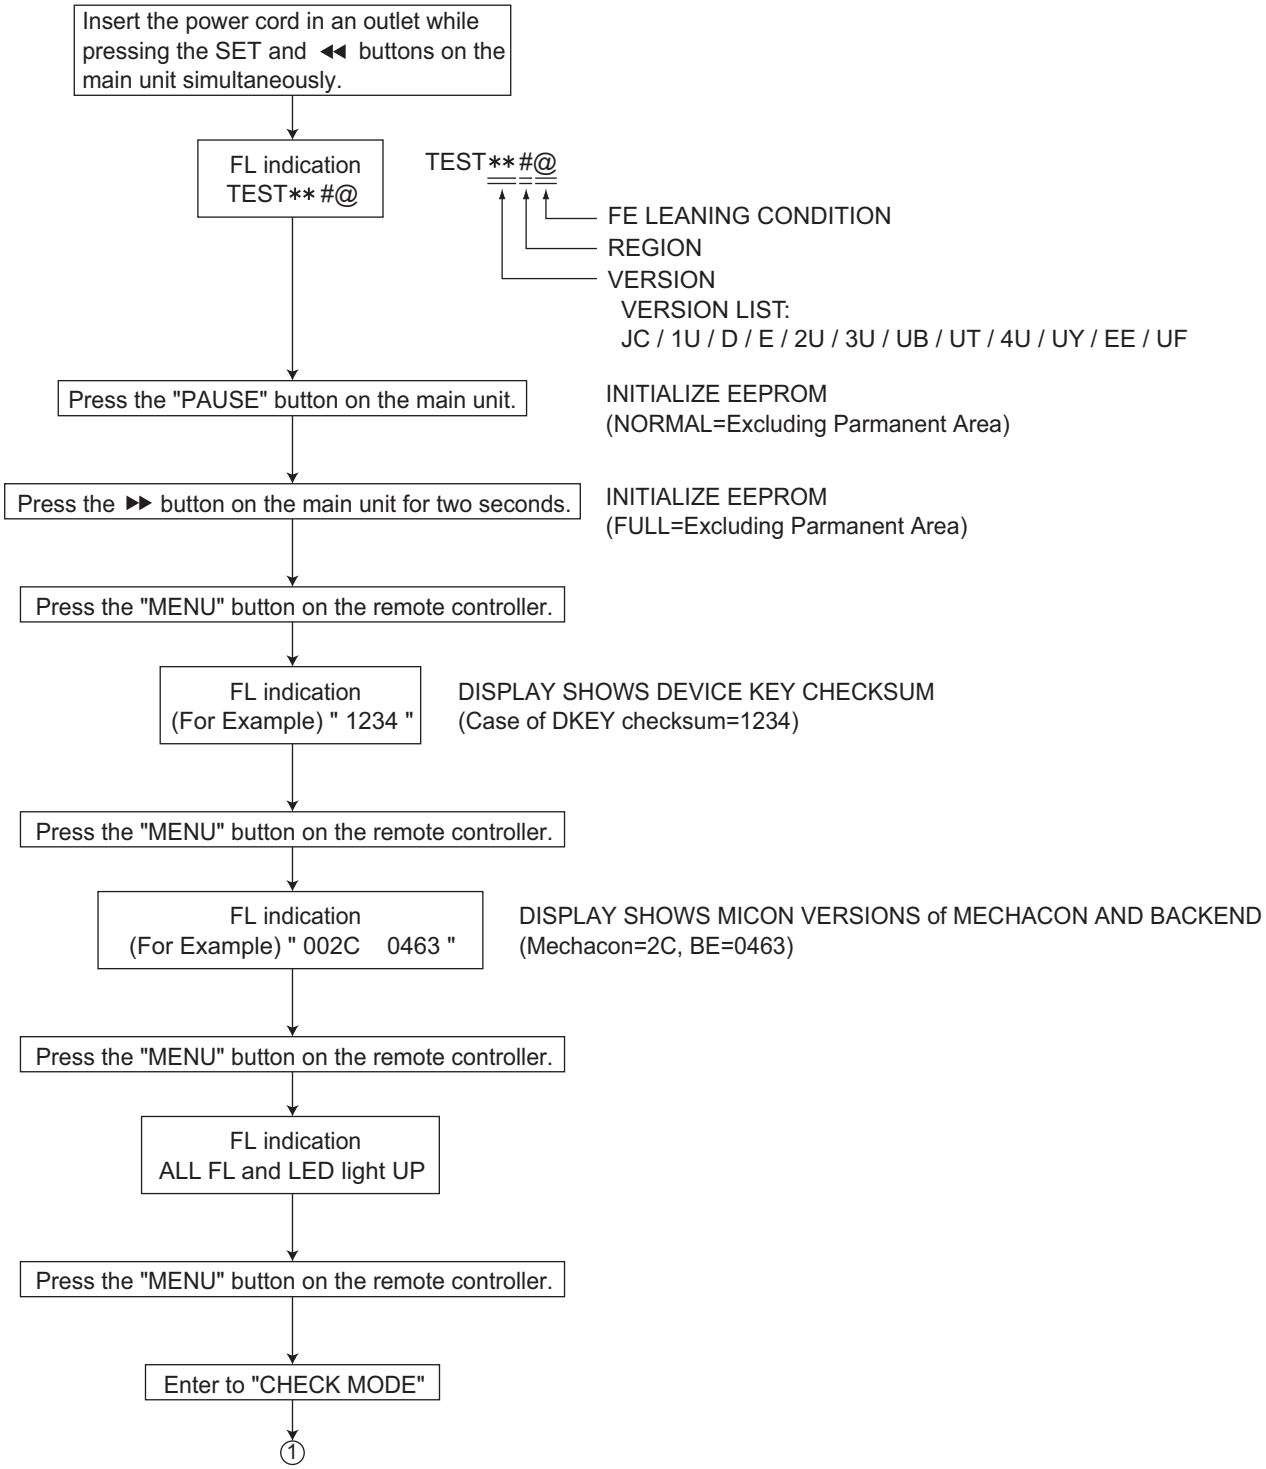
Insert the power cord in an outlet while pressing the SET and ◄◄ buttons on the main unit simultaneously.
FL indication TEST** #@
TEST** #@
FE LEANING CONDITION
REGION
VERSION
VERSION LIST:
JC / 1U / D / E / 2U / 3U / UB / UT / 4U / UY / EE / UF
Press the "PAUSE" button on the main unit.
INITIALIZE EEPROM
(NORMAL=Excluding Parmanent Area)
Press the ►► button on the main unit for two seconds.
INITIALIZE EEPROM
(FULL=Excluding Parmanent Area)
Press the "MENU" button on the remote controller.
FL indication
(For Example) " 1234 "
DISPLAY SHOWS DEVICE KEY CHECKSUM
(Case of DKEY checksum=1234)
Press the "MENU" button on the remote controller.
FL indication
(For Example) " 002C 0463 "
DISPLAY SHOWS MICON VERSIONS of MECHACON AND BACKEND
(Mechacon=2C, BE=0463)
Press the "MENU" button on the remote controller.
FL indication
ALL FL and LED light UP
Press the "MENU" button on the remote controller.
Enter to "CHECK MODE"
①

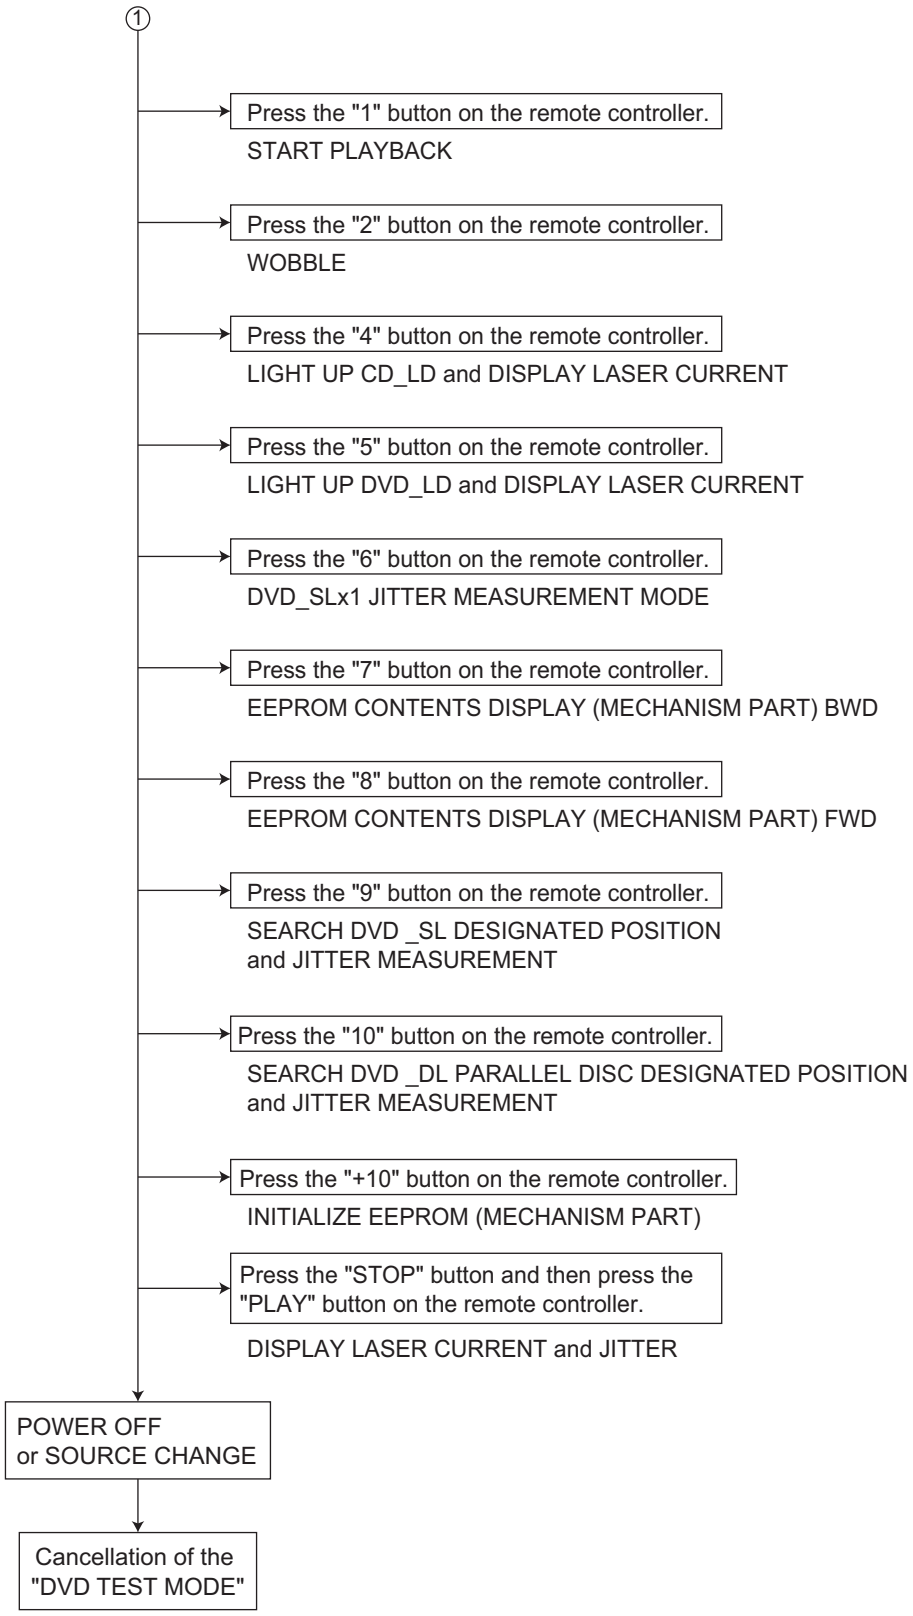
①
Press the "1" button on the remote controller.
START PLAYBACK
Press the "2" button on the remote controller.
WOBBLE
Press the "4" button on the remote controller.
LIGHT UP CD_LD and DISPLAY LASER CURRENT
Press the "5" button on the remote controller.
LIGHT UP DVD_LD and DISPLAY LASER CURRENT
Press the "6" button on the remote controller.
DVD_SLx1 JITTER MEASUREMENT MODE
Press the "7" button on the remote controller.
EEPROM CONTENTS DISPLAY (MECHANISM PART) BWD
Press the "8" button on the remote controller.
EEPROM CONTENTS DISPLAY (MECHANISM PART) FWD
Press the "9" button on the remote controller.
SEARCH DVD _SL DESIGNATED POSITION
and JITTER MEASUREMENT
Press the "10" button on the remote controller.
SEARCH DVD _DL PARALLEL DISC DESIGNATED POSITION
and JITTER MEASUREMENT
Press the "+10" button on the remote controller.
INITIALIZE EEPROM (MECHANISM PART)
Press the "STOP" button and then press the
"PLAY" button on the remote controller.
DISPLAY LASER CURRENT and JITTER
POWER OFF
or SOURCE CHANGE
Cancellation of the
"DVD TEST MODE"

4.3.3 Indicating check for FL display

Function	FL display									Note
DVD TEST MODE										
TEST START	T	E	S	T		*	*	#	@	By AC cord on with holding SET and ◀◀
(Version info)										**: VERSION
										@: FE learning condition
										#: REGION
A. EEPROM INITIALIZE	T	E	S	T		*	*	#	@	By pressing PAUSE (Front)
(NORMAL)	T	E	S	T		*	*	#	@	0
B. EEPROM INITIALIZE	T	E	S	T		*	*	#	@	By pressing and holding ▶▶ (Front) for 2-sec
(FULL)	T	E	S	T		*	*	#	3	3
① DEVICE KEY DISPLAY				*	*	*	*			By pressing MENU (Remote)
② VERSION DISPLAY	a	a	a	a			c	c	c	c
										aaaa: Syscon, cccc: Backend
③ FL ALL ON	■	■	■	■	■	■	■	■	■	■ By pressing MENU (Remote)
④ CHECK MODE			C	H	E	C	K			By pressing MENU (Remote)
START PLAY			C	H	E	C	K			By pressing 1 (Remote)
WOBBLE		*	*	*	*		*	*	*	* By pressing 2 (Remote)
CD LASER current		*	*	*	*		*	*	*	* By pressing 4 (Remote)
DVD LASER current		*	*	*	*		*	*	*	* By pressing 5 (Remote)
DVD-SL jitter		*	*	*	*		*	*	*	* By pressing 6 (Remote)
EEPROM (BWD)		*	*	*	*		*	*	*	* By pressing 7 (Remote)
EEPROM (FWD)		*	*	*	*		*	*	*	* By pressing 8 (Remote)
Temperature		*	*	*	*		*	*	*	* By pressing 9 (Remote)
DVD-DL/SL jitter		*	*	*	*		*	*	*	* By pressing 10 (Remote)
EEPROM initialize		*	*	*	*		*	*	*	* By pressing +10 (Remote)
Monitor change		*	*	*	*		*	*	*	* By pressing 0 (Remote)
STOP			C	H	E	C	K			By pressing STOP (Front or Remote)
OPEN/CLOSE		–	–	–	–	–	–	–	–	– By pressing OPEN/CLOSE (Front)
PLAY		*	*	*	*		*	*	*	* By pressing PLAY (Front or Remote)

SECTION 5
TROUBLESHOOTING

This service manual does not describe TROUBLESHOOTING.

JVC
Victor Company of Japan, Limited
AV & MULTIMEDIA COMPANY AUDIO/VIDEO SYSTEMS CATEGORY 10-1,1chome,Ohwatari-machi,Maebashi-city,371-8543,Japan

(No.MB282)

Printed in Japan
WPC

JVC

SCHEMATIC DIAGRAMS

COMPACT COMPONENT SYSTEM

MX-JD8

CD-ROM No.SML200407

Area suffix

US ---------- Singapore
UW ---------- Brazil,Mexico,Peru
UX ---------- Saudi Arabia
UN ---------- Asean

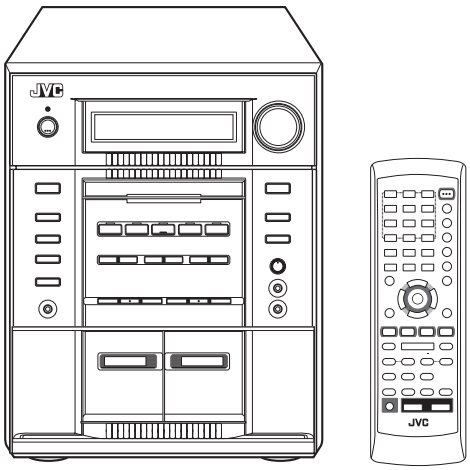

CA-MXJD8

AV COMPU LINK EXTENDED SUPER BASS

Contents

Block diagram ---------- 2-1
Standard schematic diagrams ---------- 2-2
Printed circuit boards ---------- 2-9 to 12

COPYRIGHT ⓒ2004 Victor Company of Japan, Limited.

No.MB282SCH
2004/7

In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (▬), diode (▬) and ICP (⬤) or identified by the "⚠" mark nearby are critical for safety.
(This regulation does not correspond to J and C version.)

Block diagram

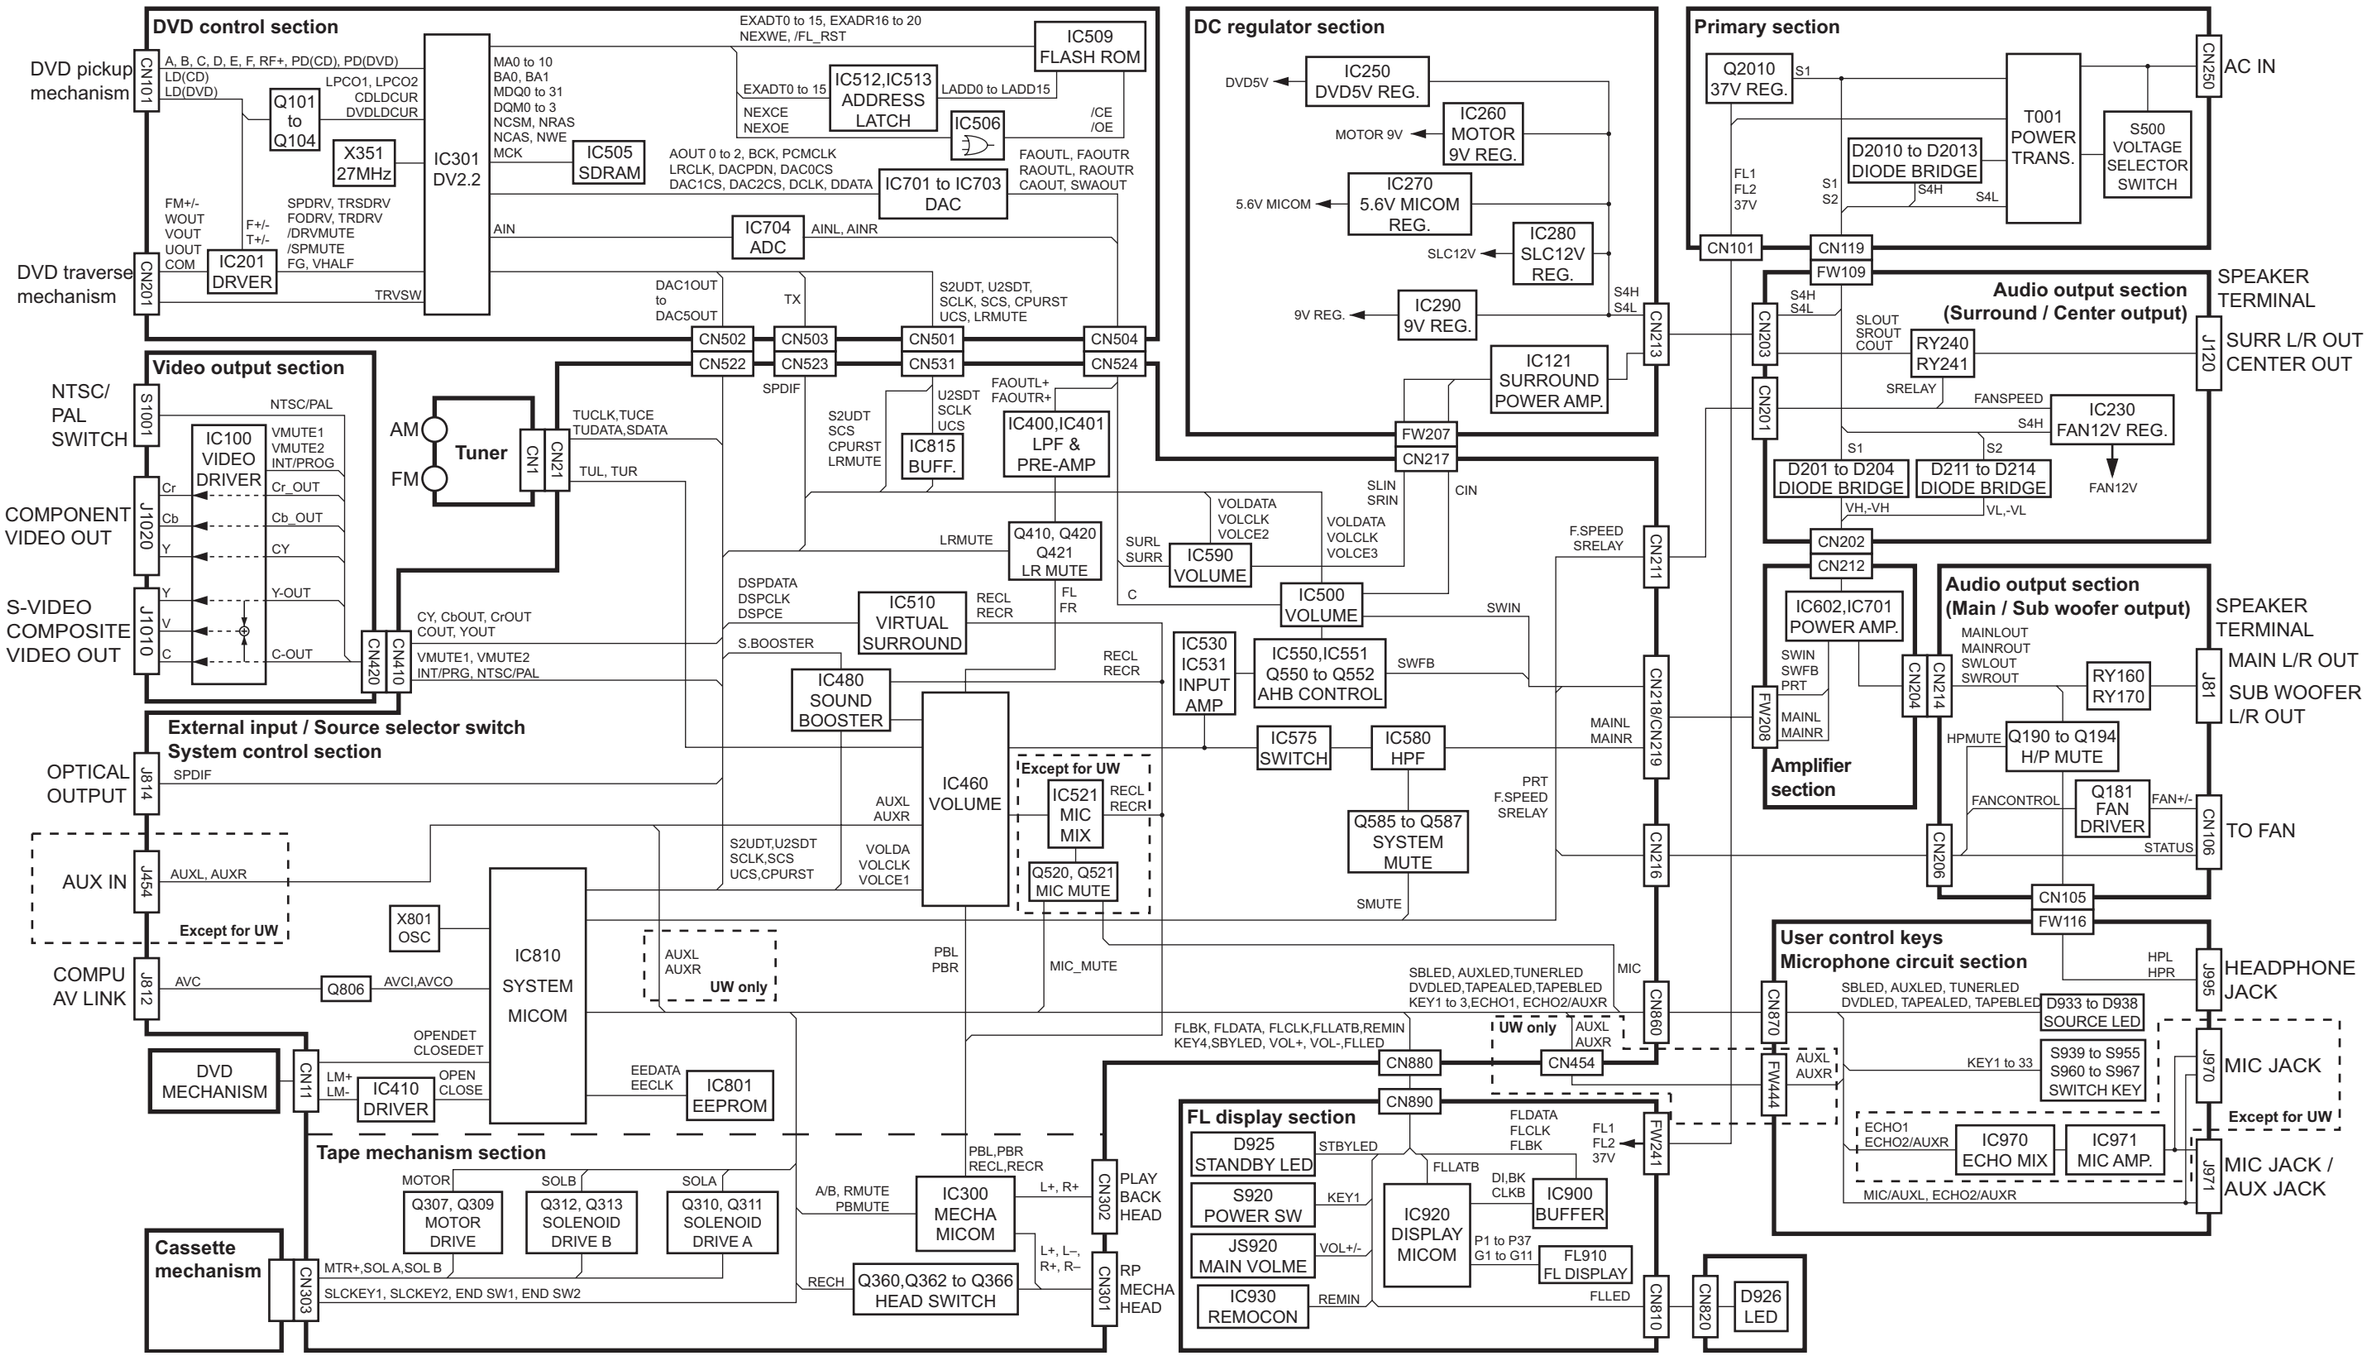

Standard schematic diagrams

■ Primary board with main transformer section

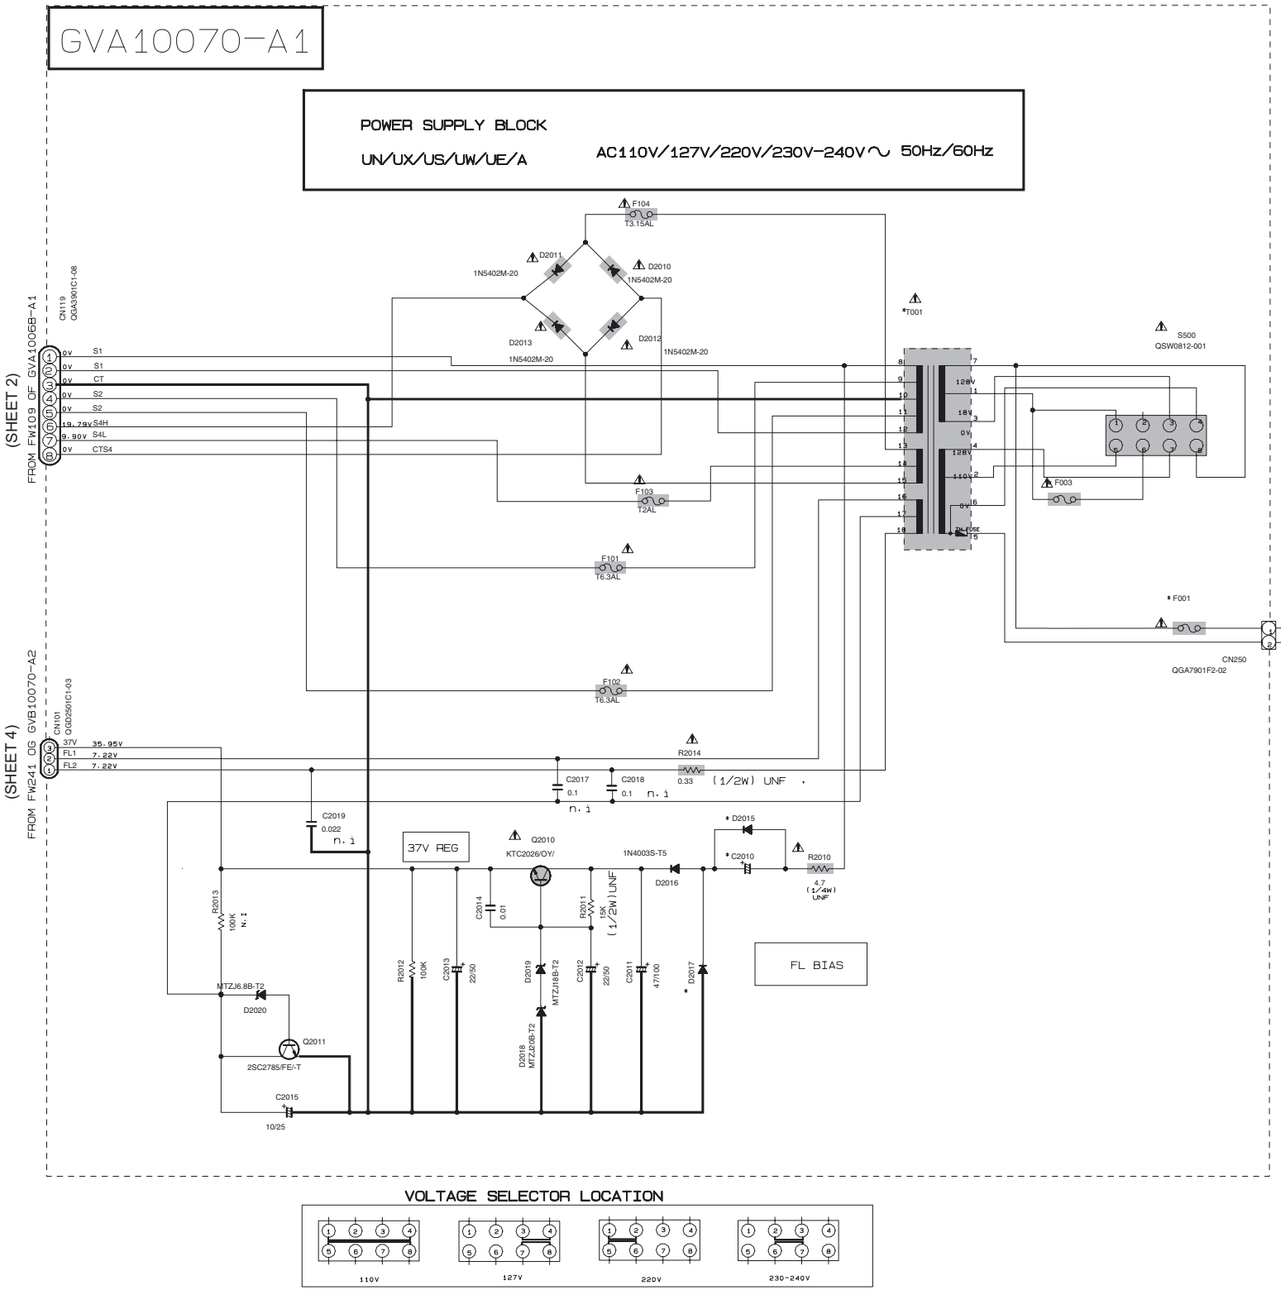

EXPLANATION OF OVERALL SCHEMATIC	
MODEL	MX-JD5/MX-JD8

SHEET NUMBER	
1	PRIMARY BOARD WITH MAIN TRANSFORMER
2	DC REGULATOR/AUDIO OUTPUT
3	EXTERNAL INPUT, SOURCE SELECTOR SWITCH, SYSTEM CONTROL
4	FL DISPLAY, USER CONTROL KEYS VIDEO OUTPUT, MIC CIRCUIT
5	TAPE CIRCUIT, MECHANISM CONTROL
6	DVD CONTROL SYSTEM (1/2)
7	DVD CONTROL SYSTEM (2/2)

VERSION CODE

UW	:	SOUTH AMERICA
UN	:	ASEAN
UX	:	SAUDI ARABIA
UE	:	TURKEY
US	:	SINGAPORE AND UNIVERSAL EXCEPT ALL ABOVES
A	:	AUSTRALIA

	MX-JD5	MX-JD8
F001	T4AL	T5AL
F003	T2AL	T2.5AL
T001	QQT0438 -001	QQT0439 -001
D2015	1N40035- T5	QUY150- 050Y
C2010	100/63	n.i
D2017	1N40035- T5	n.i

⚠ Parts are safety assurance parts. When replacing those parts make sure to use the specified one.

SHEET 1

■ DC regulator / Audio output section

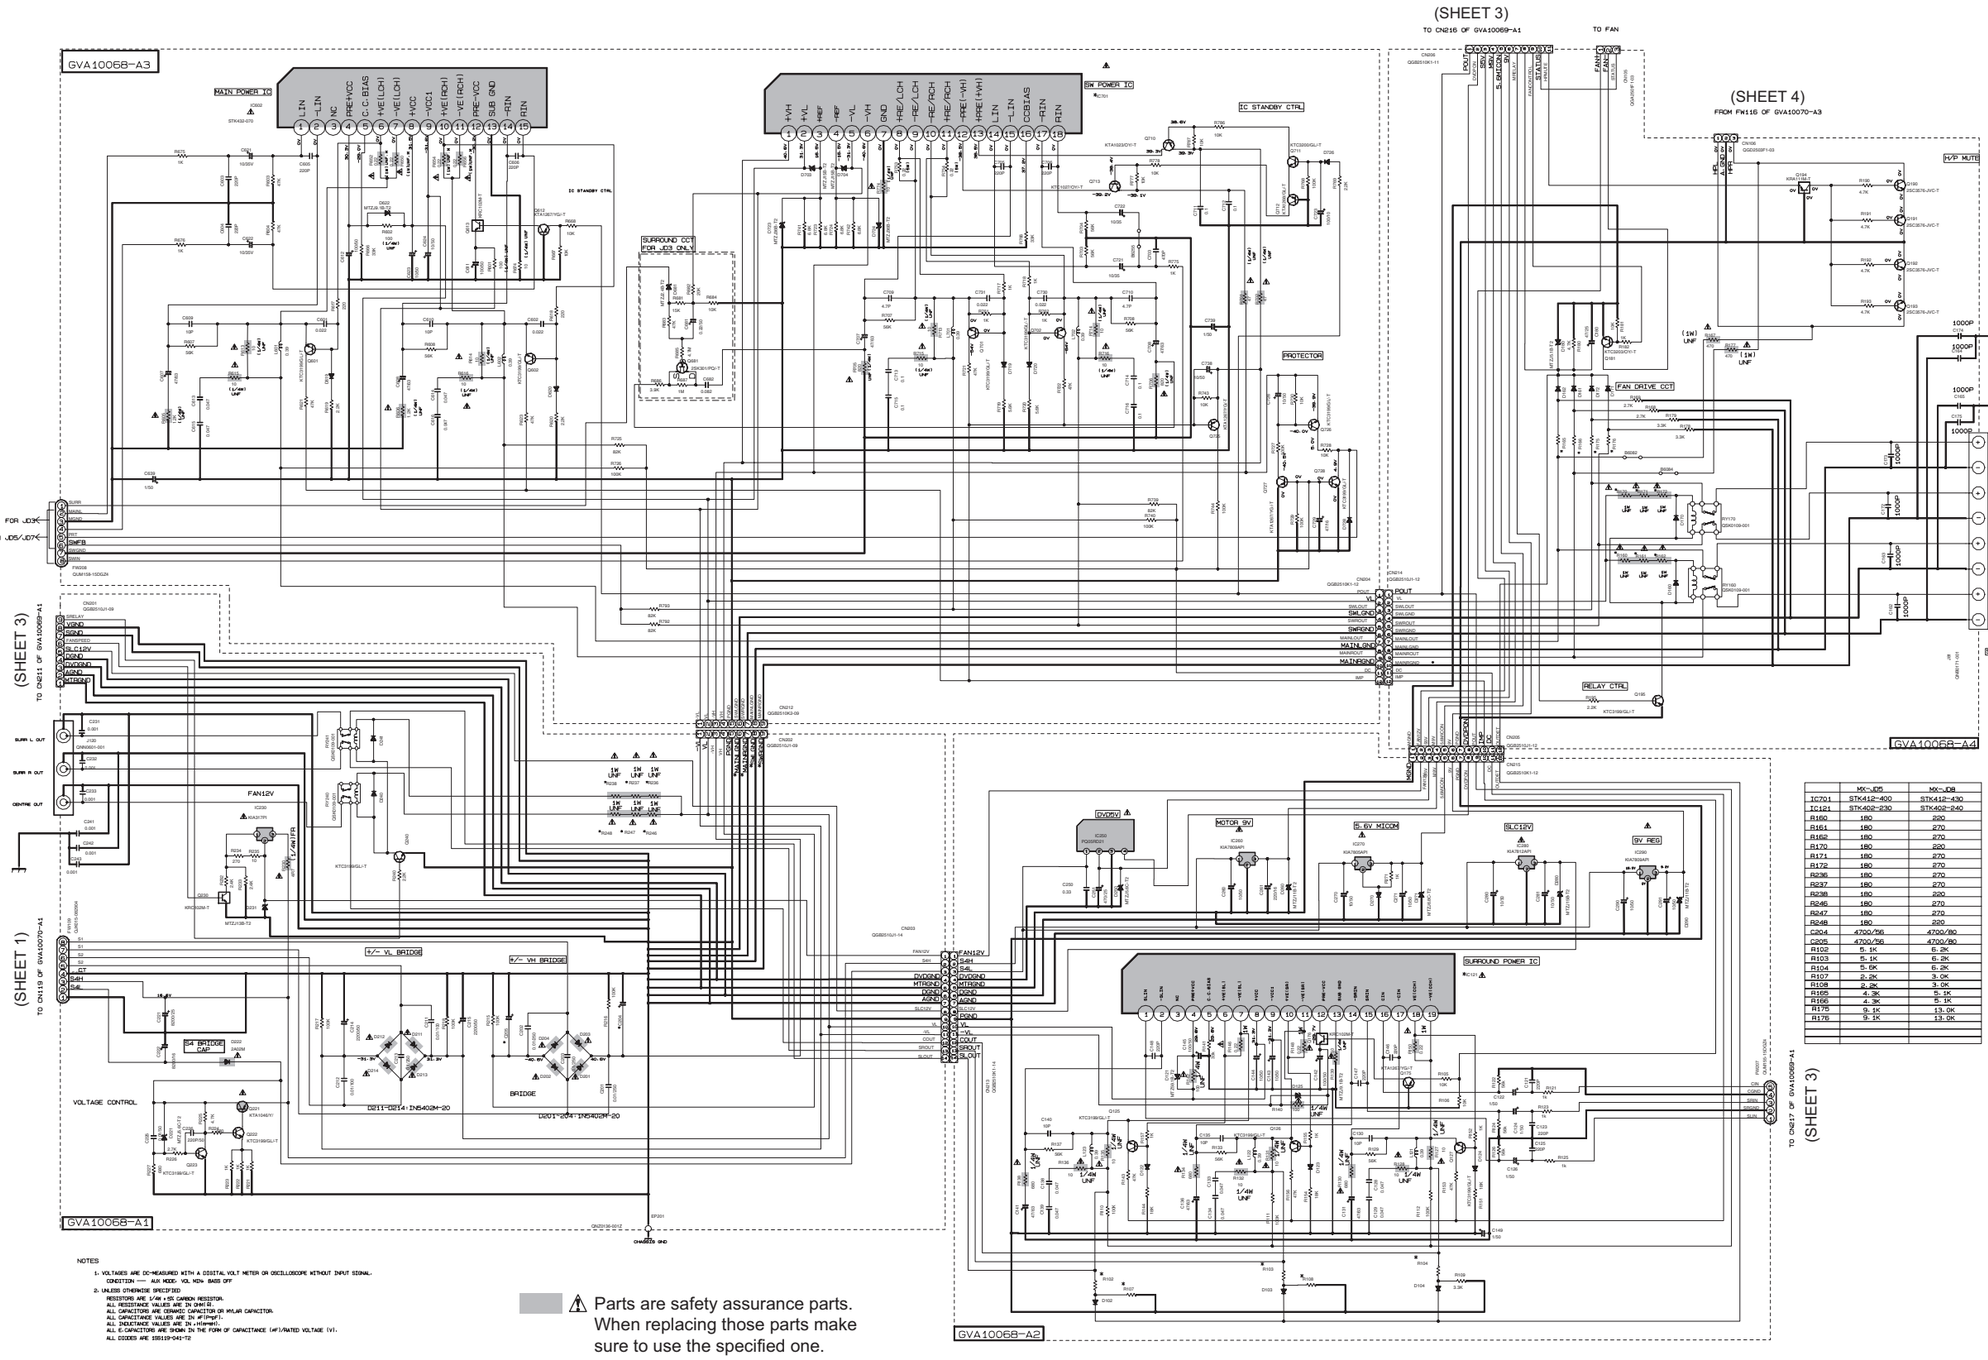

	MX-JD5	MX-JD8
IC701	STK412-400	STK412-430
IC121	STK402-230	STK402-240
R160	180	220
R161	180	270
R162	180	270
R170	180	220
R171	180	270
R172	180	270
R236	180	270
R237	180	270
R238	180	220
R246	180	270
R247	180	270
R248	180	220
C204	4700/56	4700/80
C205	4700/56	4700/80
R102	5.1K	6.2K
R103	5.1K	6.2K
R104	5.9K	6.2K
R107	2.2K	3.0K
R108	2.2K	3.0K
R165	4.3K	5.1K
R166	4.3K	5.1K
R175	9.1K	13.0K
R176	9.1K	13.0K

NOTES

1- VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER OR OSCILLOSCOPE WITHOUT INPUT SIGNAL.
CONDITION ---- AUX MODE- VOL MIN- BASS OFF

2- UNLESS OTHERWISE SPECIFIED
RESISTORS ARE 1/4W ±5% CARBON RESISTOR.
ALL RESISTANCE VALUES ARE IN OHMS(Ω).
ALL CAPACITORS ARE CERAMIC CAPACITOR OR MYLAR CAPACITOR.
ALL CAPACITANCE VALUES ARE IN uF(mpF).
ALL INDUCTANCE VALUES ARE IN uHenneti.
ALL E-CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE (uF)/RATED VOLTAGE (V).
ALL DIODES ARE 1SS119-041-T2

⚠ Parts are safety assurance parts. When replacing those parts make sure to use the specified one.

■ External input / Source selector switch / System control section

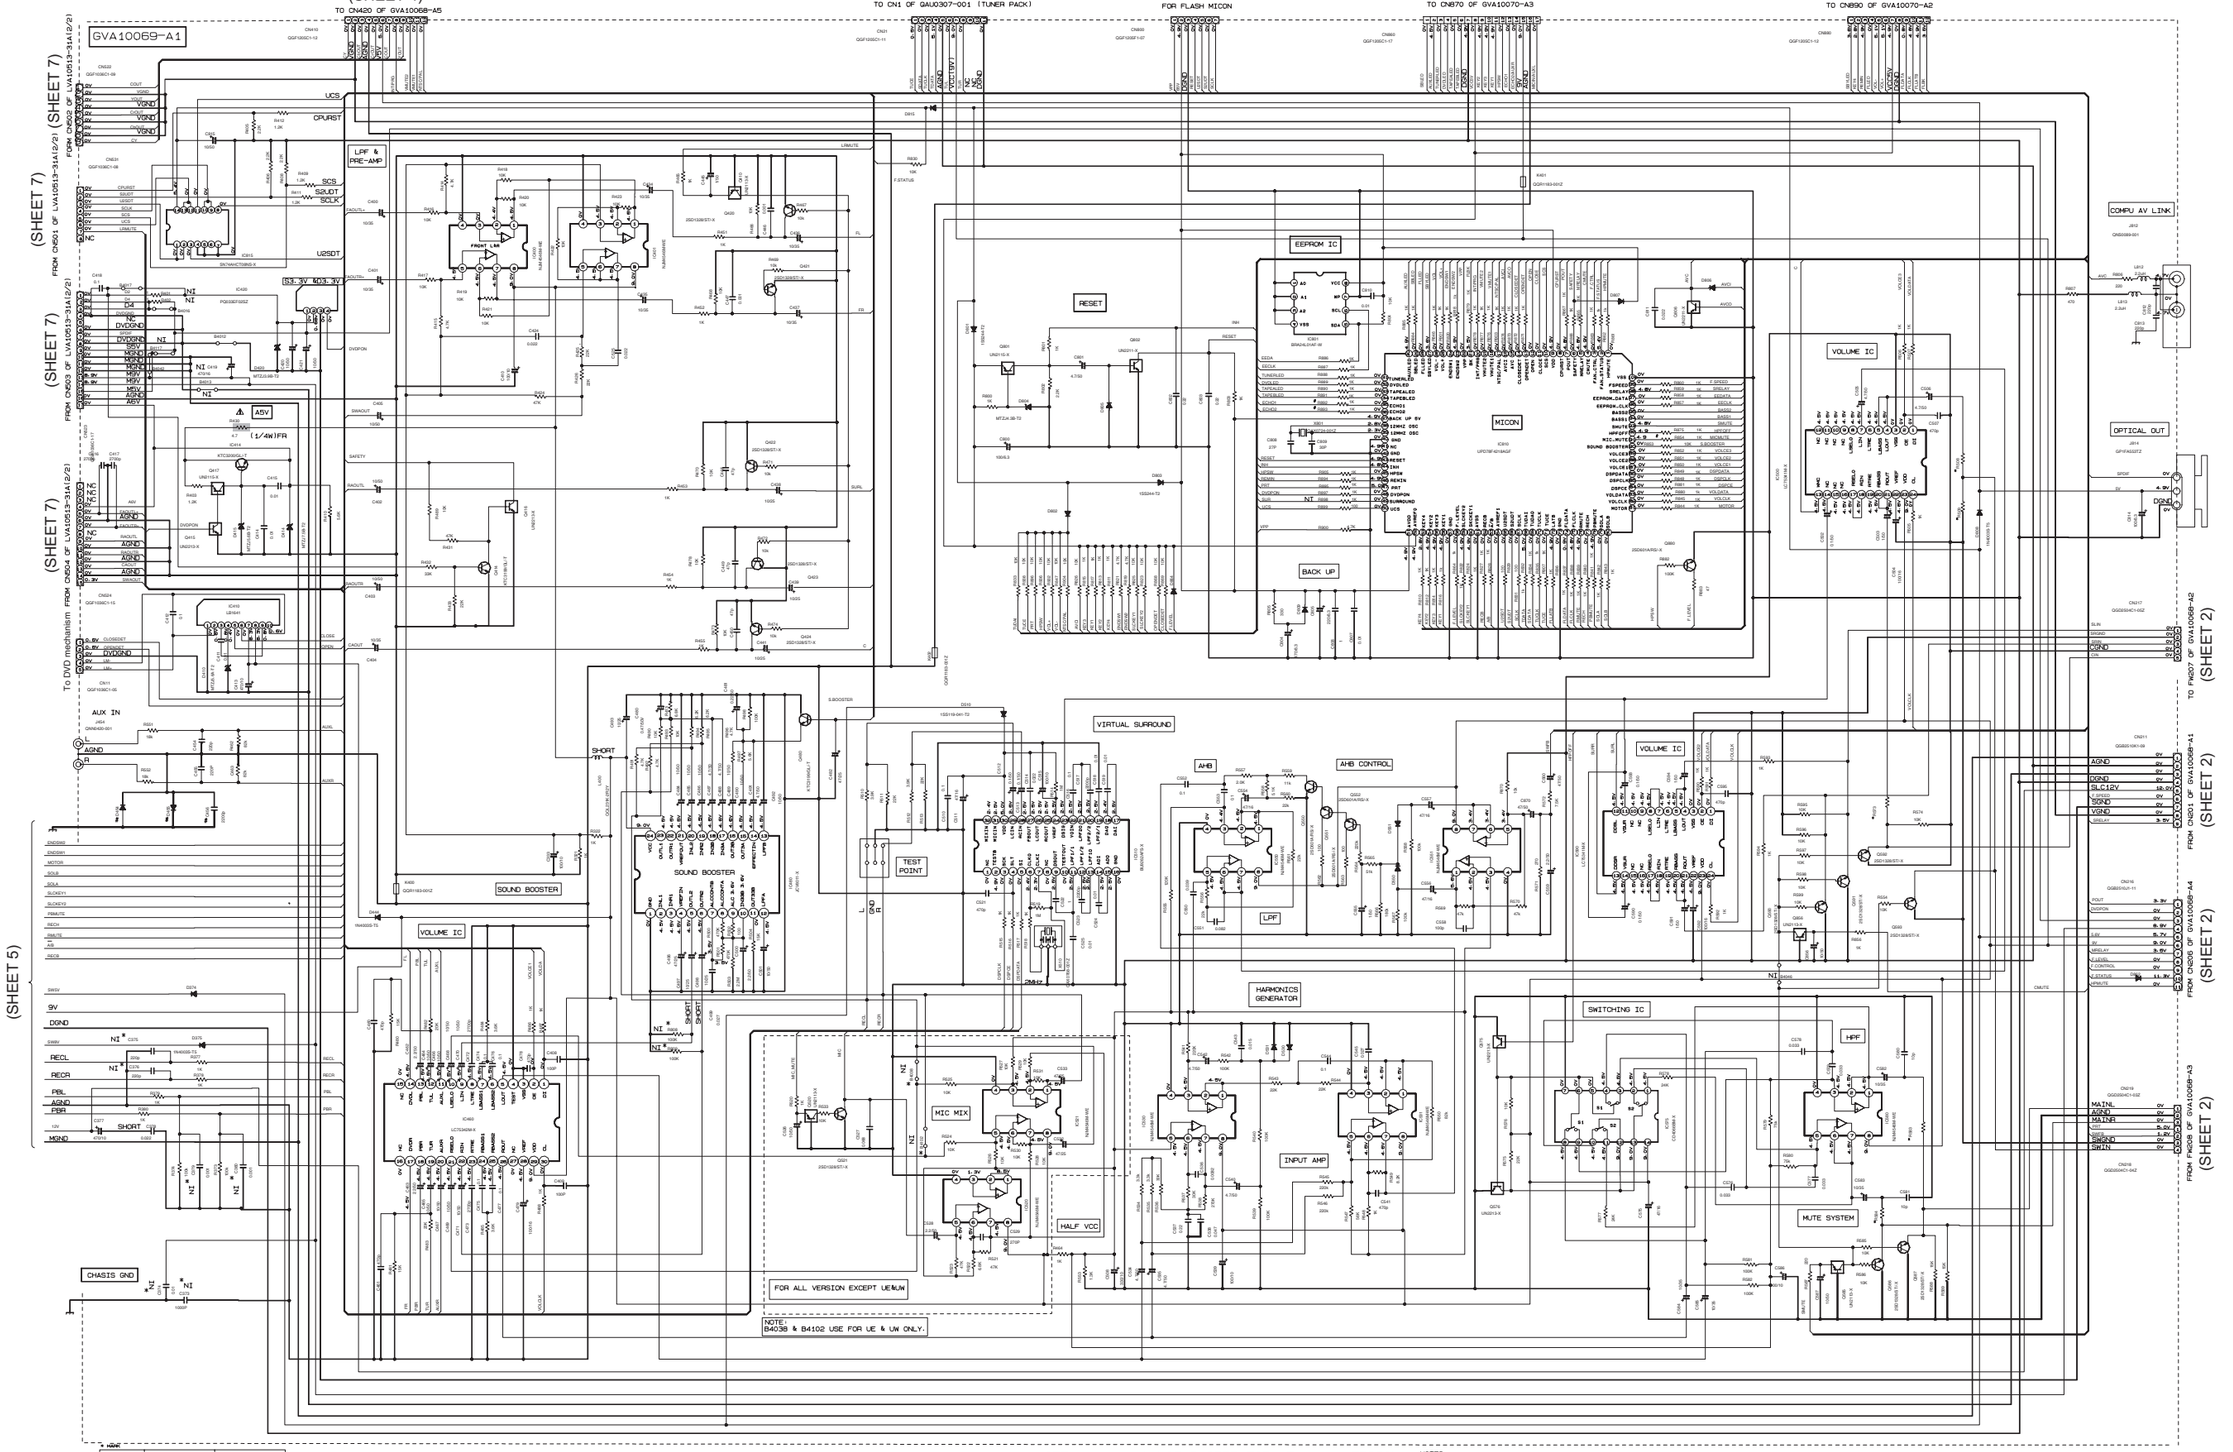

REF NO.	MX-JD5	MX-JD8
R508	NRSA63J-203X	NRSA63J-912X
R509	NRSA63J-332X	NRSA63J-332X
R573	NRSA63J-332X	NRSA63J-102X
R583	GRE141J-512Y	GRE141J-102Y
R584	GRE141J-512Y	GRE141J-102Y
R579	GRE141J-753Y	GRE141J-753Y
R580	GRE141J-753Y	GRE141J-753Y

⚠ Parts are safety assurance parts. When replacing those parts make sure to use the specified one.

NOTE: # ———> NOT INSERT FOR UE & UW VERSION

NOTES
1.VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER OR OSCILLOSCOPE WITHOUT INPUT SIGNAL.
CONDITION —— AUX MODE- VOL MIN- BASS OFF
2. UNLESS OTHERWISE SPECIFIED
RESISTORS ARE 1/4W±5% CARBON RESISTOR.
ALL RESISTANCE VALUES ARE IN Ω(ohm).
ALL C.CAPACITORS ARE CERAMIC CAPACITOR OR MYLAR CAPACITOR.
ALL CAPACITANCE VALUES ARE IN +/-1(mpf).
ALL INDUCTANCE VALUES ARE IN H(Henri).
ALL E.CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE (uF)/RATED VOLTAGE (V).
ALL DIODE ARE 1SS133-TZ
NI ------ COMPONENT NOT INSERT
SHORT ----- REPLACE BY BUS WIRE .

■ FL display / User control keys / Video output / Microphone circuit section

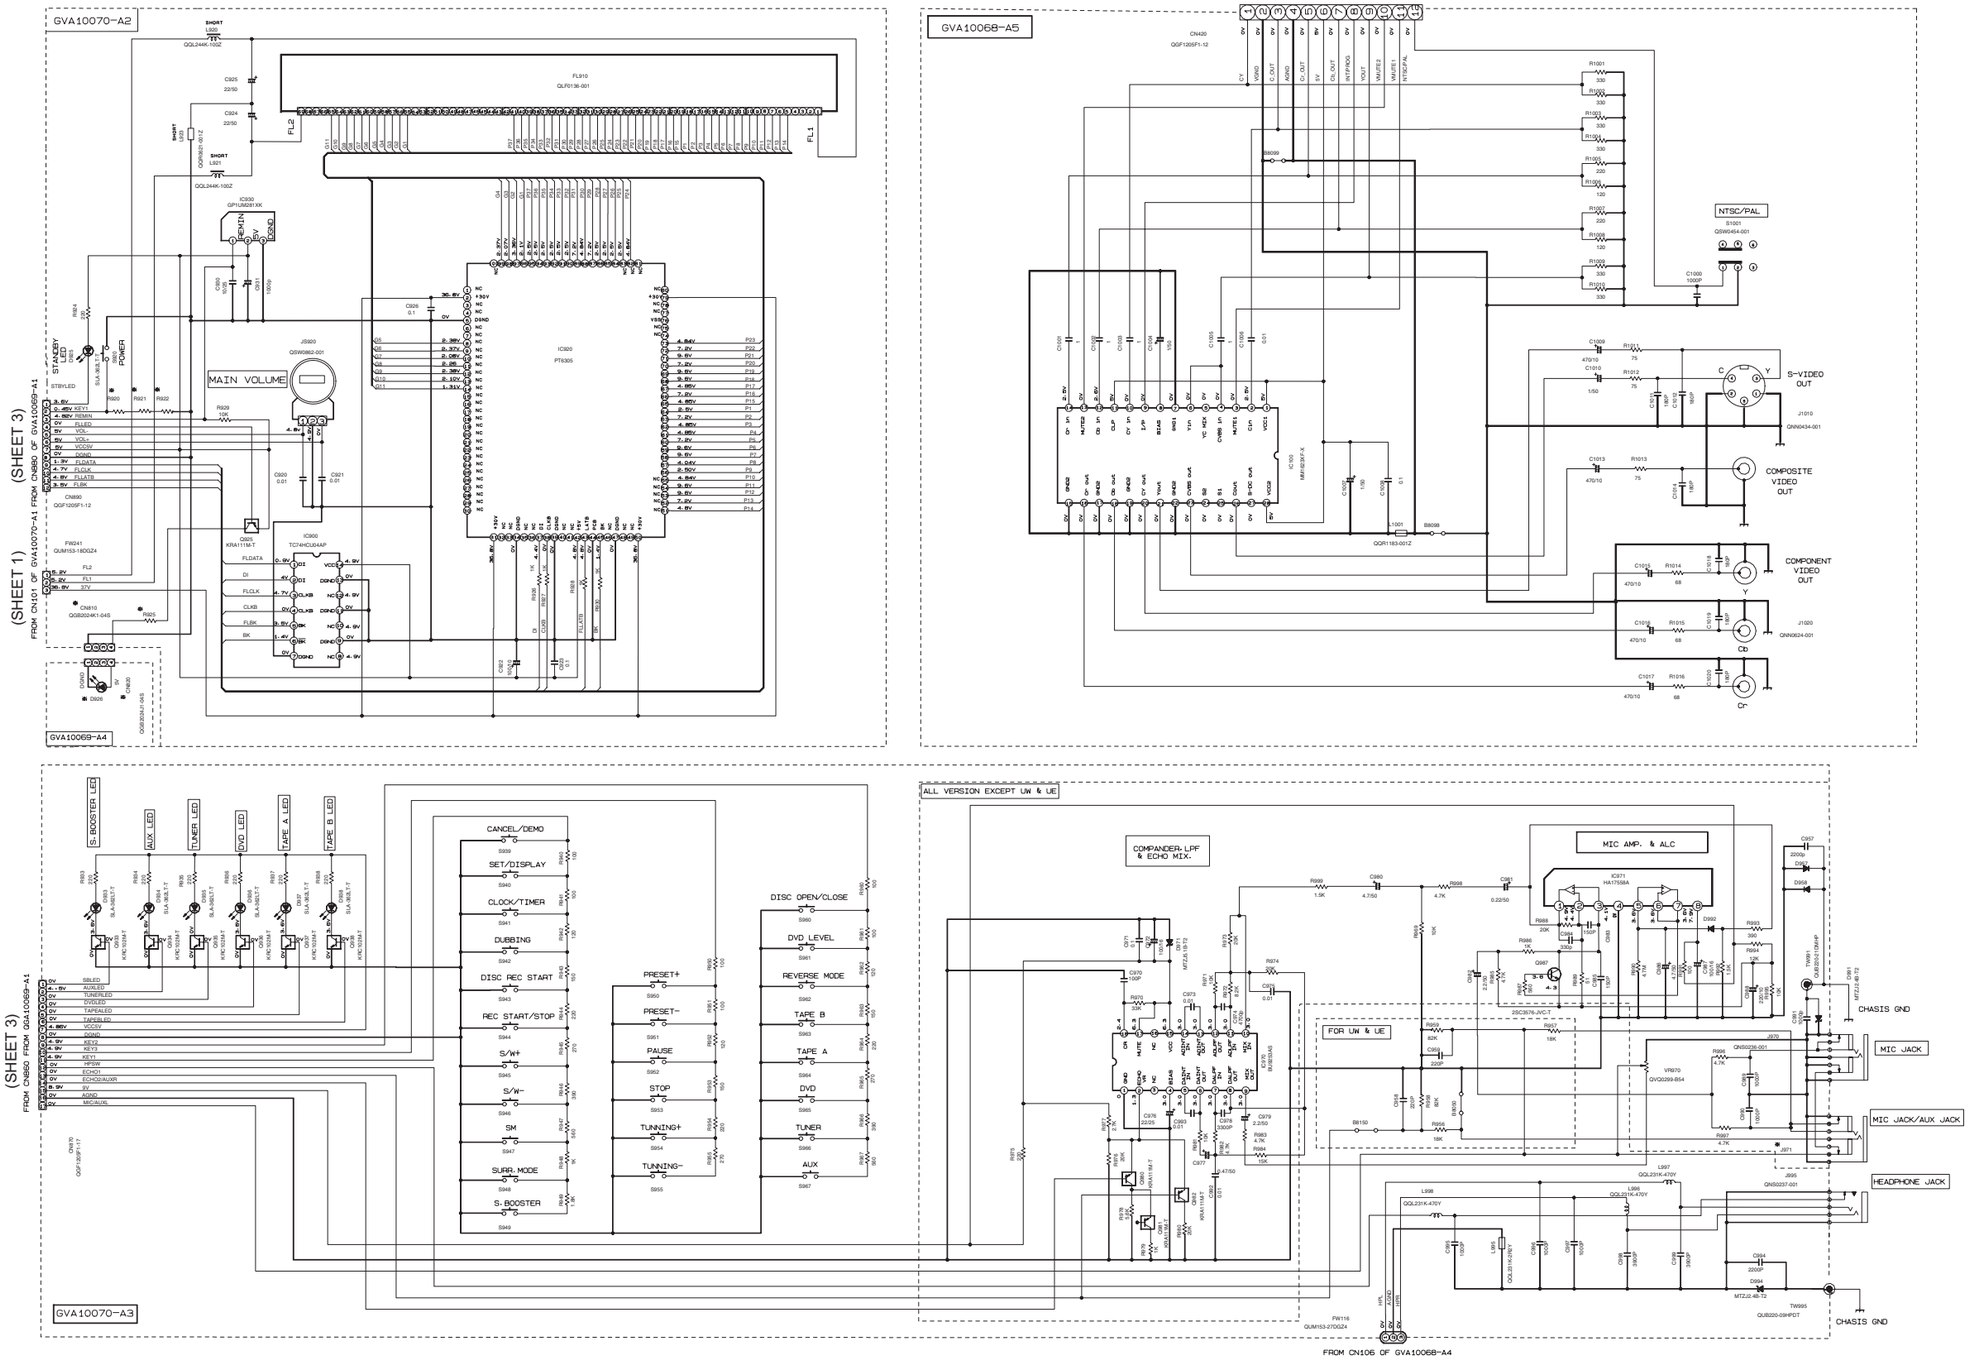

* MARK

REF NO. \ VERSION	MX-JD3			MX-JD5					MX-JD8			REMARK
	UN/US/EE	UX	UE	UN/US	UX	UE	UW	A	UN/US	UX	UW	
R920(B8003)	100	200	200	470	470	2K	470	9.1K	1.2K	1.2K	2K	VER. SETTING FOR KEY1
R921(B8005)	SHORT	SHORT	120	SHORT	220	910	220	910	150	510	910	VER. SETTING FOR KEY2
R922(B8006)	SHORT	SHORT	SHORT	SHORT	SHORT	1.8K	270	300	SHORT	200	SHORT	VER. SETTING FOR KEY3
CN810	NONE	NONE	NONE	USE	USE	USE	USE	USE	USE	USE	USE	
CN820	NONE	NONE	NONE	USE	USE	USE	USE	USE	USE	USE	USE	
D926	NONE	NONE	NONE	SLI-343URC3F	SLI-343URC3F	SLI-343URC3F	SLI-343URC3F	SLI-343URC3F	SELU2E10C-P	SELU2E10C-P	SELU2E10C-P	
J971	QNS0236-001	QNS0236-001	QNS0235-001	QNS0236-001	QNS0236-001	QNS0235-001	QNS0235-001	QNS0235-001	QNS0236-001	QNS0236-001	QNS0235-001	
R926	NONE	NONE	NONE	200	200	200	200	200	150	150	150	

NOTES

1. VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER OR OSCILLOSCOPE WITHOUT INPUT SIGNAL.
   CONDITION ---- AUX MODE, VOL MIN, BASS OFF
2. UNLESS OTHERWISE SPECIFIED
   RESISTORS ARE 1/4W ± 5% CARBON RESISTOR.
   ALL RESISTANCE VALUES ARE IN OHM (Ω).
   ALL CAPACITORS ARE CERAMIC CAPACITOR OR MYLAR CAPACITOR.
   ALL CAPACITANCE VALUES ARE IN uF(mpF).
   ALL INDUCTANCE VALUES ARE IN uH(mmH).
   ALL E-CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE (uF)/RATED VOLTAGE (V).
   ALL DIODE ARE 1SS133-T2
   ALL TACT SWITCH ARE QSW0674-001Z

■ Tape circuit / Mechanism control section

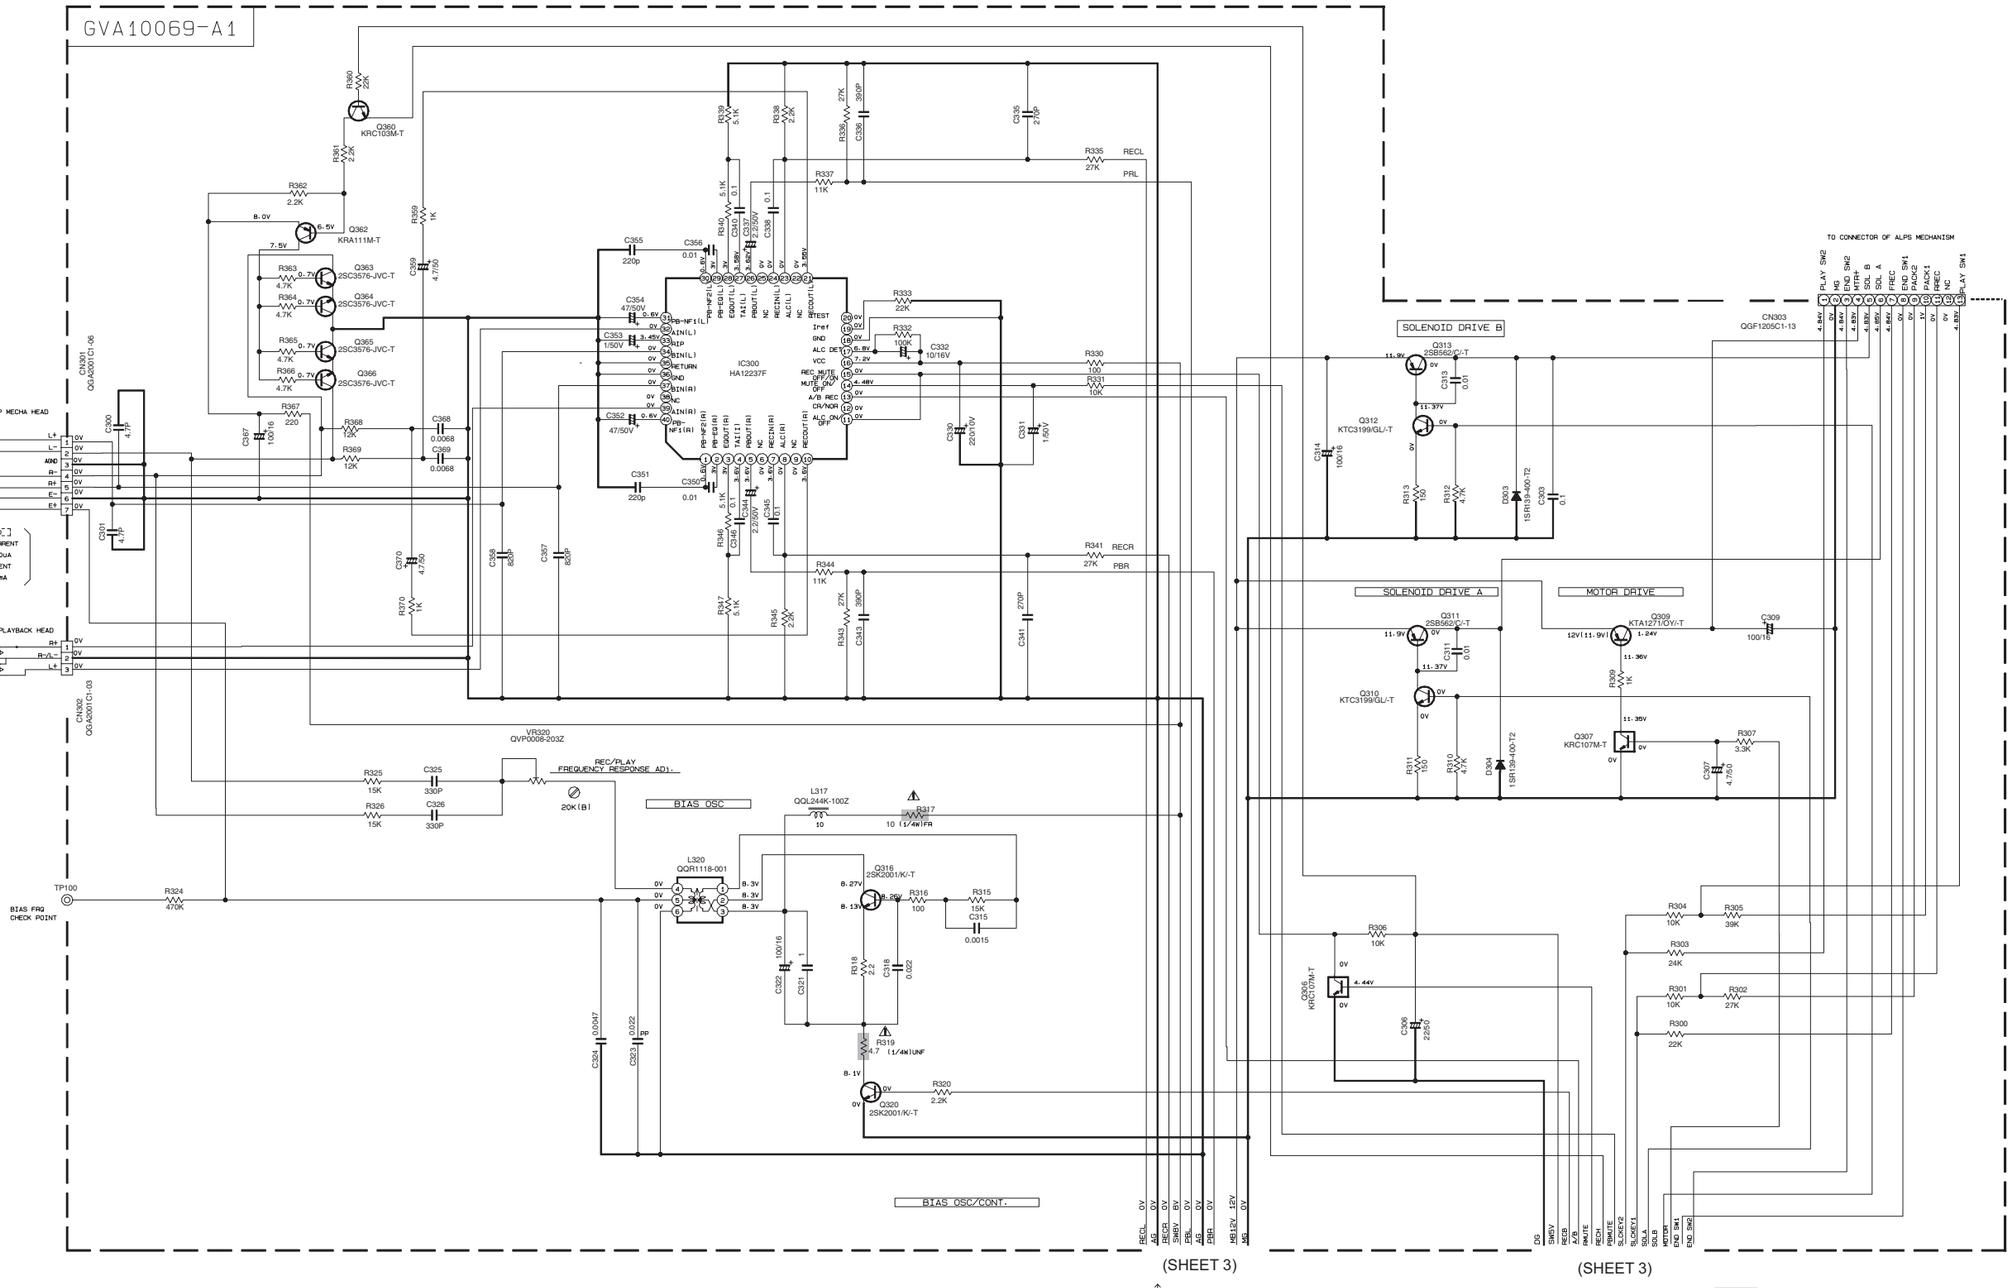

NOTES

1. VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER OR OSCILLOSCOPE WITHOUT INPUT SIGNAL.
   CONDITION : MECHA STOP MODE

2. UNLESS OTHERWISE SPECIFIED , RESISTORS ARE 1/10W ±5% METAL GLAZE RESISTOR.
   ALL RESISTANCE VALUES ARE IN OHM(Ω).
   ALL CAPACITORS ARE CERAMIC CAPACITOR OR MYLAR CAPACITOR.
   ALL CAPACITANCE VALUES ARE IN μF(P=pF).
   ALL INDUCTANCE VALUES ARE IN μH(m=mH).
   ALL E.CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE (μF)/RATED VOLTAGE (V).
   ‖ POLYPROPYLENE CAPACITOR

GUARD GND → NOT CONNECT TO SET

⚠ Parts are safety assurance parts. When replacing those parts make sure to use the specified one.

SHEET 5

■ DVD control system section (1/2)

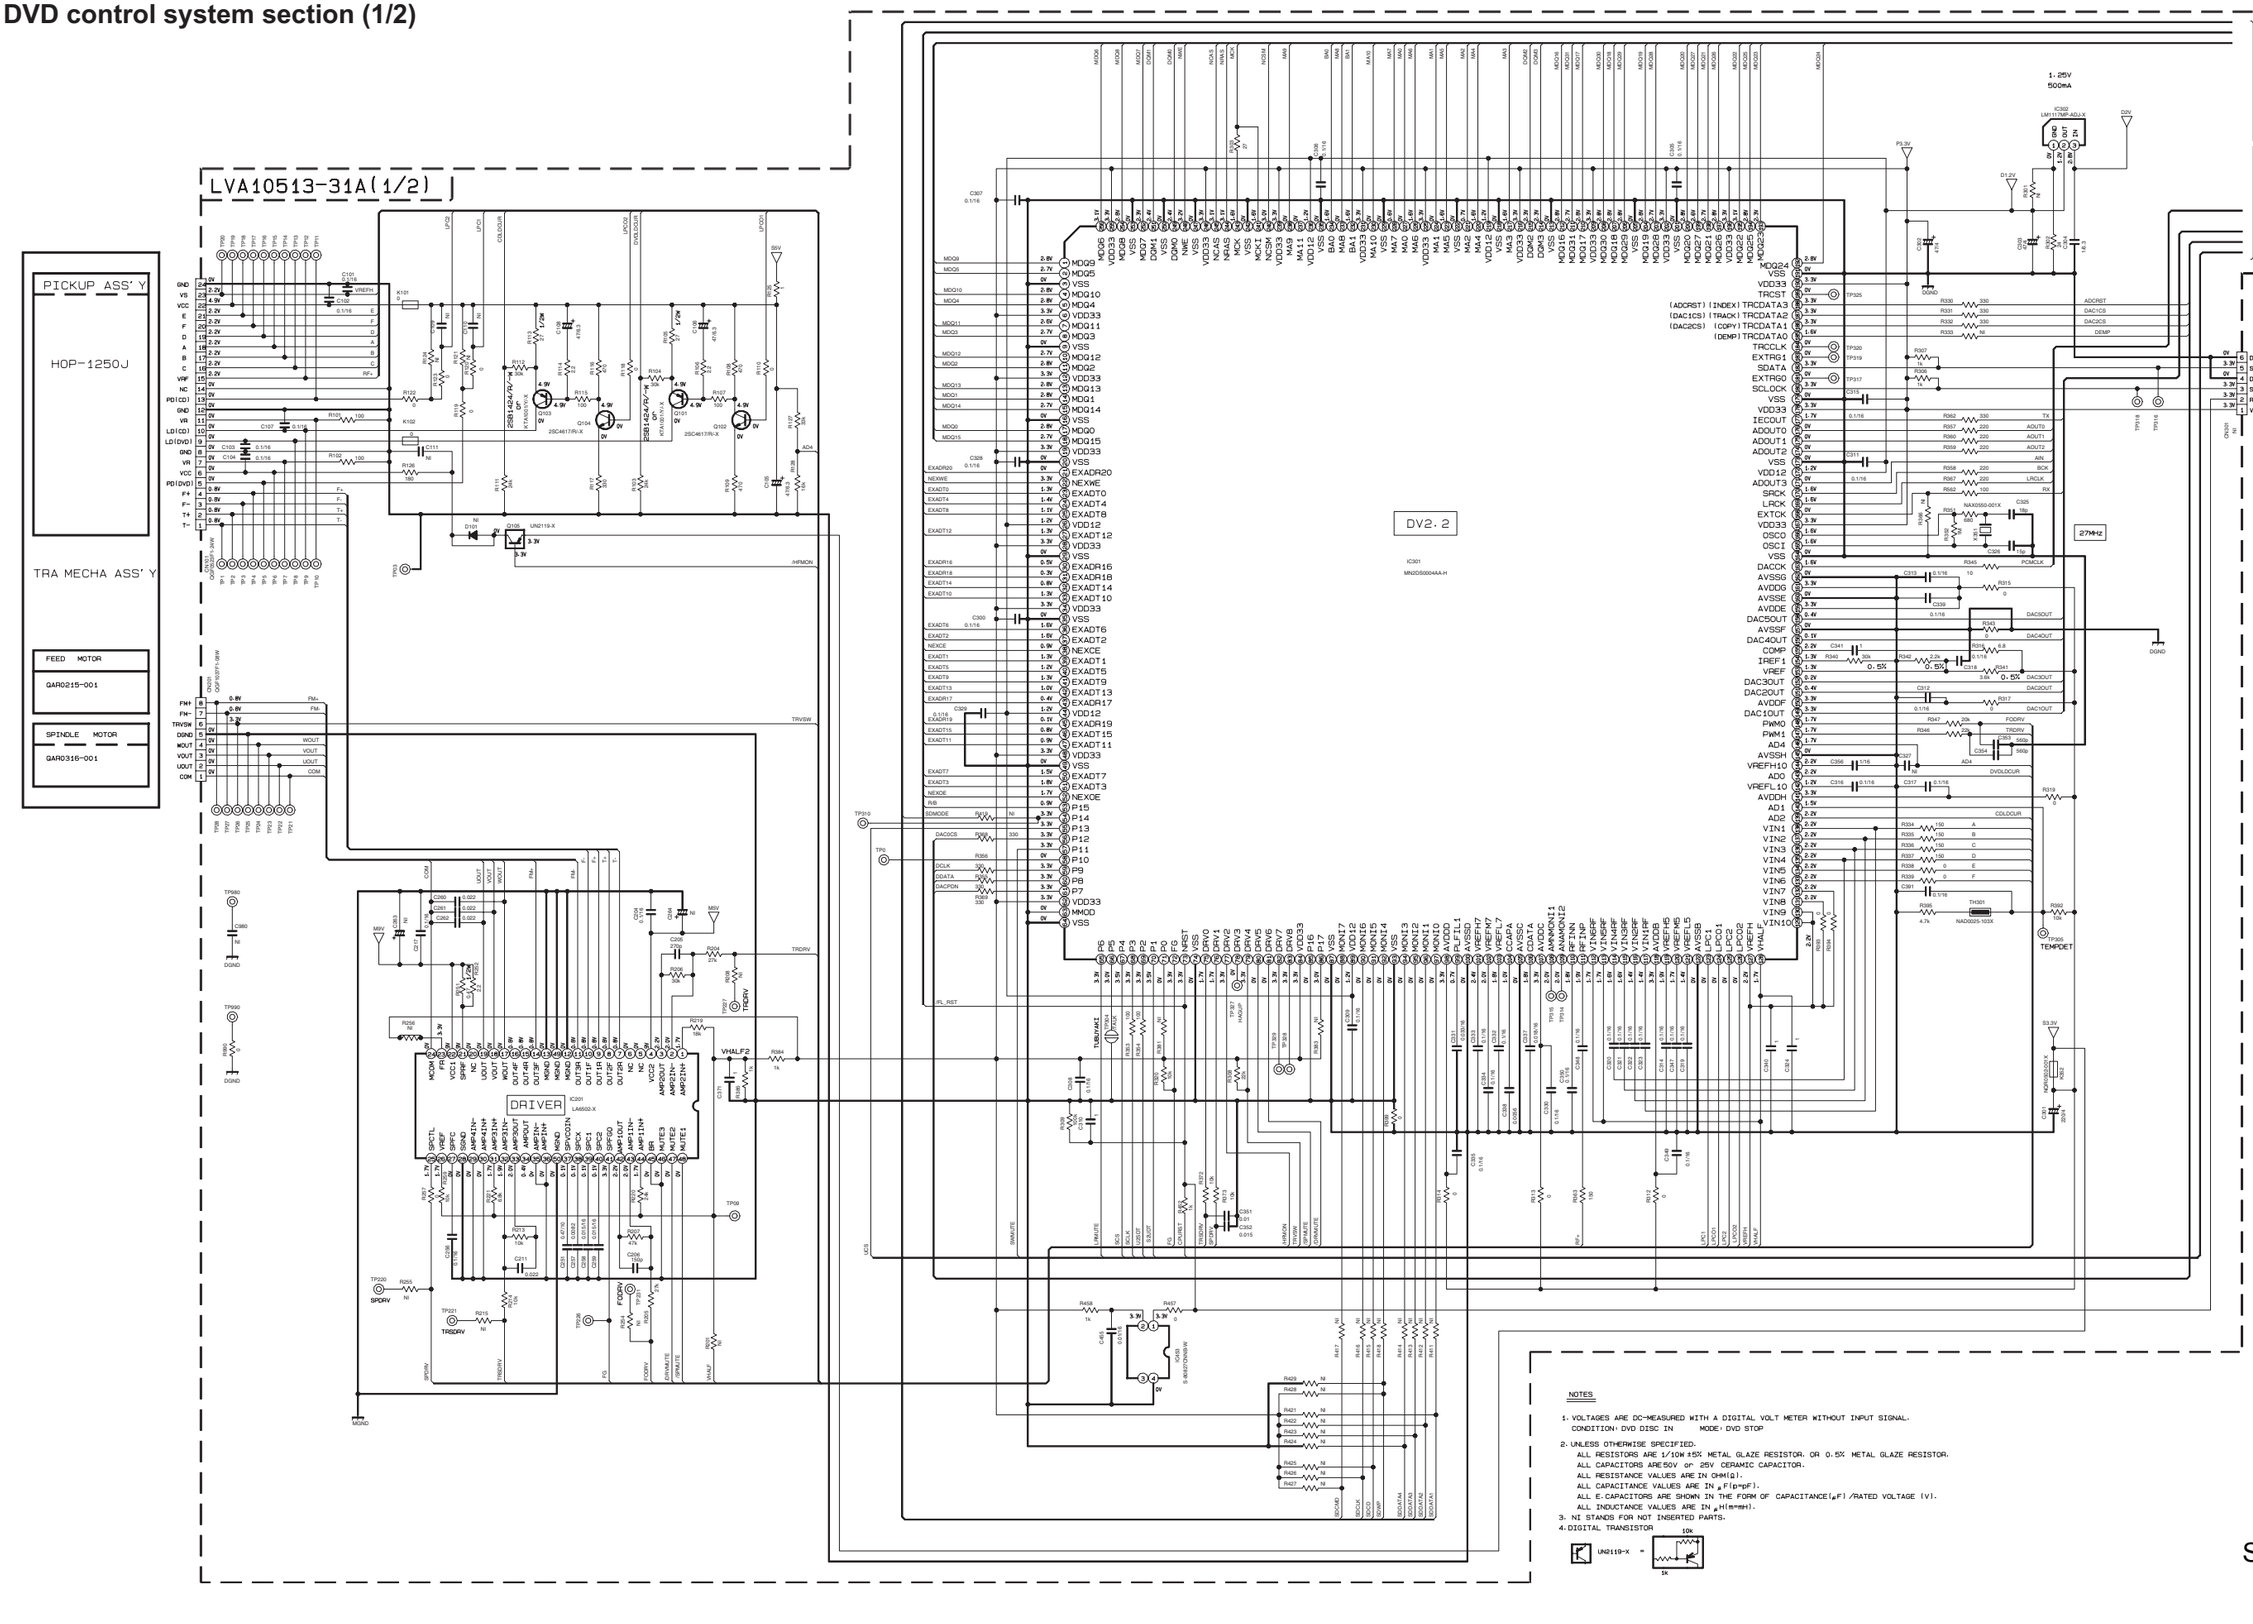
LVA10513-31A(1/2)
PICKUP ASS' Y
HOP-1250J
TRA MECHA ASS' Y
FEED MOTOR
QAR0215-001
SPINDLE MOTOR
QAR0316-001
DRIVER
IC201
LA6503-X
DV2.2
IC301
MN2DS0004AA-H
(SHEET 7)
NOTES
1. VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER WITHOUT INPUT SIGNAL.
CONDITION: DVD DISC IN MODE: DVD STOP
2. UNLESS OTHERWISE SPECIFIED.
ALL RESISTORS ARE 1/10W ±5% METAL GLAZE RESISTOR. OR 0.5% METAL GLAZE RESISTOR.
ALL CAPACITORS ARE50V or 25V CERAMIC CAPACITOR.
ALL RESISTANCE VALUES ARE IN OHM(Ω).
ALL CAPACITANCE VALUES ARE IN μF(p=pF).
ALL E-CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE(μF) /RATED VOLTAGE (V).
ALL INDUCTANCE VALUES ARE IN μH(m=mH).
3. NI STANDS FOR NOT INSERTED PARTS.
4. DIGITAL TRANSISTOR
UN2110-X = 10k 1k

SHEET 6

■ DVD control system section (2/2)

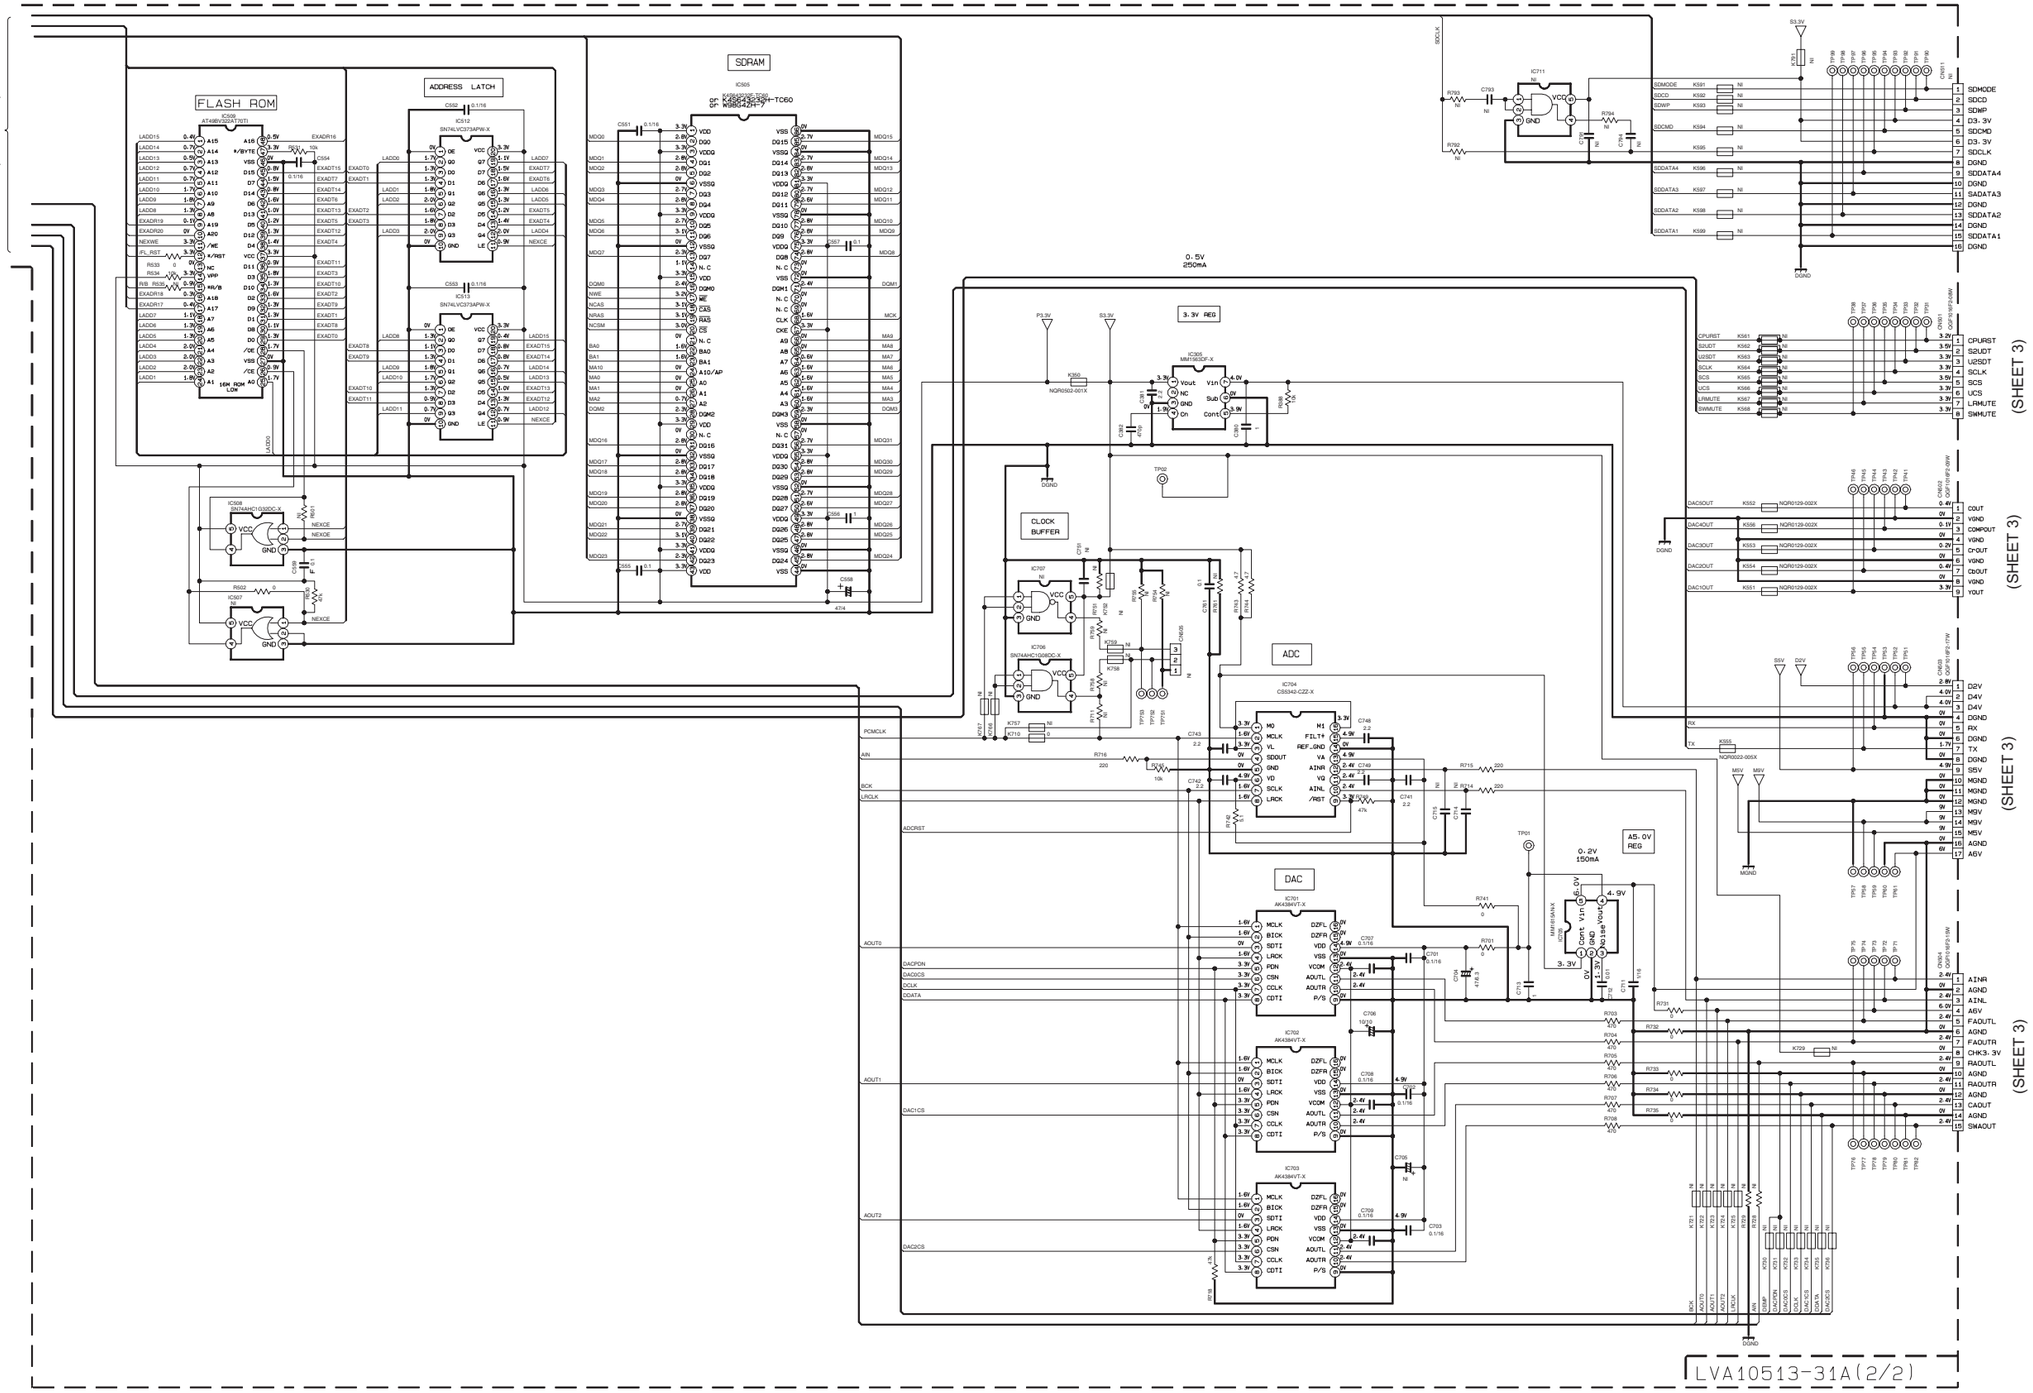

NOTES

1. VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER WITHOUT INPUT SIGNAL.
   CONDITION:DVD DISC IN MODE:DVD STOP

2. UNLESS OTHERWISE SPECIFIED.
   ALL RESISTORS ARE 1/10W ±5% METAL GLAZE RESISTOR. OR 0.5% METAL GLAZE RESISTOR.
   ALL CAPACITORS ARE 50V,25V or 16V CERAMIC CAPACITOR.
   ALL RESISTANCE VALUES ARE IN OHM(Ω).
   ALL CAPACITANCE VALUES ARE IN μF(p=pF).
   ALL E.CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE(μF)/RATED VOLTAGE (V).
   ALL INDUCTANCE VALUES ARE IN μH(m=mH).
3. NI STANDS FOR NOT INSERTED PARTS.

4. DIGITAL TRANSISTOR
   DTA113ZE-x =

Printed circuit boards

■ Power board

(Regulator & Surround amplifier board)

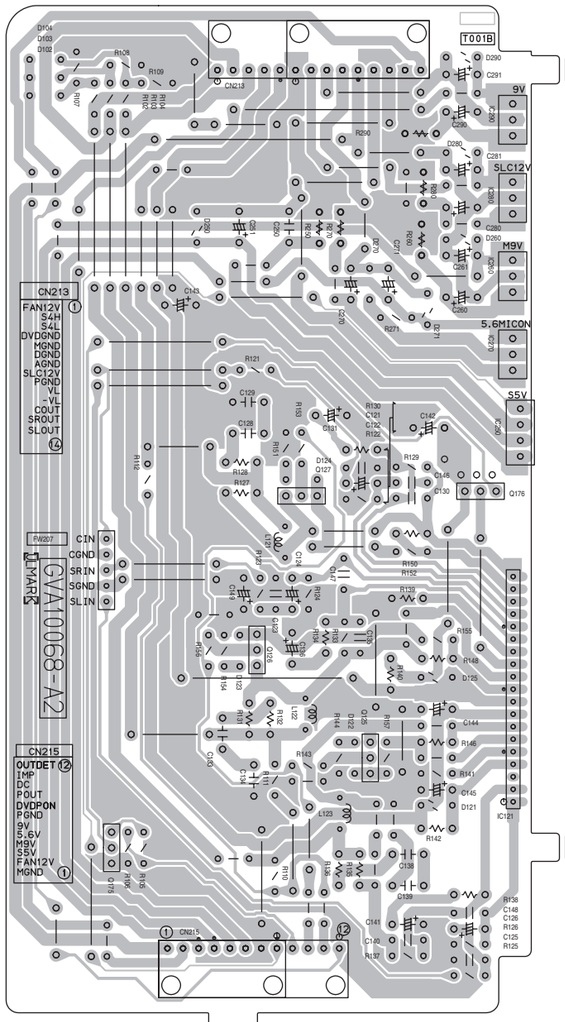

(Main & Subwoofer amplifier board)

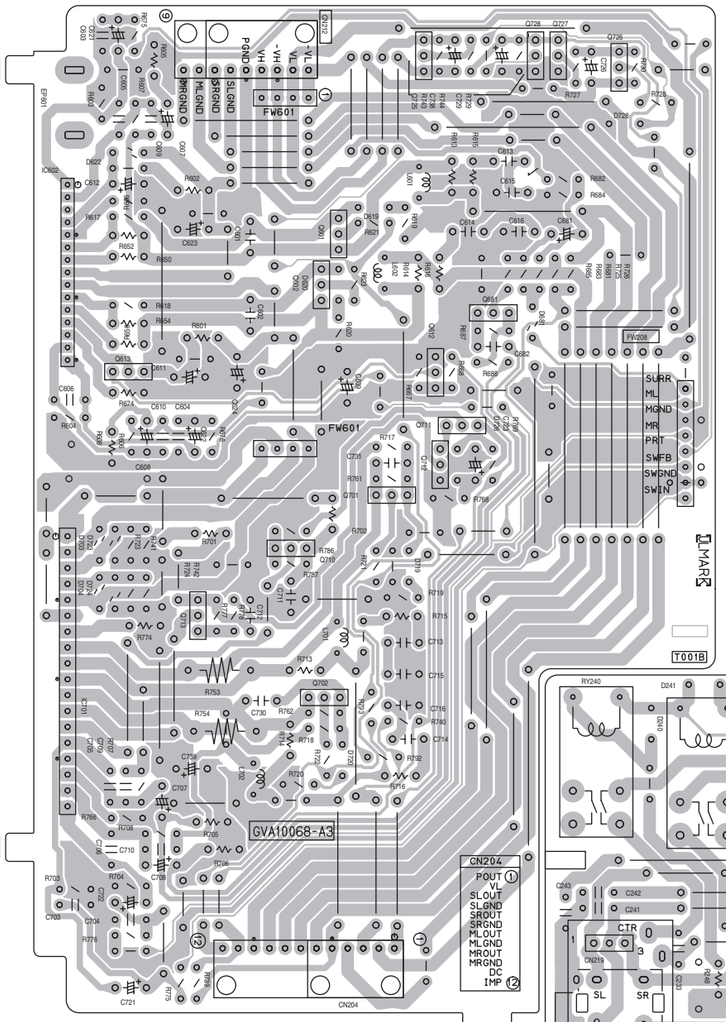

(Primary board)

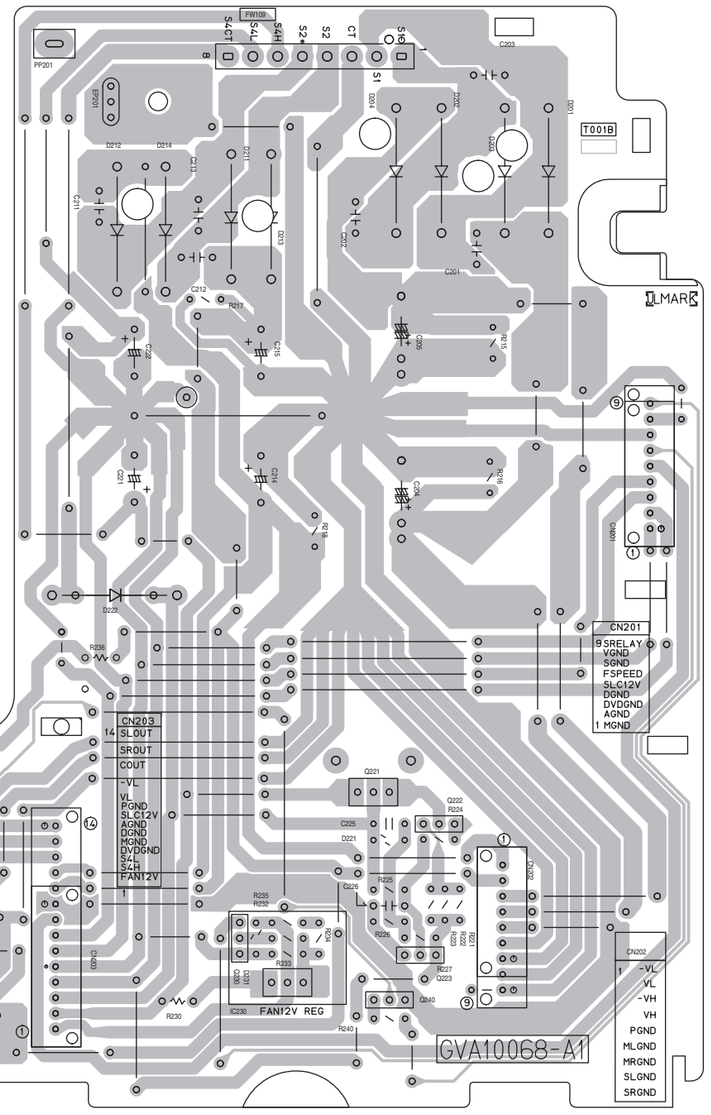

(Speaker terminal board)

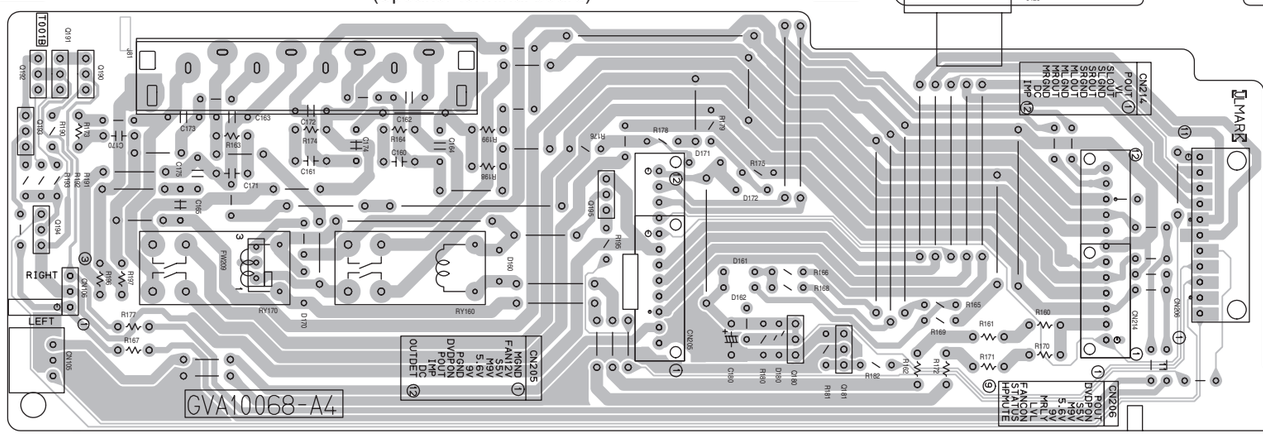

(Video board)

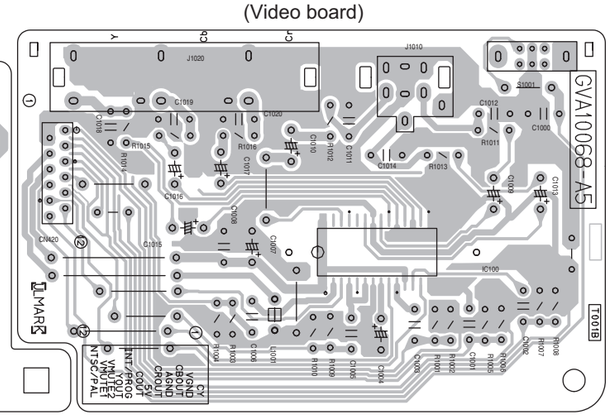

■ Input board

(Main board)

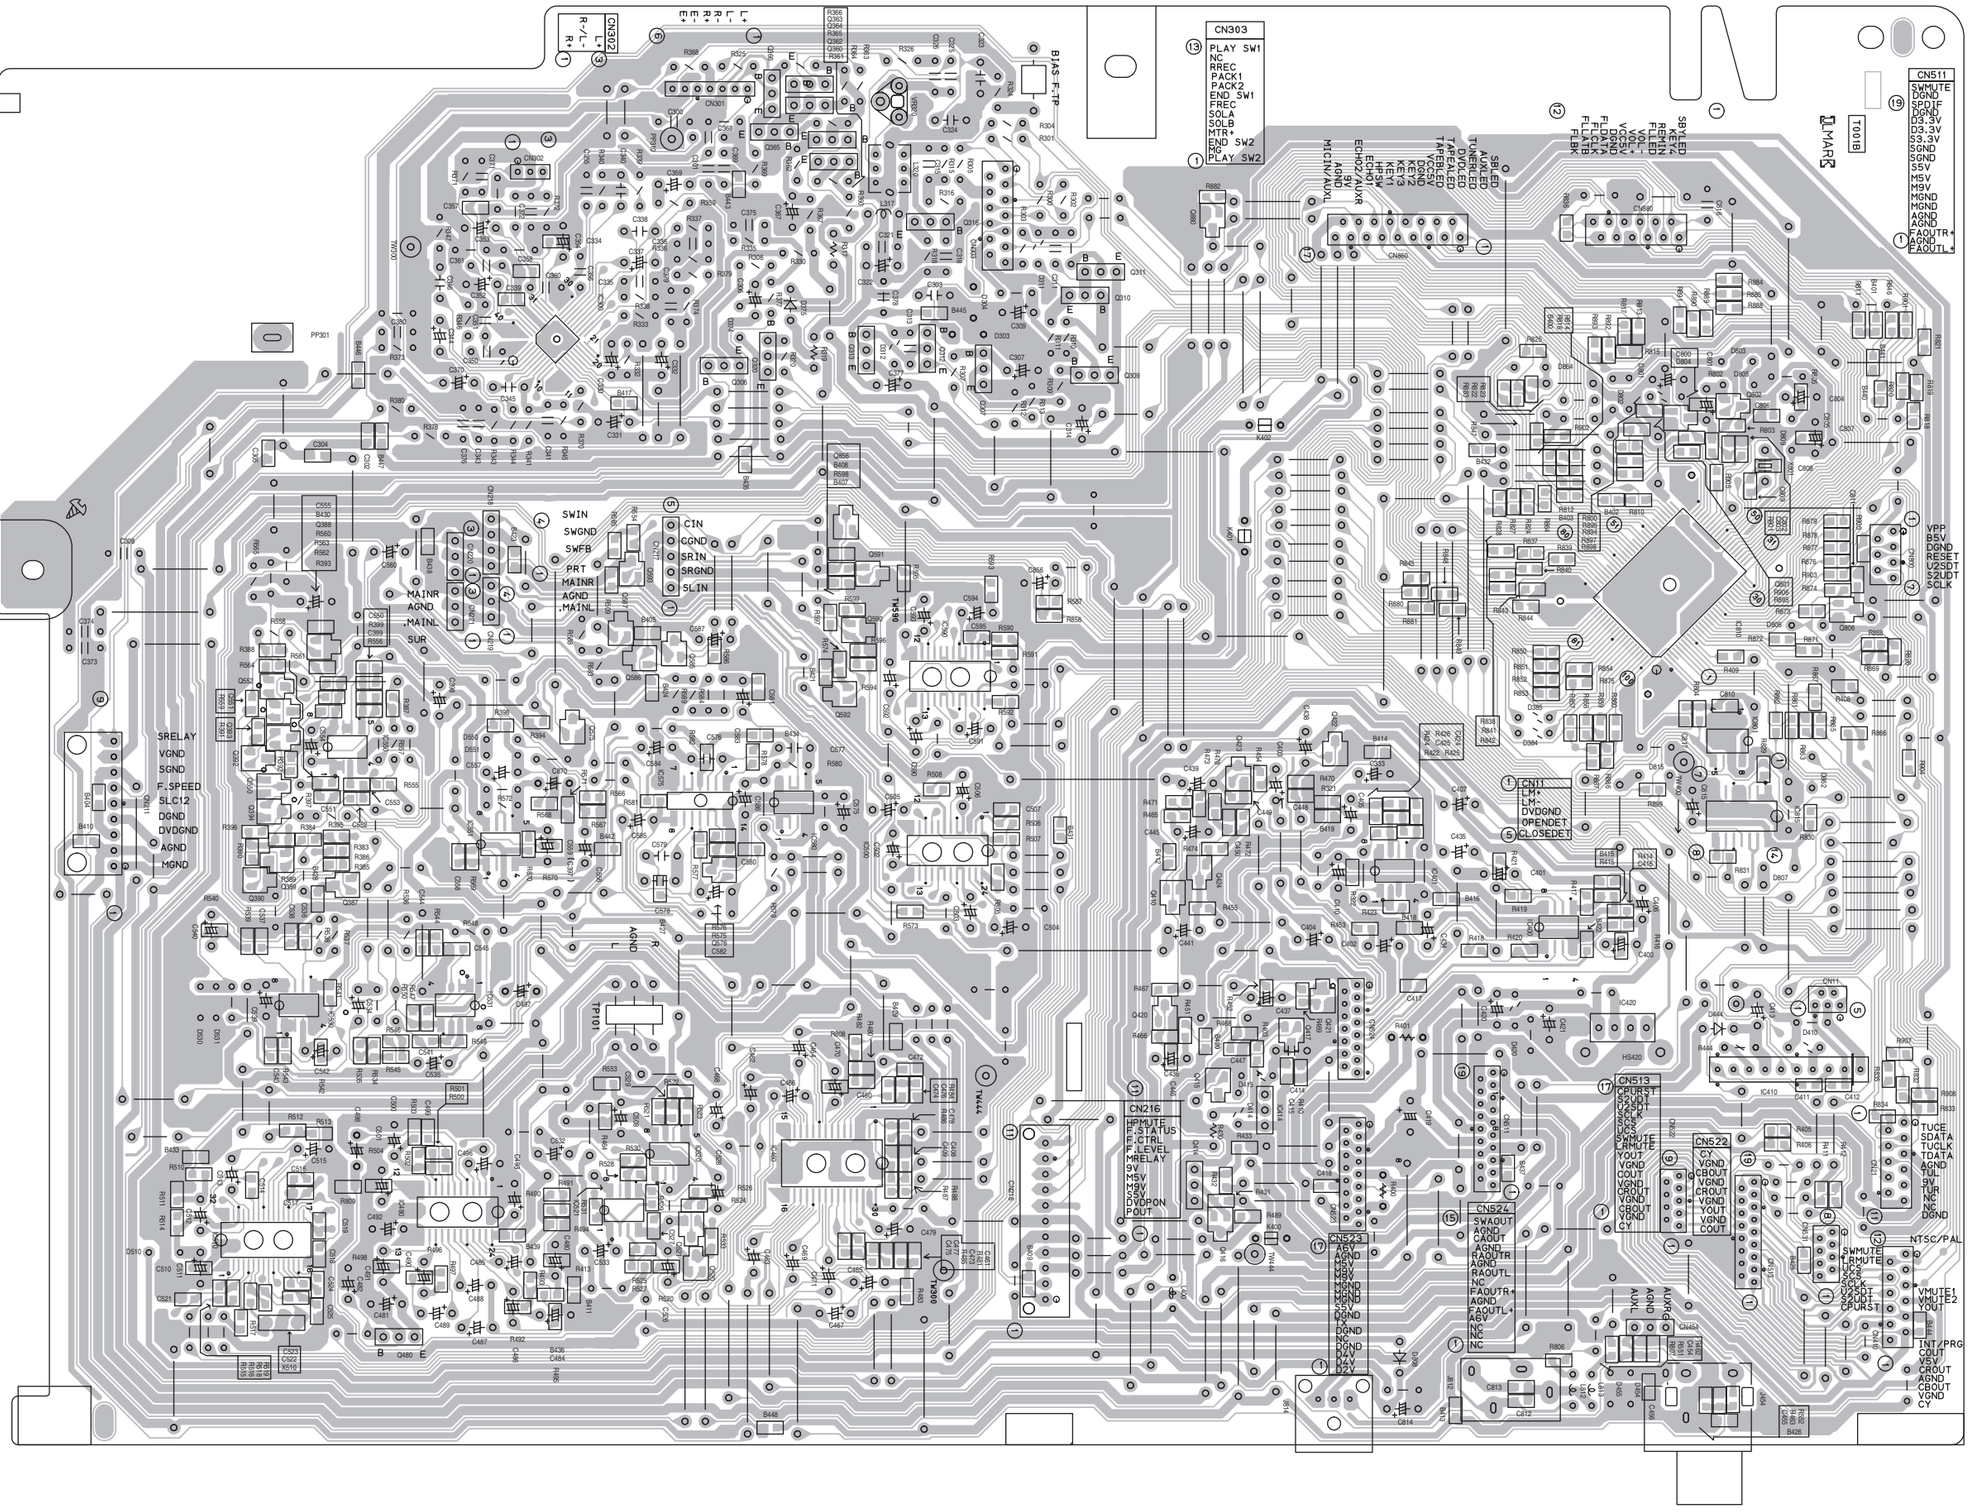

■ Front board

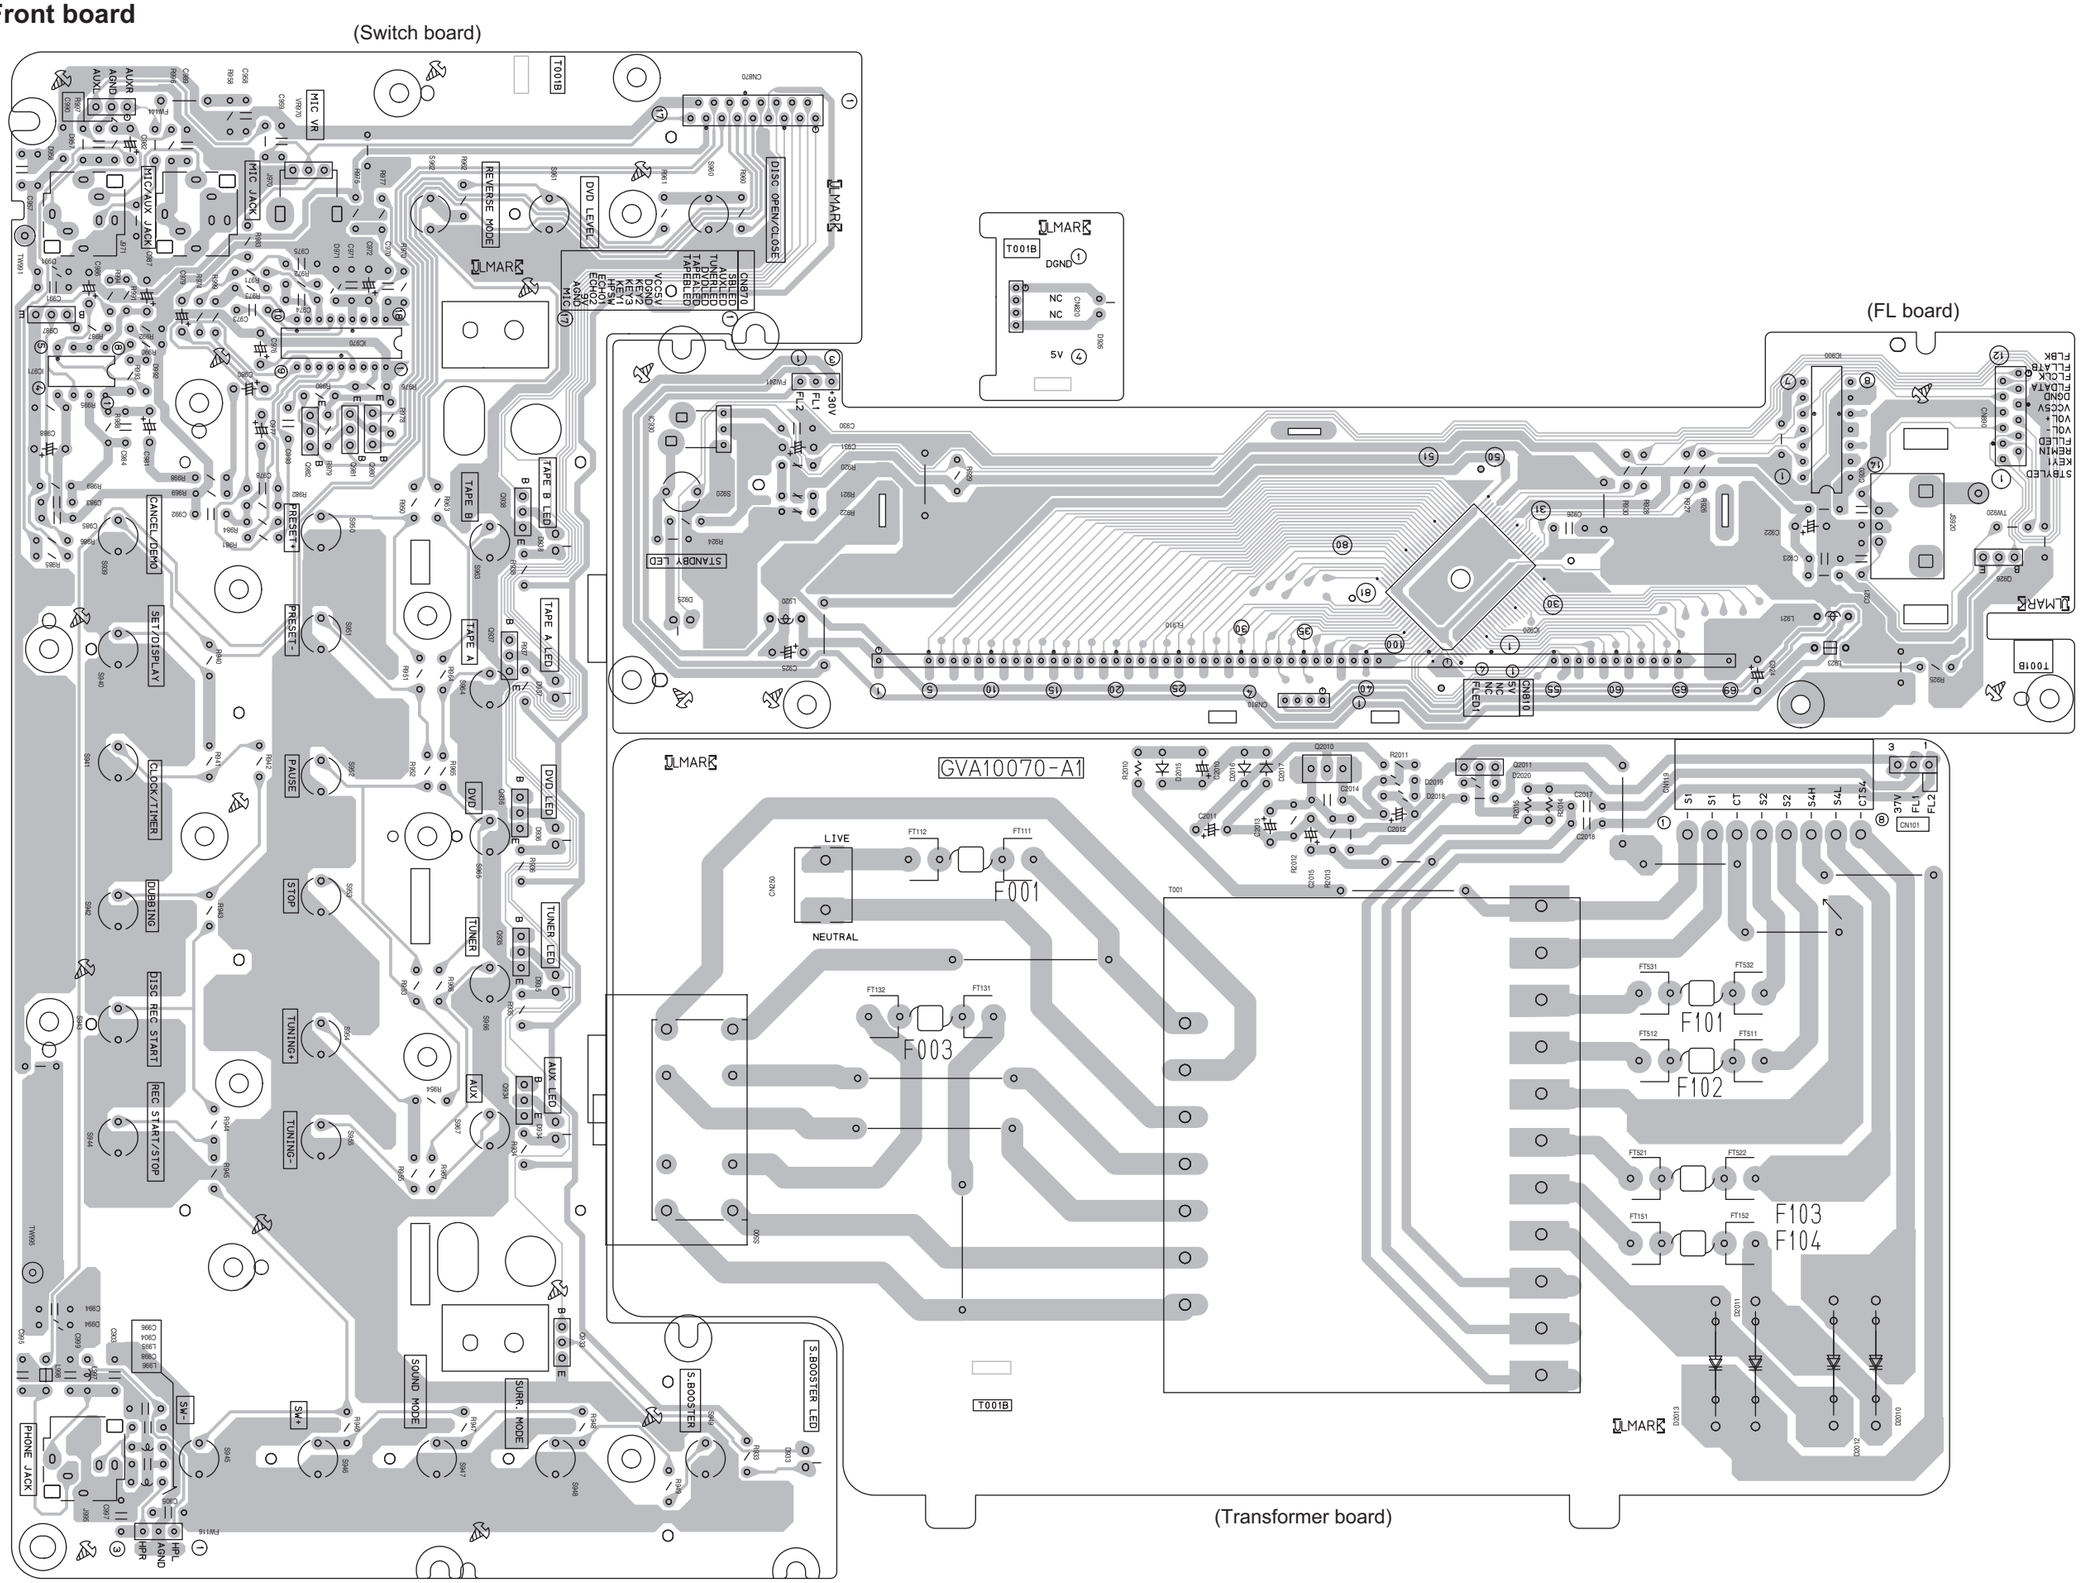
(Switch board)
(FL board)
(Transformer board)
GVA10070-A1
T001B
CN101
CN870
CN300
CN100
CN200
CN650
CN810
CN819
CN920
CN926
CN2010
CN2011
CN2012
CN2013
CN2014
CN2015
CN2016
CN2017
CN2018
CN2019
CN2020
T001
F001
F003
F101
F102
F103
F104
LIVE
NEUTRAL
DGND
NC
5V
VCC5V
VOL+
VOL-
FLCLK
FLDATA
FLCS
REMIN
KEY1
KEY2
STBYLED
FLBK
FLA1B
FL1
FL2
30V
37V
S1
CT
S2
S4H
S4L
CTS4
AUXL
AUXR
AGND
MIC VR
MIC JACK
MIC/AUX JACK
REVERSE MODE
DVD LEVEL
DISC OPEN/CLOSE
TAPE B
TAPE B LED
TAPE A
TAPE A LED
PRESET+
PRESET-
CANCEL/DEMO
SET/DISPLAY
CLOCK/TIMER
DUBBING
DISC REC START
REC START/STOP
PAUSE
STOP
TUNING+
TUNING-
DVD
DVD LED
TUNER
TUNER LED
AUX
AUX LED
SOUND MODE
SURR. MODE
S.BOOSTER
S.BOOSTER LED
PHONE JACK
HPL
AGND
HPR
STANDBY LED

■ DVD servo board

Forward side

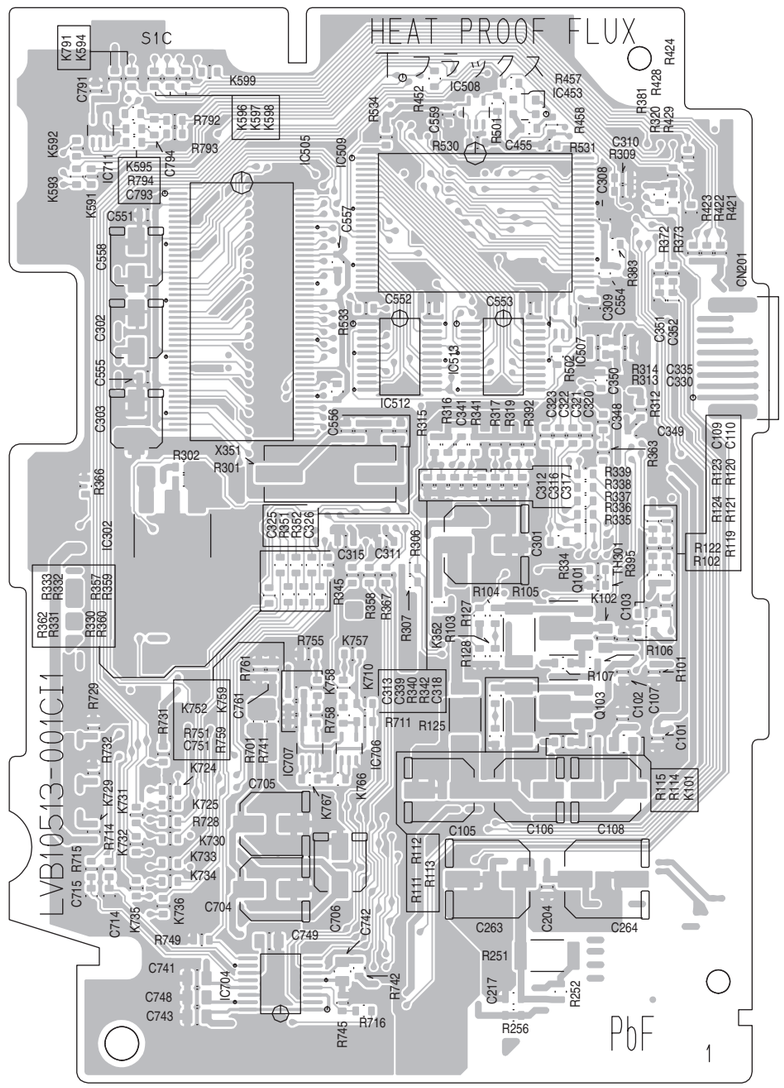

Reverse side

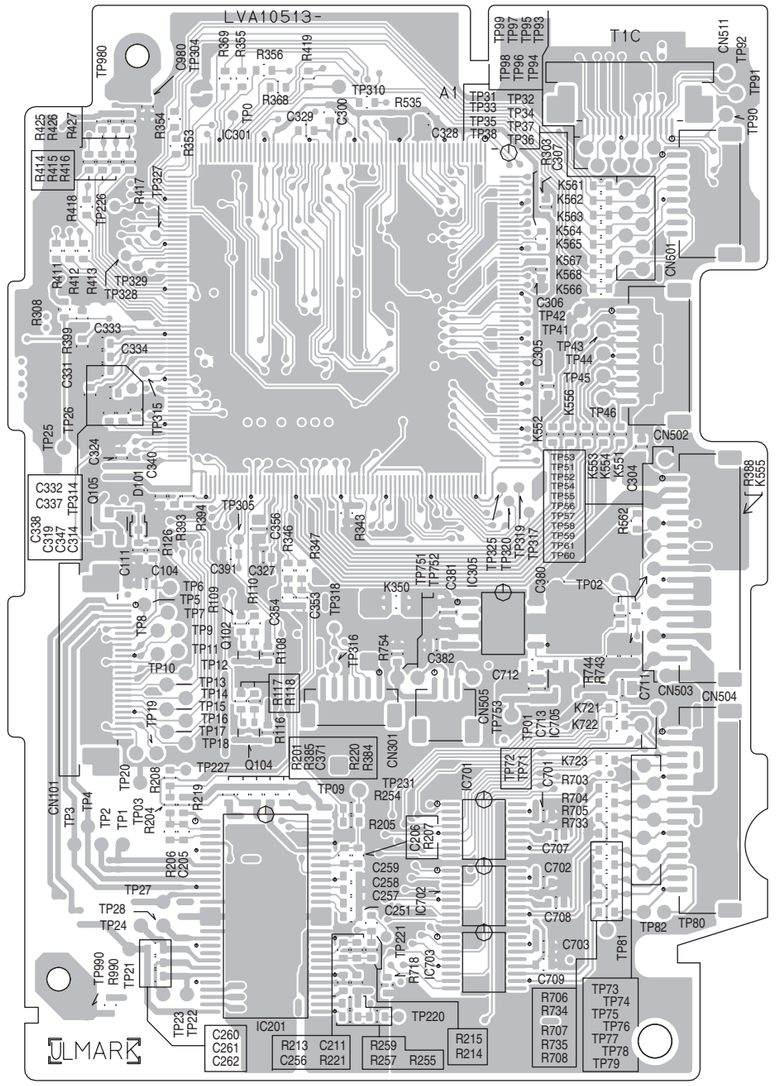

■ DVD loading switch board

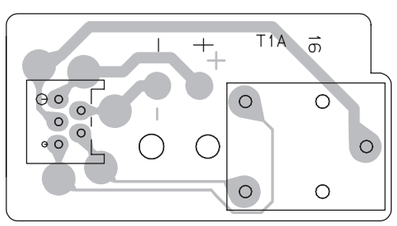

< MEMO >

JVC
Victor Company of Japan, Limited
AV & MULTIMEDIA COMPANY AUDIO/VIDEO SYSTEMS CATEGORY 10-1,1chome,Ohwatari-machi,Maebashi-city,371-8543,Japan

(No.MB282SCH)

Printed in Japan
WPC

PARTS LIST

[MX-JD8]

* All printed circuit boards and its assemblies are not available as service parts.

Area suffix
US ---------- Singapore
UW ---------- Brazil,Mexico,Peru
UX ---------- Saudi Arabia
UN ----------Asean

- Contents -

Exploded view of general assembly and parts list (Block No.M1) ---------- 3- 2
DVD mechanism assembly and parts list (Block No.MJ) ---------- 3- 6
DVD loading base assembly and parts list (Block No.MN) ---------- 3- 8
Electrical parts list (Block No.01~05) ---------- 3-10
Packing materials and accessories parts list (Block No.M3) ---------- 3-22

Exploded view of general assembly and parts list

Block No. M 1 M M

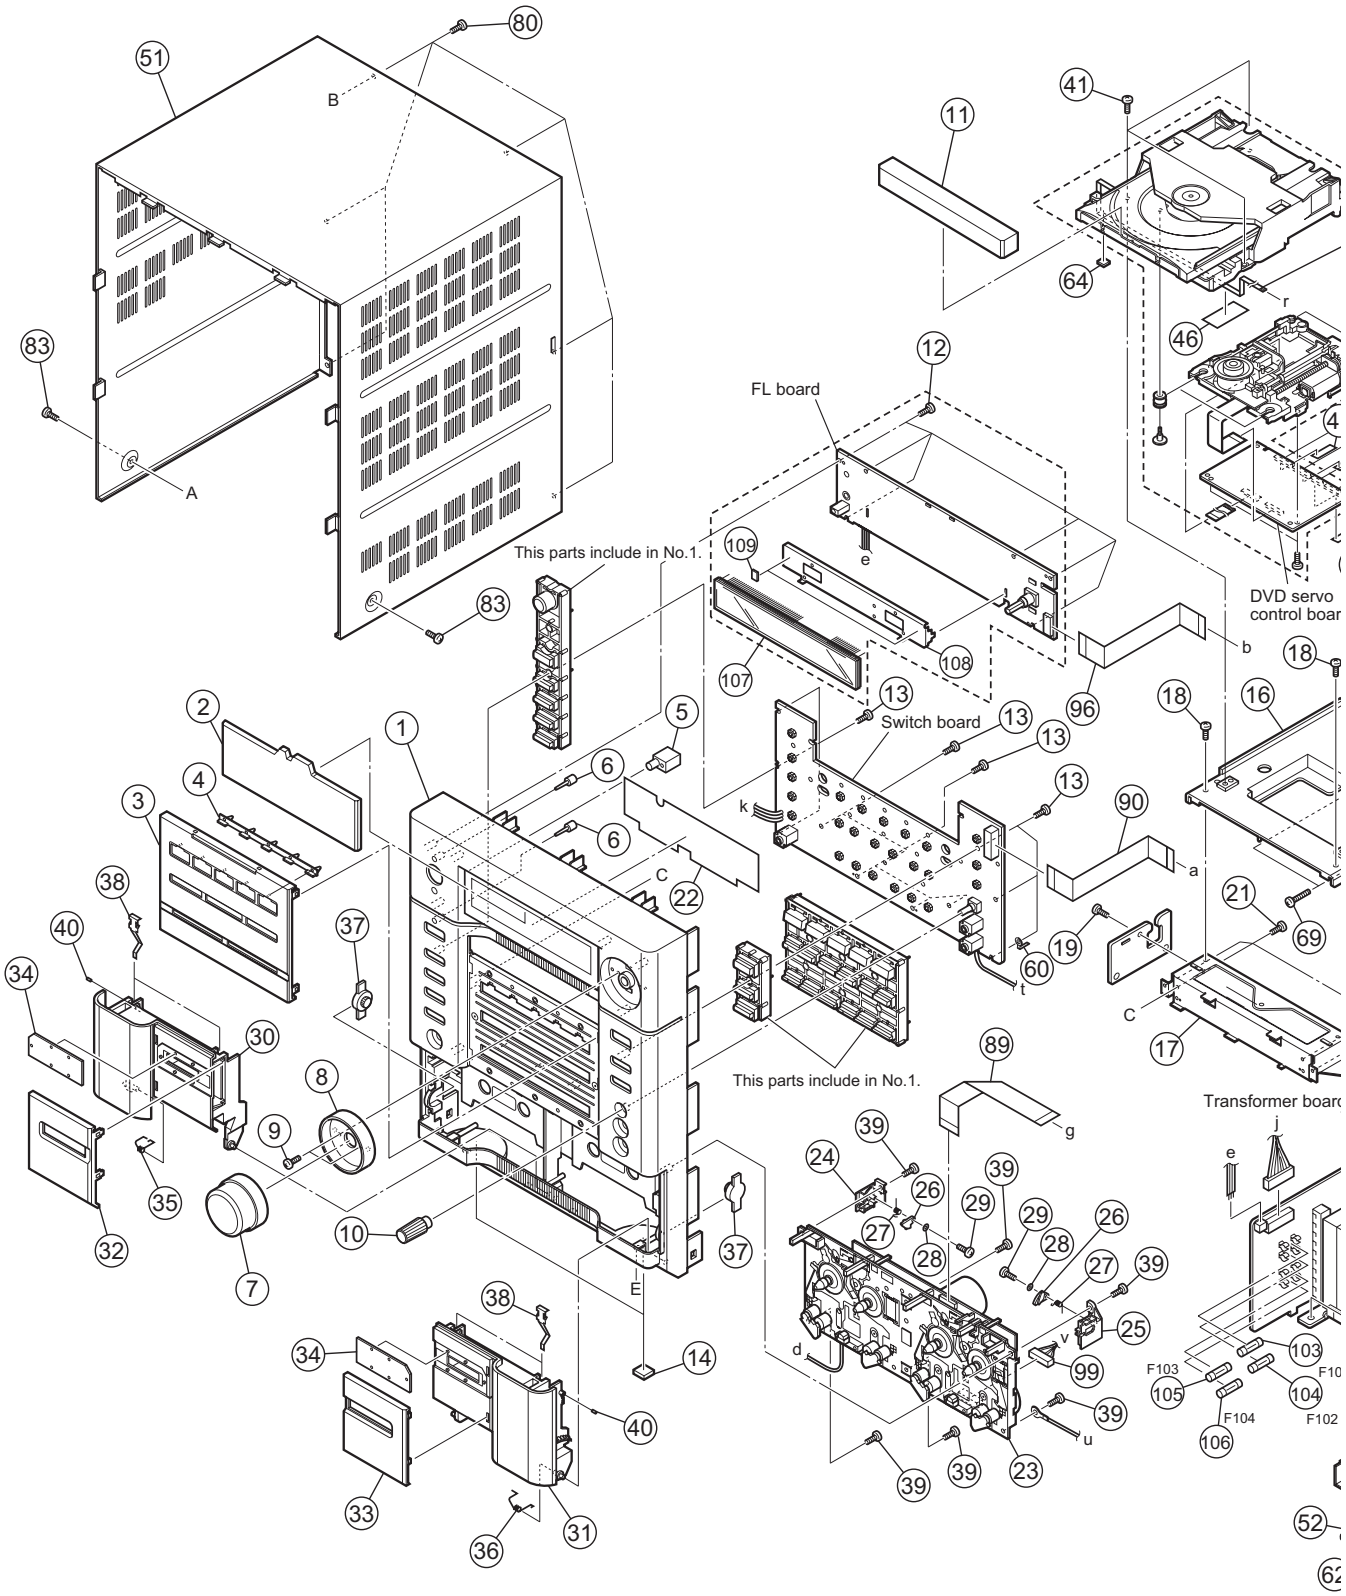

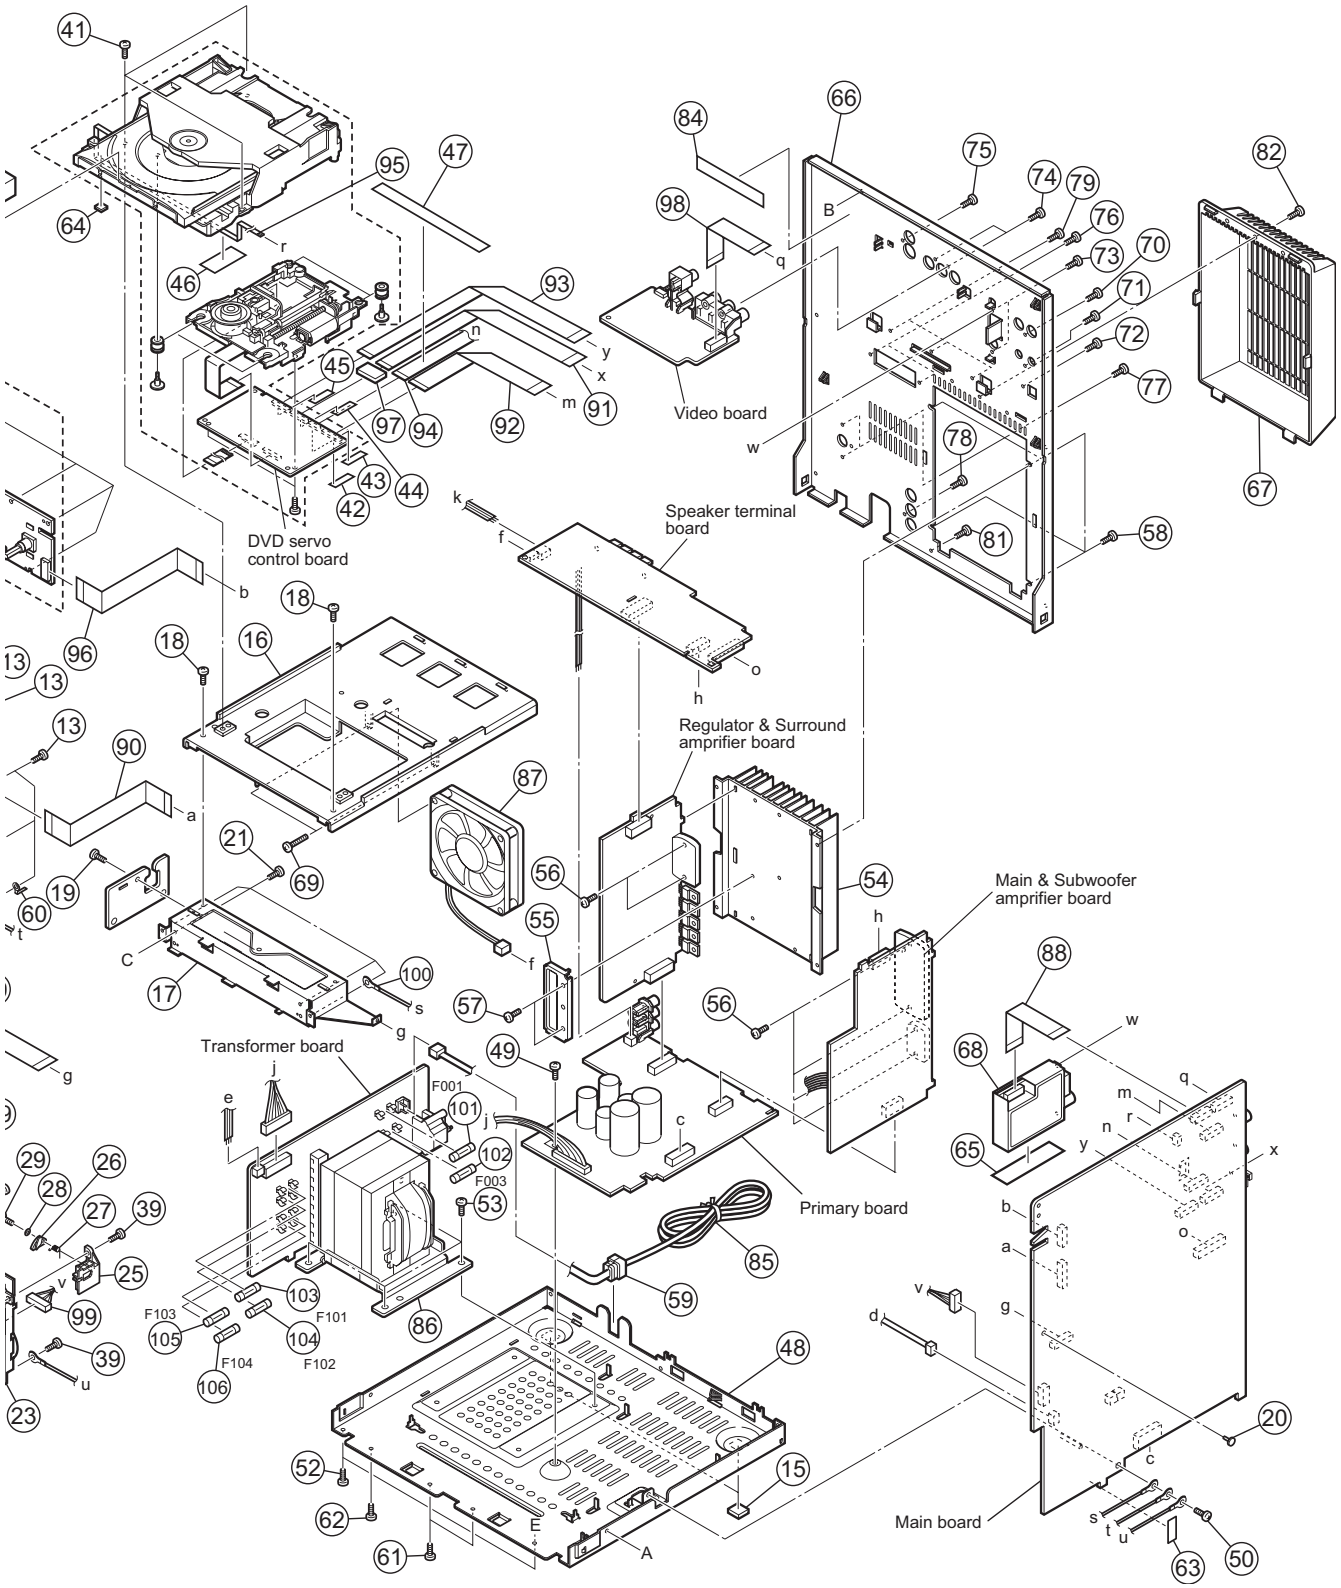
DVD servo control board
Video board
Speaker terminal board
Regulator & Surround amprifier board
Main & Subwoofer amprifier board
Transformer board
Primary board
Main board

General Assembly

Block No. [M][1][M][M]

⚠	Symbol No.	Part No.	Part Name	Description	Local
	1	GV10220-005A	FRONT PANEL ASSY		UW
	1	GV10220-001A	FRONT PANEL ASSY		UN,US,UX
	2	GV30576-001A	FL LENS		
	3	GV20277-004A	FRONT COVER		
	4	GV30577-001A	FUNC.INDICATOR		
	5	GV40485-002A	REMOTE LENS		
	6	GV40486-002A	INDICATOR LENS	(x2)	
	7	GV30580-001A	VOLUME KNOB		
	8	LV42979-003A	VOLUME RING		
	9	QYSDSF2608Z	TAP SCREW	M2.6 x 8mm(x2)	
	10	GV40083-004A	MIC.KNOB		UN,US,UX
	11	GV30583-001A	TRAY FITTING		
	12	QYSDSF2608Z	TAP SCREW	M2.6 x 8mm(x6)	
	13	QYSDSF2608Z	TAP SCREW	M2.6 x 8mm(x11)	
	14	GV40246-001A	FOOT SPACER	(x2)	
	15	GV40246-002A	FOOT SPACER	(x2)	
	16	GV10206-002A	CENTER CHASSIS		
	17	GV20275-001A	STAY BRACKET		
	18	QYSBSG3008Z	TAP SCREW	M3 x 8mm(x2)	
	19	QYSBSG3008Z	TAP SCREW	M3 x 8mm	
	20	E310243-002	PLASTIC RIVET		
	21	QYSDSF2608Z	TAP SCREW	M2.6 x 8mm(x4)	
	22	GV40512-002A	FL FILTER		
	23	CMAT5Z226	ALPS CASS.MECHA		
	24	GV40496-001A	SWING CAM(L)		
	25	GV40497-001A	SWING CAM(R)		
	26	GV40501-001A	SWING CAM	(x2)	
	27	GV40502-002A	SPRING	(x2)	
	28	GV40503-001A	WASHER	(x2)	
	29	GV40504-001A	SCREW	(x2)	
	30	GV10204-001A	CASS.HOLDER(L)		
	31	GV10205-001A	CASS.HOLDER(R)		
	32	GV20278-003A	CASS.COVER (L)		
	33	GV20279-003A	CASS.COVER (R)		
	34	GV40487-001A	CASS.LENS	(x2)	
	35	GV40489-001A	DOOR SPRING		
	36	GV40490-001A	DOOR SPRING(R)		
	37	GV40034-001A	DAMPER ASSY.	(x2)	
	38	VKY4180-401	CASSETTE SPRING	(x4)	
	39	QYSBSF3010Z	TAP SCREW	M3 x 10mm(x6)	
	40	GV40515-001A	METAL PIN	(x2)	
	41	QYSBSF3012Z	TAP SCREW	M3 x 12mm(x3)	
	42	LV30225-011A	SPACER		
	43	LV30225-011A	SPACER		
	44	LV30225-011A	SPACER		
	45	LV30225-011A	SPACER		
	46	LV30225-011A	SPACER		
	47	GV30349-003A	SPACER		
	48	GV10209-001A	BOTTOM CHASSIS		
	49	QYSBSGG3008E	TAP SCREW	M3 x 8mm	
	50	QYSBSGG3008E	TAP SCREW	M3 x 8mm	
	51	GV10217-003A/S/	METAL COVER		
	52	QYSBSG3010Z	TAP SCREW	M3 x 10mm(x2)	
	53	QYSDSTL4008Z	TAP SCREW	M4 x 8mm(x4)	
	54	GV30581-002A	HEAT SINK		
	55	GV40488-001A	LEAF SPRING		
	56	QYSBSG3014E	TAP SCREW	M3 x 14mm(x6)	
	57	QYSBSG3014E	TAP SCREW	M3 x 14mm(x2)	
	58	QYSBSGY3008E	TAP SCREW	M3 x 8mm(x4)	
	59	QZW0033-001	STRAIN RELIEF		
	60	VKZ4001-110S	WIRE HOLDER		
	61	QYSSST3006Z	TAP SCREW	M3 x 6mm(x2)	
	62	QYSBSG3010Z	TAP SCREW	M3 x 10mm	
	63	GV30349-003A	SPACER		
	64	E3400-431	SPECER		
	65	GV30349-005A	SPACER		
	66	GV10207-020A	REAR PANEL		UN,US
	66	GV10207-021A	REAR PANEL		UW
	66	GV10207-019A	REAR PANEL		UX
	67	GV10208-001A	REAR COVER		
	68	QAU0346-001	TUNER	TU 1	
	69	QYSBSF3035Z	TAP SCREW	M3 x 35mm(x2)	
	70	QYSBSGY3008E	TAP SCREW	M3 x 8mm	UN,US,UX
	71	QYSBSGY3008E	TAP SCREW	M3 x 8mm	

⚠	Symbol No.	Part No.	Part Name	Description	Local
	72	QYSBSGY3008E	TAP SCREW	M3 x 8mm	
	73	QYSBSGY3008E	TAP SCREW	M3 x 8mm(x2)	
	74	QYSBSGY3008E	TAP SCREW	M3 x 8mm(x2)	
	75	QYSBSGY3008E	TAP SCREW	M3 x 8mm	
	76	QYSBSGY3008E	TAP SCREW	M3 x 8mm(x2)	
	77	QYSBSF3012E	TAP SCREW	M3 x 12mm(x2)	
	78	QYSBSGY3008E	TAP SCREW	M3 x 8mm	
	79	QYSBSGY3008E	TAP SCREW	M3 x 8mm(x3)	
	80	QYSBSGY3008E	TAP SCREW	M3 x 8mm(x6)	
	81	QYSBSGY3008E	TAP SCREW	M3 x 8mm	
	82	QYSBSGY3008E	TAP SCREW	M3 x 8mm	
	83	QYSDSG3006N	TAP SCREW	M3 x 6mm(x2)	
	84	LV41843-002A	LASER CAUTION		
⚠	85	QMPK210-205-JN	POWER CORD(EU)	2.05m BLACK	UN,US,UW
⚠	85	QMPR290-200-JN	POWER CORD(EU)	2m BLACK	UX
⚠	86	QQT0439-001	POWER TRANSF		
	87	QAR0317-001	FAN		
	88	QUQH12-1108AJ	FFC WIRE	FC21 11pin 8cm	
	89	QUQH12-1314AJ	FFC WIRE	FC303 13pin 14cm	
	90	QUQH12-1714BJ	FFC WIRE	FC860 17pin 14cm	
	91	QUQH10-1721BJ	FFC WIRE	FC523 17pin 21cm	
	92	QUQH10-0825BJ	FFC WIRE	FC531 8pin 25cm	
	93	QUQH10-1522BJ	FFC WIRE	FC524 15pin 22cm	
	94	QUQH10-0922BJ	FFC WIRE	FC522 9pin 22cm	
	95	QUQH10-0541BJ	FFC WIRE	FC11 5pin 41cm	
	96	QUQH12-1211AJ	FFC WIRE	FC880 12pin 11cm	
	97	QQR1259-002	FERRITE CORE	FB 651	
	98	QUQH12-1210AJ	FFC WIRE	FC410 12pin 10cm	
	99	WJN0074-003A	SIGNAL WIRE	FW 301	
	100	WJZ0137-001A	S.WIRE	TW 992	
⚠	101	QMF51W2-5R0-J8	FUSE	F001 5A AC250V	
⚠	102	QMF51W2-2R5-J8	FUSE	F003 2.5A AC250V	
⚠	103	QMF51W2-6R3-J8	FUSE	F101 6.3A AC250V	
⚠	104	QMF51W2-6R3-J8	FUSE	F102 6.3A AC250V	
⚠	105	QMF51W2-2R0-J8	FUSE	F103 2A AC250V	
⚠	106	QMF51W2-3R15-J8	FUSE	F104 3.15A AC250V	
	107	QLF0136-001	FL TUBE	FL 910	
	108	GV30507-001A	FL HOLDER		
	109	GV30349-021A	SPACER	(x2)	

DVD mechanism assembly and parts list

Block No. M J M M

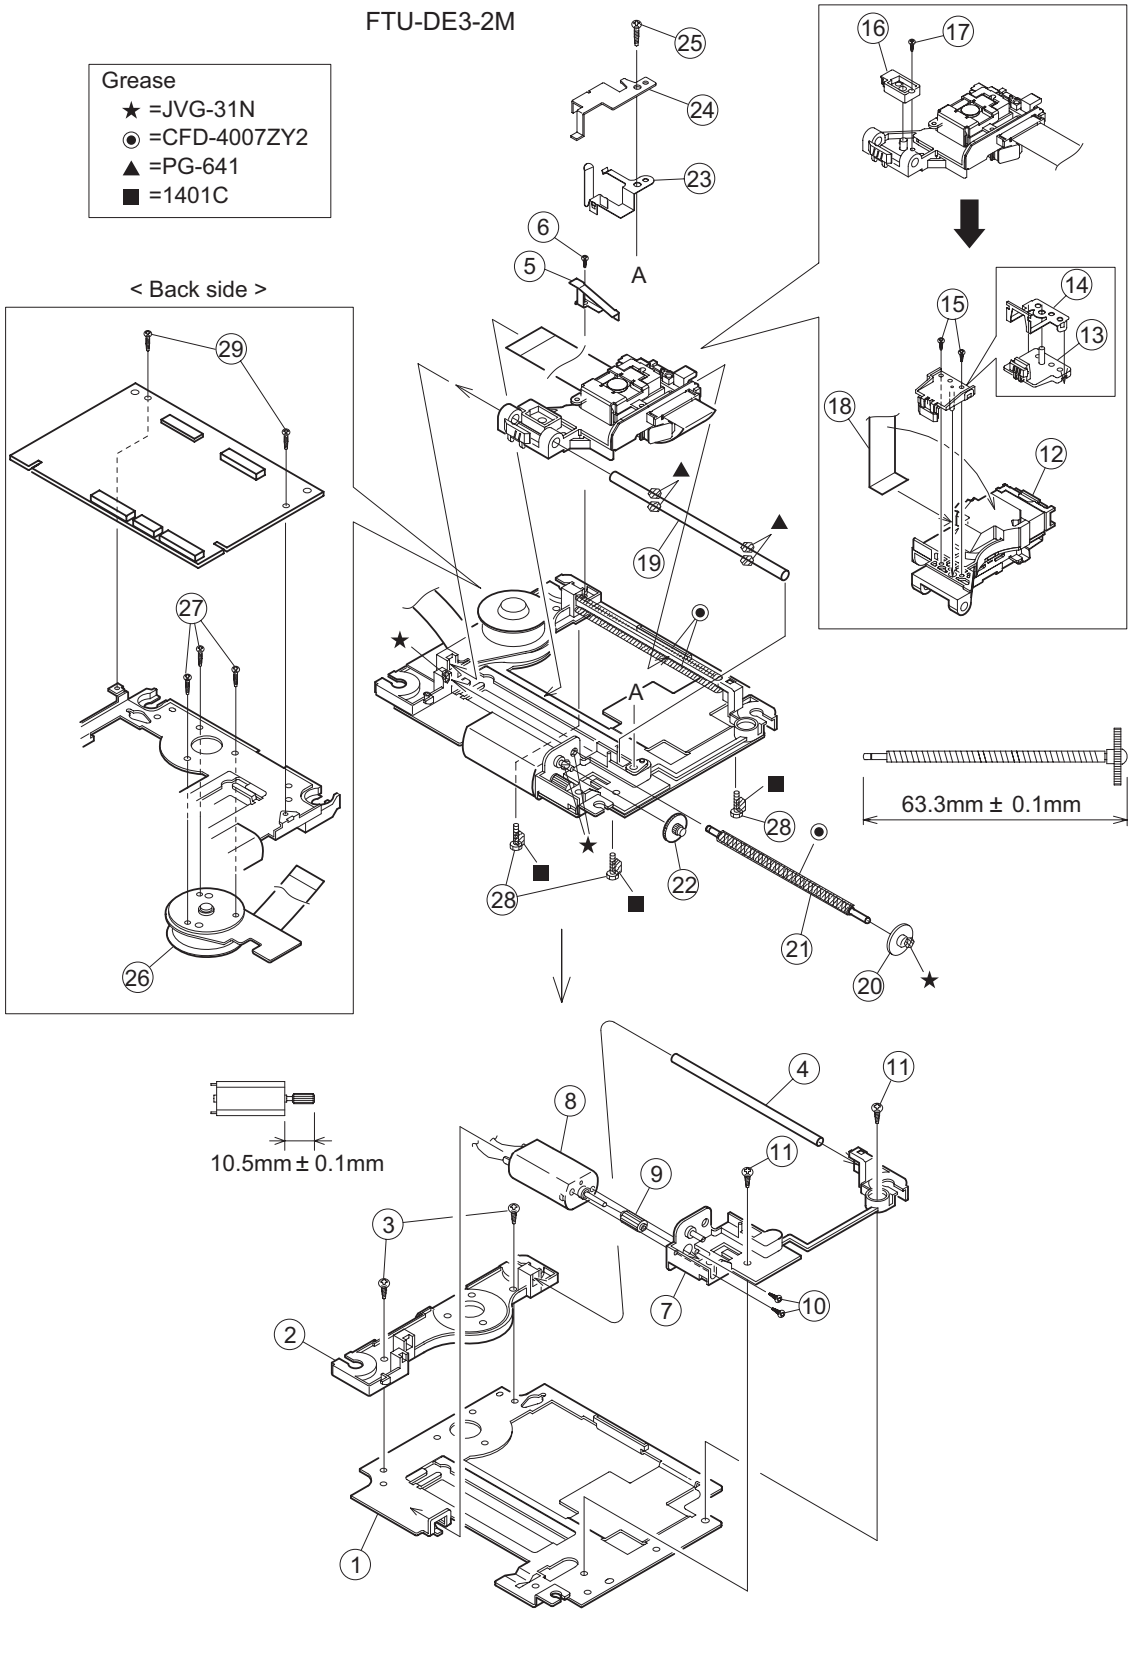

DVD mechanism

Block No. [M][J][M][M]

⚠	Symbol No.	Part No.	Part Name	Description	Local
	1	LE20725-001A	MECHA BASE		
	2	LE20699-002A	SPINDLE BASE		
	3	QYSDST2605M	TAP SCREW	M2.6 x 5mm(x2)	
	4	LE40931-001A	SHAFT		
	5	LV33991-001A	ADJUST SPRING		
	6	QYSPSFU2040M	TAP SCREW	M2 x 4mm	
	7	LE20698-004A	FEED HOLDER		
	8	QAR0215-001	FEED MOTOR		
	9	LV41510-201A	FEED GEAR T		
	10	QYSPSPU2040M	SCREW	M2 x 4mm(x2)	
	11	QYSDST2605M	TAP SCREW	M2.6 x 5mm(x2)	
	12	QAL0507-001	PICK UP		
	13	LE20700-001A	SW ACTUATOR		
	14	LE31067-002A	LEAD SPRING		
	15	QYSPSFU1740Z	TAP SCREW	M1.7 x 4mm(x2)	
	16	LE40929-001A	SW.LEVER		
	17	QYSPSFU1740Z	TAP SCREW	M1.7 x 4mm	
	18	QUQ105-2411AC	FFC		
	19	LE40931-001A	SHAFT		
	20	LE40855-002A	FEED GEAR E		
	21	LV41517-003A	LEAD SCREW		
	22	LE40930-001A	FEED GEAR M		
	23	LE40928-002A	THURUST SPRING		
	24	LE40927-002A	PLATE		
	25	QYSDST2614Z	TAP SCREW	M2.6 x 14mm	
	26	QAR0316-001	SPINDLE MOTOR		
	27	QYSPSPU1740Z	SCREW	M1.7 x 4mm(x3)	
	28	LE40858-002A	SPECIAL SCREW	(x3)	
	29	QYSDST2004Z	TAP SCREW	M2 x 4mm(x2)	

DVD loading base assembly and parts list

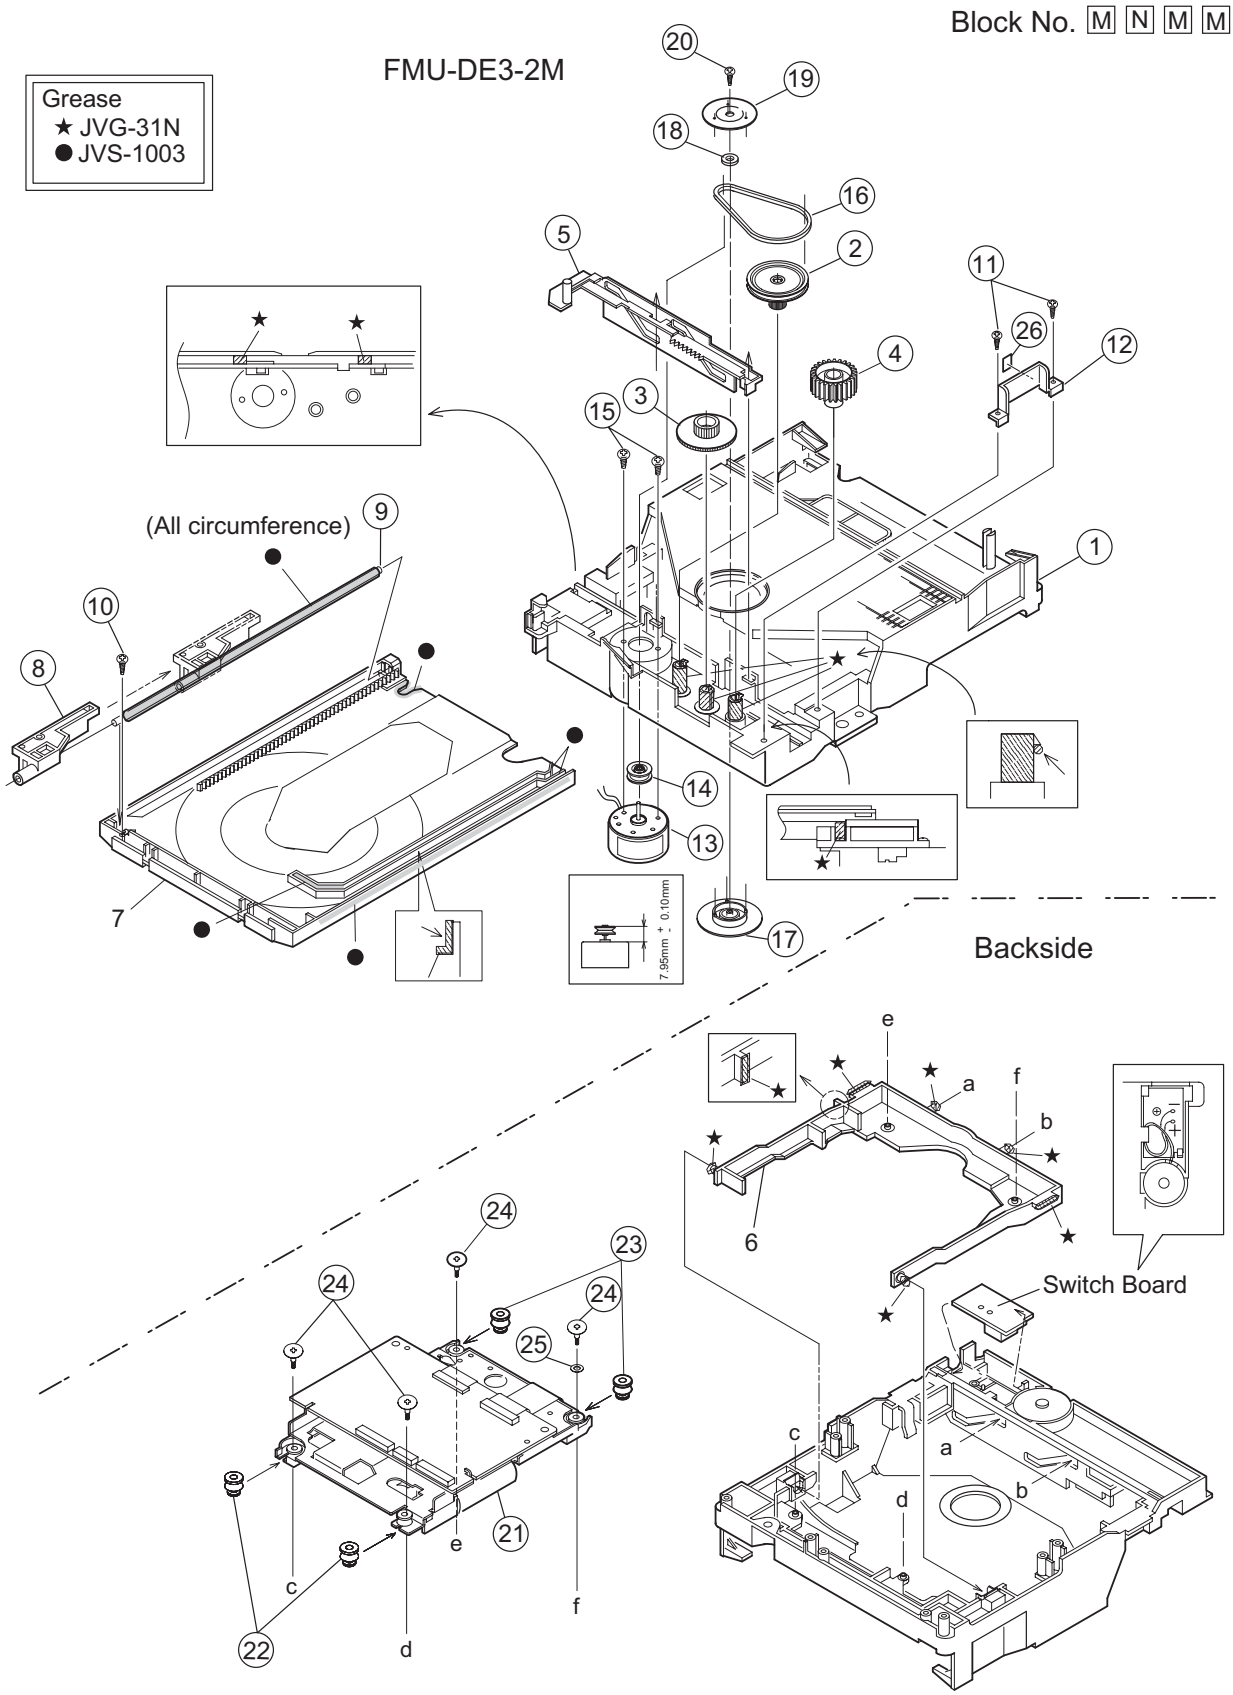

DVD loading base

Block No. [M][N][M][M]

⚠	Symbol No.	Part No.	Part Name	Description	Local
	1	LE10275-006A	LOADING BASE		
	2	LE31043-001A	PULLEY GEAR		
	3	LE31042-001A	MIDDLE GEAR		
	4	LE31044-001A	IDLE GEAR		
	5	LE20665-005A	SLIDE CAM		
	6	LE20666-003A	ELEVATOR		
	7	LE10276-002A	TRAY		
	8	LE31045-001A	BUSHING		
	9	LE40898-001A	SHAFT		
	10	QYSSSF2008Z	TAP SCREW	M2 x 8mm	
	11	QYSDSF2008Z	TAP SCREW	M2 x 8mm(x2)	
	12	LE40937-002A	LEAF SPRING		
	13	QAR0197-001	MOTOR		
	14	LV42087-002A	MOTOR PULLEY		
	15	QYSPSPU1730Z	SCREW	M1.7 x 3mm(x2)	
	16	LE40897-001A	BELT		
	17	LE31046-003A	CLAMPER		
	18	LV42930-003A	P.C.MAGNET		
	19	LE40899-001A	YOKE		
	20	LE40906-001A	SPECIAL SCREW		
	21	----------	DVD TRAMECHA		
	22	LE40900-003A	INSULATOR	(x2)	
	23	LE40900-005A	INSULATOR	(x2)	
	24	LE40901-001A	SPECIAL SCREW	(x4)	
	25	QYWFM419025	WASHER	9mm/4.1mm x 0.25mm	
	26	LV43828-001A	SPACER		

Electrical parts list

Power board

Block No. [0][1]

⚠ Symbol No.	Part No.	Part Name	Description	Local
IC100	MM1623XF-X	IC		
⚠ IC121	STK402-240	IC		
⚠ IC230	KIA317PI	IC		
⚠ IC250	PQ05RD21	IC		
⚠ IC260	KIA7809API	IC		
⚠ IC270	KIA7805API	IC		
⚠ IC280	KIA7812API	IC		
⚠ IC290	KIA7809API	IC		
⚠ IC602	STK432-070	IC		
⚠ IC701	STK412-430	POWER I.C		
Q125	KTC3199/GL/-T	TRANSISTOR		
Q126	KTC3199/GL/-T	TRANSISTOR		
Q127	KTC3199/GL/-T	TRANSISTOR		
Q175	KTA1267/YG/-T	TRANSISTOR		
Q176	KRC102M-T	DIGI TRANSISTOR		
Q181	KTC3203/OY/-T	TRANSISTOR		
Q190	2SC3576-JVC-T	TRANSISTOR		
Q191	2SC3576-JVC-T	TRANSISTOR		
Q192	2SC3576-JVC-T	TRANSISTOR		
Q193	2SC3576-JVC-T	TRANSISTOR		
Q194	KRA111M-T	DIGI TRANSISTOR		
Q195	KTC3199/GL/-T	TRANSISTOR		
⚠ Q221	KTA1046/Y/	TRANSISTOR		
Q222	KTC3199/GL/-T	TRANSISTOR		
Q223	KTC3199/GL/-T	TRANSISTOR		
Q230	KRC102M-T	DIGI TRANSISTOR		
Q240	KTC3199/GL/-T	TRANSISTOR		
Q601	KTC3199/GL/-T	TRANSISTOR		
Q602	KTC3199/GL/-T	TRANSISTOR		
Q612	KTA1267/YG/-T	TRANSISTOR		
Q613	KRC102M-T	DIGI TRANSISTOR		
Q701	KTC3199/GL/-T	TRANSISTOR		
Q702	KTC3199/GL/-T	TRANSISTOR		
Q710	KTA1023/OY/-T	TRANSISTOR		
Q711	KTC3200/GL/-T	TRANSISTOR		
Q712	KTA1268/GL/-T	TRANSISTOR		
Q713	KTC1027/OY/-T	TRANSISTOR		
Q725	KTA1023/OY/-T	TRANSISTOR		
Q726	KTC1027/OY/-T	TRANSISTOR		
Q727	KTA1023/OY/-T	TRANSISTOR		
Q728	KTC3199/GL/-T	TRANSISTOR		
D102	1SS133-T2	DIODE		
D103	1SS133-T2	DIODE		
D104	1SS133-T2	DIODE		
D121	MTZJ9.1B-T2	Z DIODE		
D122	1SS133-T2	DIODE		
D123	1SS133-T2	DIODE		
D124	1SS133-T2	DIODE		
D125	MTZJ9.1B-T2	Z DIODE		
D160	1SS133-T2	DIODE		
D161	1SS133-T2	DIODE		
D162	1SS133-T2	DIODE		
D170	1SS133-T2	DIODE		
D171	1SS133-T2	DIODE		
D172	1SS133-T2	DIODE		
D180	MTZJ5.1B-T2	Z DIODE		
⚠ D201	1N5402M-20	DIODE		
⚠ D202	1N5402M-20	DIODE		
⚠ D203	1N5402M-20	DIODE		
⚠ D204	1N5402M-20	DIODE		
⚠ D211	1N5402M-20	DIODE		
⚠ D212	1N5402M-20	DIODE		
⚠ D213	1N5402M-20	DIODE		
⚠ D214	1N5402M-20	DIODE		
D221	MTZJ5.6C-T2	Z DIODE		
⚠ D222	2A02-M	DIODE		
D231	MTZJ13B-T2	Z DIODE		
D240	1SS133-T2	DIODE		
D241	1SS133-T2	DIODE		
D250	MTZJ5.6C-T2	Z DIODE		
D260	MTZJ11B-T2	Z DIODE		
D270	1SS133-T2	DIODE		
D271	MTZJ6.8C-T2	Z DIODE		
D280	MTZJ15B-T2	Z DIODE		
D290	MTZJ11B-T2	Z DIODE		
D619	1SS133-T2	DIODE		
D620	1SS133-T2	DIODE		
D622	MTZJ9.1B-T2	Z DIODE		
D703	MTZJ15B-T2	Z DIODE		
D704	MTZJ15B-T2	Z DIODE		
D719	1SS133-T2	DIODE		
D720	1SS133-T2	DIODE		
D723	MTZJ36B-T2	Z DIODE		
D724	MTZJ36B-T2	Z DIODE		
D726	1SS133-T2	DIODE		
D728	1SS133-T2	DIODE		
C121	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C122	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C123	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C124	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C125	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C126	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C128	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J	
C129	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J	
C130	QCSB1HJ-100Y	C CAPACITOR	10pF 50V J	
C131	QETN1JM-476Z	E CAPACITOR	47uF 63V M	
C133	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J	
C134	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J	
C135	QCSB1HJ-100Y	C CAPACITOR	10pF 50V J	
C136	QETN1JM-476Z	E CAPACITOR	47uF 63V M	
C138	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J	
C139	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J	
C140	QCSB1HJ-100Y	C CAPACITOR	10pF 50V J	
C141	QETN1JM-476Z	E CAPACITOR	47uF 63V M	
C142	QETN1HM-107Z	E CAPACITOR	100uF 50V M	
C143	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C144	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C145	QETN1HM-107Z	E CAPACITOR	100uF 50V M	
C146	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C147	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C148	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C149	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C162	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C163	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C164	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C165	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C172	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C173	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C174	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C175	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C180	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C201	QFKC2EK-103Z	MM CAPACITOR	0.01uF 250V K	
C202	QFKC2EK-103Z	MM CAPACITOR	0.01uF 250V K	
C203	QFKC2EK-104Z	MM CAPACITOR	0.1uF 250V K	
C204	QEZ0706-478	E CAPACITOR	4700uF	
C205	QEZ0706-478	E CAPACITOR	4700uF	
C211	QFLC2AJ-103Z	M CAPACITOR	0.01uF 100V J	
C212	QFLC2AJ-103Z	M CAPACITOR	0.01uF 100V J	
C213	QFKC2EK-104Z	MM CAPACITOR	0.1uF 250V K	
C214	EETB1HM-228JC	E CAPACITOR		
C215	EETB1HM-228JC	E CAPACITOR		
C221	QETM1EM-828	E CAPACITOR	8200uF 25V M	
C222	EETB1CM-828JC	E CAPACITOR		
C225	QCBB1HK-103Y	C CAPACITOR	0.01uF 50V K	
C226	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C231	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C232	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C233	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C241	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C242	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C243	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C250	QFVF1HJ-334Z	MF CAPACITOR	0.33uF 50V J	
C251	QETN1EM-477Z	E CAPACITOR	470uF 25V M	
C260	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C261	QETN1CM-227Z	E CAPACITOR	220uF 16V M	

⚠ Symbol No.	Part No.	Part Name	Description	Local
C270	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C271	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C280	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C281	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C290	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C291	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C601	FQCF31HZ-223Z	D.CAPACITOR		
C602	FQCF31HZ-223Z	D.CAPACITOR		
C603	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C604	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C605	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C606	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C607	QETN1JM-476Z	E CAPACITOR	47uF 63V M	
C608	QETN1JM-476Z	E CAPACITOR	47uF 63V M	
C609	QCSB1HJ-100Y	C CAPACITOR	10pF 50V J	
C610	QCSB1HJ-100Y	C CAPACITOR	10pF 50V J	
C611	QETN1HM-107Z	E CAPACITOR	100uF 50V M	
C612	QETN1HM-107Z	E CAPACITOR	100uF 50V M	
C613	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J	
C614	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J	
C615	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J	
C616	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J	
C621	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C622	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C623	QTE1H28-106Z	E CAPACITOR	10uF 50V	
C624	QTE1H28-106Z	E CAPACITOR	10uF 50V	
C639	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C703	QCBB1HK-471Y	C CAPACITOR	470pF 50V K	
C705	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C706	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C707	QETN1JM-476Z	E CAPACITOR	47uF 63V M	
C708	QETN1JM-476Z	E CAPACITOR	47uF 63V M	
C709	QCSB1HK-4R7Y	C CAPACITOR	4.7pF 50V K	
C710	QCSB1HK-4R7Y	C CAPACITOR	4.7pF 50V K	
C711	QFZ0212-104Z	M CAPACITOR	0.1uF	
C712	QFZ0212-104Z	M CAPACITOR	0.1uF	
C713	QFLC1HJ-104Z	M CAPACITOR	0.1uF 50V J	
C714	QFLC1HJ-104Z	M CAPACITOR	0.1uF 50V J	
C715	QFLC1HJ-104Z	M CAPACITOR	0.1uF 50V J	
C716	QFLC1HJ-104Z	M CAPACITOR	0.1uF 50V J	
C721	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C722	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C723	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C726	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C729	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C730	FQCF31HZ-223Z	D.CAPACITOR		
C731	FQCF31HZ-223Z	D.CAPACITOR		
C738	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C739	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C1000	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C1001	QCFB1HZ-105Y	C CAPACITOR	1uF 50V Z	
C1002	QCFB1HZ-105Y	C CAPACITOR	1uF 50V Z	
C1003	QCFB1HZ-105Y	C CAPACITOR	1uF 50V Z	
C1004	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C1005	QCFB1HZ-105Y	C CAPACITOR	1uF 50V Z	
C1006	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	
C1007	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C1008	QCFB1HZ-104Y	C CAPACITOR	0.1uF 50V Z	
C1009	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C1010	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C1011	QCBB1HK-181Y	C CAPACITOR	180pF 50V K	
C1012	QCBB1HK-181Y	C CAPACITOR	180pF 50V K	
C1013	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C1014	QCBB1HK-181Y	C CAPACITOR	180pF 50V K	
C1015	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C1016	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C1017	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C1018	QCBB1HK-181Y	C CAPACITOR	180pF 50V K	
C1019	QCBB1HK-181Y	C CAPACITOR	180pF 50V K	
C1020	QCBB1HK-181Y	C CAPACITOR	180pF 50V K	
R102	QRE141J-622Y	C RESISTOR	6.2kΩ 1/4W J	
R103	QRE141J-622Y	C RESISTOR	6.2kΩ 1/4W J	
R104	QRE141J-622Y	C RESISTOR	6.2kΩ 1/4W J	
R105	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R106	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R107	QRE141J-302Y	C RESISTOR	3kΩ 1/4W J	
R108	QRE141J-302Y	C RESISTOR	3kΩ 1/4W J	
R109	QRE141J-332Y	C RESISTOR	3.3kΩ 1/4W J	
R110	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R111	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R112	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R121	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R122	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
R123	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R124	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
R125	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R126	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
⚠ R127	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
⚠ R128	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
R129	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
⚠ R130	QRJ146J-681X	UNF C RESISTOR	680Ω 1/4W J	
⚠ R131	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
⚠ R132	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
R133	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
⚠ R134	QRJ146J-681X	UNF C RESISTOR	680Ω 1/4W J	
⚠ R135	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
⚠ R136	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
R137	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
⚠ R138	QRJ146J-681X	UNF C RESISTOR	680Ω 1/4W J	
⚠ R139	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
⚠ R140	QRJ146J-101X	UNF C RESISTOR	100Ω 1/4W J	
R141	QRE141J-333Y	C RESISTOR	33kΩ 1/4W J	
⚠ R142	QRJ146J-101X	UNF C RESISTOR	100Ω 1/4W J	
R143	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J	
R144	QRE141J-183Y	C RESISTOR	18kΩ 1/4W J	
⚠ R146	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J	
⚠ R148	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J	
⚠ R150	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J	
R151	QRE141J-183Y	C RESISTOR	18kΩ 1/4W J	
R152	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R153	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J	
R154	QRE141J-183Y	C RESISTOR	18kΩ 1/4W J	
R155	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R156	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J	
R157	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
⚠ R160	FQRL01DJ-221X	OMF RESISTOR		
⚠ R161	FQRL01DJ-271X	OMF RESISTOR		
⚠ R162	FQRL01DJ-271X	OMF RESISTOR		
R165	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
R166	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
⚠ R167	QRL01DJ-471X	OMF RESISTOR	470Ω 1W J	
R168	QRE141J-272Y	C RESISTOR	2.7kΩ 1/4W J	
R169	QRE141J-272Y	C RESISTOR	2.7kΩ 1/4W J	
⚠ R170	FQRL01DJ-221X	OMF RESISTOR		
⚠ R171	FQRL01DJ-271X	OMF RESISTOR		
⚠ R172	FQRL01DJ-271X	OMF RESISTOR		
R175	QRE141J-133Y	C RESISTOR	13kΩ 1/4W J	
R176	QRE141J-133Y	C RESISTOR	13kΩ 1/4W J	
⚠ R177	QRL01DJ-471X	OMF RESISTOR	470Ω 1W J	
R178	QRE141J-332Y	C RESISTOR	3.3kΩ 1/4W J	
R179	QRE141J-332Y	C RESISTOR	3.3kΩ 1/4W J	
R180	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R181	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R182	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R190	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R191	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R192	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R193	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R195	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
R215	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R216	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R217	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R218	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R221	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R222	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R223	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R224	QRE141J-681Y	C RESISTOR	680Ω 1/4W J	
R225	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R226	QRE141J-272Y	C RESISTOR	2.7kΩ 1/4W J	
R227	QRE141J-681Y	C RESISTOR	680Ω 1/4W J	
⚠ R230	QRZ9006-4R7X	F.RESISTOR	4.7Ω 1/4W J	
R232	QRE141J-332Y	C RESISTOR	3.3kΩ 1/4W J	
R233	QRE141J-242Y	C RESISTOR	2.4kΩ 1/4W J	
R234	QRE141J-271Y	C RESISTOR	270Ω 1/4W J	
R235	QRE141J-100Y	C RESISTOR	10Ω 1/4W J	

⚠ Symbol No.	Part No.	Part Name	Description	Local
⚠R236	FQRL01DJ-271X	OMF RESISTOR		
⚠R237	FQRL01DJ-271X	OMF RESISTOR		
⚠R238	FQRL01DJ-221X	OMF RESISTOR		
R240	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
⚠R246	FQRL01DJ-271X	OMF RESISTOR		
⚠R247	FQRL01DJ-271X	OMF RESISTOR		
⚠R248	FQRL01DJ-221X	OMF RESISTOR		
R271	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R601	QRJ146J-101X	UNF C RESISTOR	100Ω 1/4W J	
R602	QRJ146J-101X	UNF C RESISTOR	100Ω 1/4W J	
R603	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J	
R604	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J	
⚠R605	QRJ146J-122X	UNF C RESISTOR	1.2kΩ 1/4W J	
⚠R606	QRJ146J-122X	UNF C RESISTOR	1.2kΩ 1/4W J	
R607	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
R608	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
⚠R613	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
⚠R614	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
⚠R615	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
⚠R616	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
R617	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R618	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R619	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
R620	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
R621	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J	
R623	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J	
⚠R650	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J	
⚠R652	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J	
⚠R654	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J	
⚠R656	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J	
R666	QRE141J-333Y	C RESISTOR	33kΩ 1/4W J	
R667	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R668	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R674	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
R675	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R676	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
⚠R701	QRJ146J-470X	UNF C RESISTOR	47Ω 1/4W J	
⚠R702	QRJ146J-470X	UNF C RESISTOR	47Ω 1/4W J	
R703	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
R704	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
⚠R705	QRJ146J-821X	UNF C RESISTOR	820Ω 1/4W J	
⚠R706	QRJ146J-821X	UNF C RESISTOR	820Ω 1/4W J	
R707	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
R708	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
⚠R713	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
⚠R714	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
⚠R715	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
⚠R716	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
R717	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R718	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R719	QRE141J-562Y	C RESISTOR	5.6kΩ 1/4W J	
R720	QRE141J-562Y	C RESISTOR	5.6kΩ 1/4W J	
R721	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J	
R722	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J	
R723	QRE141J-682Y	C RESISTOR	6.8kΩ 1/4W J	
R724	QRE141J-682Y	C RESISTOR	6.8kΩ 1/4W J	
R725	QRE141J-823Y	C RESISTOR	82kΩ 1/4W J	
R726	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R727	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R728	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R729	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R730	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R739	QRE141J-823Y	C RESISTOR	82kΩ 1/4W J	
R740	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R741	QRE141J-682Y	C RESISTOR	6.8kΩ 1/4W J	
R742	QRE141J-682Y	C RESISTOR	6.8kΩ 1/4W J	
R743	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R744	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R753	QRZ0224-R22	EMIT RESISTOR	0.22Ω	
R754	QRZ0224-R22	EMIT RESISTOR	0.22Ω	
R761	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R762	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R766	QRE141J-333Y	C RESISTOR	33kΩ 1/4W J	
R768	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R769	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
⚠R774	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
R775	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R777	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R778	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R786	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R787	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R792	QRE141J-823Y	C RESISTOR	82kΩ 1/4W J	
R793	QRE141J-823Y	C RESISTOR	82kΩ 1/4W J	
R1001	QRE141J-331Y	C RESISTOR	330Ω 1/4W J	
R1002	QRE141J-331Y	C RESISTOR	330Ω 1/4W J	
R1003	QRE141J-331Y	C RESISTOR	330Ω 1/4W J	
R1004	QRE141J-331Y	C RESISTOR	330Ω 1/4W J	
R1005	QRE141J-201Y	C RESISTOR	200Ω 1/4W J	
R1006	QRE141J-121Y	C RESISTOR	120Ω 1/4W J	
R1007	QRE141J-201Y	C RESISTOR	200Ω 1/4W J	
R1008	QRE141J-121Y	C RESISTOR	120Ω 1/4W J	
R1009	QRE141J-331Y	C RESISTOR	330Ω 1/4W J	
R1010	QRE141J-331Y	C RESISTOR	330Ω 1/4W J	
R1011	QRE141J-750Y	C RESISTOR	75Ω 1/4W J	
R1012	QRE141J-750Y	C RESISTOR	75Ω 1/4W J	
R1013	QRE141J-750Y	C RESISTOR	75Ω 1/4W J	
R1014	QRE141J-750Y	C RESISTOR	75Ω 1/4W J	
R1015	QRE141J-750Y	C RESISTOR	75Ω 1/4W J	
R1016	QRE141J-750Y	C RESISTOR	75Ω 1/4W J	
L121	QQLZ035-R39	COIL	0.39uH	
L122	QQLZ035-R39	COIL	0.39uH	
L123	QQLZ035-R39	COIL	0.39uH	
L601	QQLZ035-R39	COIL	0.39uH	
L602	QQLZ035-R39	COIL	0.39uH	
L701	QQLZ035-R39	COIL	0.39uH	
L702	QQLZ035-R39	COIL	0.39uH	
CN105	QGA2501F1-03	CONNECTOR	W-B (1-3)	
CN106	QGD2503F1-03	CONNECTOR	(1-3)	
CN201	QGB2510J1-09	CONNECTOR	B-B (1-9)	
CN202	QGB2510J1-09	CONNECTOR	B-B (1-9)	
CN203	QGB2510J1-14	CONNECTOR	B-B (1-14)	
CN204	QGB2510K1-12	CONNECTOR	B-B (1-12)	
CN205	QGB2510J1-12	CONNECTOR	B-B (1-12)	
CN206	QGB2510K1-11	CONNECTOR	B-B (1-11)	
CN212	QGB2510K1-09	CONNECTOR	B-B (1-9)	
CN213	QGB2510K1-14	CONNECTOR	B-B (1-14)	
CN214	QGB2510J1-12	CONNECTOR	B-B (1-12)	
CN215	QGB2510K1-12	CONNECTOR	B-B (1-12)	
CN420	QGF1205C1-12	CONNECTOR	FFC/FPC (1-12)	
EP201	QNZ0136-001Z	EARTH PLATE		
FW109	QJK015-082924	WIRE SOCKET		
FW207	QUM155-15DGZ4	FLAT WIRE		
FW208	QUM157-08DGZ4	FLAT WIRE		
FW601	QUM154-10Z4Z4	FLAT WIRE		
J81	QNB0171-001	SPK.TERMINAL		
J120	QNN0621-001	SPK.TERMINAL		
J1010	QNN0434-001	PIN JACK		
J1020	QNN0624-001	PIN JACK		
RY160	QSK0109-001	RELAY		
RY170	QSK0109-001	RELAY		
RY240	QSK0109-001	RELAY		
RY241	QSK0109-001	RELAY		
S1001	QSW0454-001	SW		
SP100	GV40205-001A	IC HOLDER		

Input board

Block No. [0][2]

⚠ Symbol No.	Part No.	Part Name	Description	Local
IC300	HA12237F	IC		
IC400	NJM4565M-WE	IC		
IC401	NJM4565M-WE	IC		
IC410	LB1641	IC		
IC414	KTC3200/GL/-T	TRANSISTOR		
IC420	PQ033EF02SZ	REGULATOR IC		
IC460	LC75342M-X	IC		
IC480	JCV8011-X	IC		
IC500	LC75341M-X	IC		
IC510	BU9262AFS-X	IC		

⚠ Symbol No.	Part No.	Part Name	Description	Local
IC520	NJM4565M-WE	IC		UN,US,UX
IC521	NJM4565M-WE	IC		UN,US,UX
IC530	NJM4565M-WE	IC		
IC531	NJM4565M-WE	IC		
IC550	NJM4565M-WE	IC		
IC551	NJM4565M-WE	IC		
IC575	CD4066BM-X	IC		
IC580	NJM4565M-WE	IC		
IC590	LC75341M-X	IC		
IC801	BR24L01AF-W-X	IC		
IC810	UPD784217AGF534	IC		
IC815	SN74AHCT08NS-X	IC		
Q306	KRC107M-T	DIGI TRANSISTOR		
Q307	KRC107M-T	DIGI TRANSISTOR		
Q309	KTA1271/OY/-T	TRANSISTOR		
Q310	KTC3199/GL/-T	TRANSISTOR		
Q311	2SB562/C/-T	TRANSISTOR		
Q312	KTC3199/GL/-T	TRANSISTOR		
Q313	2SB562/C/-T	TRANSISTOR		
Q316	2SC2001/K/-T	TRANSISTOR		
Q320	2SC2001/K/-T	TRANSISTOR		
Q360	KRC103M-T	TRANSISTOR		
Q362	KRA111M-T	DIGI TRANSISTOR		
Q363	2SC3576-JVC-T	TRANSISTOR		
Q364	2SC3576-JVC-T	TRANSISTOR		
Q365	2SC3576-JVC-T	TRANSISTOR		
Q366	2SC3576-JVC-T	TRANSISTOR		
Q410	UN2113-X	TRANSISTOR		
Q414	KTC3199/GL/-T	TRANSISTOR		
Q415	UN2213-X	DIGI TRANSISTOR		
Q416	UN2213-X	DIGI TRANSISTOR		
Q417	UN2115-X	D.TRANSISTOR		
Q420	2SD1328/ST/-X	TRANSISTOR		
Q421	2SD1328/ST/-X	TRANSISTOR		
Q422	2SD1328/ST/-X	TRANSISTOR		
Q423	2SD1328/ST/-X	TRANSISTOR		
Q424	2SD1328/ST/-X	TRANSISTOR		
Q480	KTC3199/GL/-T	TRANSISTOR		
Q520	UN2113-X	TRANSISTOR		UN,US,UX
Q521	2SD1328/ST/-X	TRANSISTOR		UN,US,UX
Q550	2SD601A/RS/-X	TRANSISTOR		
Q551	2SD601A/RS/-X	TRANSISTOR		
Q552	2SD601A/RS/-X	TRANSISTOR		
Q575	UN2213-X	DIGI TRANSISTOR		
Q576	UN2213-X	DIGI TRANSISTOR		
Q585	UN2113-X	TRANSISTOR		
Q586	2SD1328/ST/-X	TRANSISTOR		
Q587	2SD1328/ST/-X	TRANSISTOR		
Q590	2SD1328/ST/-X	TRANSISTOR		
Q591	2SD1328/ST/-X	TRANSISTOR		
Q592	2SD1328/ST/-X	TRANSISTOR		
Q593	2SD1328/ST/-X	TRANSISTOR		
Q801	UN2115-X	D.TRANSISTOR		
Q802	UN2211-X	TRANSISTOR		
Q806	UN2211-X	TRANSISTOR		
Q856	UN2113-X	TRANSISTOR		
Q880	2SD601A/RS/-X	TRANSISTOR		
D303	1SR139-400-T2	SI DIODE		
D304	1SR139-400-T2	SI DIODE		
D374	1SS133-T2	DIODE		
D375	1N4003S-T5	SI DIODE		
D410	MTZJ5.6A-T2	Z DIODE		
D414	MTZJ7.5B-T2	Z DIODE		
D415	MTZJ6.2B-T2	Z DIODE		
D420	MTZJ3.9B-T2	Z DIODE		
D444	1N4003S-T5	SI DIODE		
D454	1SS133-T2	DIODE		UN,US,UX
D455	1SS133-T2	DIODE		UN,US,UX
D510	1SS133-T2	DIODE		
D530	1SS133-T2	DIODE		
D531	1SS133-T2	DIODE		

⚠ Symbol No.	Part No.	Part Name	Description	Local
D550	1SS133-T2	DIODE		
D551	1SS133-T2	DIODE		
D801	1SS244-T2	SI DIODE		
D802	1SS133-T2	DIODE		
D803	1SS244-T2	SI DIODE		
D804	MTZJ4.3B-T2	Z DIODE		
D805	1SS133-T2	DIODE		
D806	1SS133-T2	DIODE		
D807	1SS133-T2	DIODE		
D808	1N4003S-T5	SI DIODE		
D809	1SS133-T2	DIODE		
D815	1SS133-T2	DIODE		
D862	1SS133-T2	DIODE		
D864	1SS133-T2	DIODE		
C300	QCSB1HK-4R7Y	C CAPACITOR	4.7pF 50V K	
C301	QCSB1HK-4R7Y	C CAPACITOR	4.7pF 50V K	
C303	QFLC1HJ-104Z	M CAPACITOR	0.1uF 50V J	
C306	QETN1HM-226Z	E CAPACITOR	22uF 50V M	
C307	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C309	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C311	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	
C313	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	
C314	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C315	QDXB1CM-152Y	C CAPACITOR	1500pF 16V M	
C318	QCBB1HK-223Y	C CAPACITOR	0.022uF 50V K	
C321	QCFB1HZ-105Y	C CAPACITOR	1uF 50V Z	
C322	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C323	QFVJ1HJ-223Z	MF CAPACITOR	0.022uF 50V J	
C324	QFLC1HJ-472Z	M CAPACITOR	4700pF 50V J	
C325	QCBB1HK-331Y	C CAPACITOR	330pF 50V K	
C326	QCBB1HK-331Y	C CAPACITOR	330pF 50V K	
C330	QETN1AM-227Z	E CAPACITOR	220uF 10V M	
C331	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C332	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C333	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C334	NCS21HJ-821X	C CAPACITOR	820pF 50V J	
C335	QCBB1HK-271Y	C CAPACITOR	270pF 50V K	
C336	QCBB1HK-391Y	C CAPACITOR	390pF 50V K	
C337	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C338	QFLA1HJ-104Z	M CAPACITOR	0.1uF 50V J	
C339	NCS21HJ-821X	C CAPACITOR	820pF 50V J	
C340	QFLA1HJ-104Z	M CAPACITOR	0.1uF 50V J	
C341	QCBB1HK-271Y	C CAPACITOR	270pF 50V K	
C343	QCBB1HK-391Y	C CAPACITOR	390pF 50V K	
C344	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C345	QFLA1HJ-104Z	M CAPACITOR	0.1uF 50V J	
C346	QFLA1HJ-104Z	M CAPACITOR	0.1uF 50V J	
C350	QCBB1HK-103Y	C CAPACITOR	0.01uF 50V K	
C351	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C352	QETN1HM-476Z	E CAPACITOR	47uF 50V M	
C353	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C354	QETN1HM-476Z	E CAPACITOR	47uF 50V M	
C355	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	
C356	QCBB1HK-103Y	C CAPACITOR	0.01uF 50V K	
C357	NCS21HJ-821X	C CAPACITOR	820pF 50V J	
C358	NCS21HJ-821X	C CAPACITOR	820pF 50V J	
C359	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C367	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C368	QDYB1CM-682Y	C CAPACITOR	6800pF 16V M	
C369	QDYB1CM-682Y	C CAPACITOR	6800pF 16V M	
C370	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C377	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C400	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C401	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C402	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C403	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C404	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C405	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C408	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
C409	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
C410	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C411	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C412	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C413	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C414	QFLC1HJ-103Z	M CAPACITOR	0.01uF 50V J	
C415	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C416	NCB31HK-272X	C CAPACITOR	2700pF 50V K	

⚠ Symbol No.	Part No.	Part Name	Description	Local
C417	NCB31HK-272X	C CAPACITOR	2700pF 50V K	
C418	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C419	QETN1CM-477Z	E CAPACITOR	470uF 16V M	
C420	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C421	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C424	NCB31HK-223X	C CAPACITOR	0.022uF 50V K	
C425	NCB31HK-223X	C CAPACITOR	0.022uF 50V K	
C434	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C435	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C436	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C437	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C438	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C439	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C441	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C445	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C446	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C447	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C448	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C449	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C450	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C454	NCB31HK-221X	C CAPACITOR	220pF 50V K	
C455	NCB31HK-221X	C CAPACITOR	220pF 50V K	
C456	NCB31HK-102X	C CAPACITOR	1000pF 50V K	UN,US,UX
C460	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C461	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C462	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C463	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C464	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C465	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C466	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C467	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C468	QTE1H28-106Z	E CAPACITOR	10uF 50V	
C469	QTE1H28-106Z	E CAPACITOR	10uF 50V	
C470	QTE1H28-106Z	E CAPACITOR	10uF 50V	
C471	QTE1H28-106Z	E CAPACITOR	10uF 50V	
C472	NCB31HK-272X	C CAPACITOR	2700pF 50V K	
C473	NCB31HK-272X	C CAPACITOR	2700pF 50V K	
C474	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C475	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C476	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C477	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C478	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C479	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C480	QETN1HM-474Z	E CAPACITOR	0.47uF 50V M	
C481	QETN1HM-224Z	E CAPACITOR	0.22uF 50V M	
C482	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C484	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C485	QTE1H28-106Z	E CAPACITOR	10uF 50V	
C486	QTE1H28-106Z	E CAPACITOR	10uF 50V	
C487	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C488	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C489	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C490	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C491	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C492	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C493	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C496	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C499	NCB31EK-273X	C CAPACITOR	0.027uF 25V K	
C500	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C501	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C502	QETN1HM-104Z	E CAPACITOR	0.1uF 50V M	
C503	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C504	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C505	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C506	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C507	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C508	QETN1AM-337Z	E CAPACITOR	330uF 10V M	
C510	NCB31EK-104X	C CAPACITOR	0.1uF 25V K	
C511	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C512	QETN1HM-104Z	E CAPACITOR	0.1uF 50V M	
C513	QETN1HM-104Z	E CAPACITOR	0.1uF 50V M	
C514	NCB31HK-223X	C CAPACITOR	0.022uF 50V K	
C515	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C516	NCB31EK-104X	C CAPACITOR	0.1uF 25V K	
C517	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C518	NCB31CK-103X	C CAPACITOR	0.01uF 16V K	
C519	NCB31CK-103X	C CAPACITOR	0.01uF 16V K	

⚠ Symbol No.	Part No.	Part Name	Description	Local
C521	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C522	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C523	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C524	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C525	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C526	QETN1HM-106Z	E CAPACITOR	10uF 50V M	UN,US,UX
C527	NCB21EK-683X	C CAPACITOR	0.068uF 25V K	UN,US,UX
C528	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	UN,US,UX
C529	NCB31HK-271X	C CAPACITOR	270pF 50V K	UN,US,UX
C532	QETN1EM-476Z	E CAPACITOR	47uF 25V M	UN,US,UX
C533	QETN1EM-476Z	E CAPACITOR	47uF 25V M	UN,US,UX
C534	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C535	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C536	NCB31HK-822X	C CAPACITOR	8200pF 50V K	
C537	NCB31AK-224X	C CAPACITOR	0.22uF 10V K	
C538	NCB31CK-473X	C CAPACITOR	0.047uF 16V K	
C539	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C540	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C541	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C542	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C543	NCB31CK-153X	C CAPACITOR	0.015uF 16V K	
C544	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C545	NCB31CK-273X	C CAPACITOR	0.027uF 16V K	
C550	NCB31CK-393X	C CAPACITOR	0.039uF 16V K	
C551	NCB31CK-823X	C CAPACITOR	0.082uF 16V K	
C552	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C553	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C554	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C555	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C556	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C557	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C558	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
C559	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C560	QETN1HM-476Z	E CAPACITOR	47uF 50V M	
C575	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C576	QFLC1HJ-333Z	M CAPACITOR	0.033uF 50V J	
C577	QFLC1HJ-333Z	M CAPACITOR	0.033uF 50V J	
C578	QFLC1HJ-333Z	M CAPACITOR	0.033uF 50V J	
C579	QFLC1HJ-333Z	M CAPACITOR	0.033uF 50V J	
C580	NDC31HJ-100X	C CAPACITOR	10pF 50V J	
C581	NDC31HJ-100X	C CAPACITOR	10pF 50V J	
C582	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C583	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C584	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C585	QTE1V06-106Z	E CAPACITOR	10uF 35V	
C586	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C587	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C590	QETN1HM-104Z	E CAPACITOR	0.1uF 50V M	
C591	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C592	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C593	QETN1HM-104Z	E CAPACITOR	0.1uF 50V M	
C594	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C595	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C800	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C801	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C802	NCB31CK-224X	C CAPACITOR	0.22uF 16V K	
C803	NCB31CK-224X	C CAPACITOR	0.22uF 16V K	
C804	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C805	QETN1AM-227Z	E CAPACITOR	220uF 10V M	
C806	NCF21CZ-105X	C CAPACITOR	1uF 16V Z	
C807	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C808	NDC31HJ-270X	C CAPACITOR	27pF 50V J	
C809	NDC31HJ-300X	C CAPACITOR	30pF 50V J	
C810	NCB31CK-103X	C CAPACITOR	0.01uF 16V K	
C811	NCB31CK-223X	C CAPACITOR	0.022uF 16V K	
C812	NCB31HK-221X	C CAPACITOR	220pF 50V K	
C813	NCB31HK-221X	C CAPACITOR	220pF 50V K	
C814	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C815	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C816	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	
C856	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C870	QETN1HM-476Z	E CAPACITOR	47uF 50V M	

⚠ Symbol No.	Part No.	Part Name	Description	Local
R300	QRE141J-223Y	C RESISTOR	22kΩ 1/4W J	
R301	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R302	QRE141J-273Y	C RESISTOR	27kΩ 1/4W J	
R303	QRE141J-243Y	C RESISTOR	24kΩ 1/4W J	
R304	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R305	QRE141J-393Y	C RESISTOR	39kΩ 1/4W J	
R306	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R307	QRE141J-332Y	C RESISTOR	3.3kΩ 1/4W J	
R309	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R310	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R311	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
R312	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R313	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
R315	QRE141J-153Y	C RESISTOR	15kΩ 1/4W J	
R316	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
⚠ R317	QRZ9005-100X	FUSI RESISTOR	10Ω	
R318	QRE141J-2R2Y	C RESISTOR	2.2Ω 1/4W J	
⚠ R319	QRJ146J-4R7X	UNF C RESISTOR	4.7Ω 1/4W J	
R320	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
R321	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R322	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R324	QRE141J-474Y	C RESISTOR	470kΩ 1/4W J	
R325	QRE141J-153Y	C RESISTOR	15kΩ 1/4W J	
R326	QRE141J-153Y	C RESISTOR	15kΩ 1/4W J	
R330	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
R332	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R333	QRE141J-223Y	C RESISTOR	22kΩ 1/4W J	
R335	QRE141J-273Y	C RESISTOR	27kΩ 1/4W J	
R336	QRE141J-273Y	C RESISTOR	27kΩ 1/4W J	
R337	QRE141J-113Y	C RESISTOR	11kΩ 1/4W J	
R338	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
R339	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
R340	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
R341	QRE141J-273Y	C RESISTOR	27kΩ 1/4W J	
R343	QRE141J-273Y	C RESISTOR	27kΩ 1/4W J	
R344	QRE141J-113Y	C RESISTOR	11kΩ 1/4W J	
R345	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
R346	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
R347	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
R359	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R360	QRE141J-223Y	C RESISTOR	22kΩ 1/4W J	
R361	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
R362	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
R363	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R364	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R365	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R366	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R367	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R368	QRE141J-123Y	C RESISTOR	12kΩ 1/4W J	
R369	QRE141J-123Y	C RESISTOR	12kΩ 1/4W J	
R370	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R373	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R374	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
R377	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R378	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R379	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R380	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R403	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
R405	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R406	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R408	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R409	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
R410	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R411	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
R412	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
R413	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J	
R414	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R415	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R416	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R417	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R418	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R419	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R420	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R421	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R422	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R423	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R424	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R425	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R426	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
⚠ R430	QRZ9006-4R7X	F.RESISTOR	4.7Ω 1/4W J	
R431	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R432	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R433	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R451	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R452	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R453	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R454	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R455	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R462	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J	
R463	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J	
R464	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R465	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R466	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R467	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R468	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R469	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R470	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R471	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R472	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R473	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R474	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R478	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R480	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R481	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R482	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J	
R483	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J	
R484	NRSA63J-362X	MG RESISTOR	3.6kΩ 1/16W J	
R485	NRSA63J-362X	MG RESISTOR	3.6kΩ 1/16W J	
R486	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R487	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R488	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R489	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R490	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R491	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R492	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R493	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R494	NRSA63J-622X	MG RESISTOR	6.2kΩ 1/16W J	
R495	NRSA63J-622X	MG RESISTOR	6.2kΩ 1/16W J	
R496	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R497	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R498	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R500	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
R501	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
R502	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R503	NRSA63J-225X	MG RESISTOR	2.2MΩ 1/16W J	
R504	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R505	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R506	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R507	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R508	NRSA63J-912X	MG RESISTOR	9.1kΩ 1/16W J	
R509	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R510	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	
R511	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R512	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	
R513	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R514	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
R515	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R516	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R517	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R518	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R519	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
R520	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	UN,US,UX
R521	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	UN,US,UX
R522	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J	UN,US,UX
R523	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	UN,US,UX
R524	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	UN,US,UX
R525	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	UN,US,UX
R526	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	UN,US,UX
R527	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	UN,US,UX

⚠ Symbol No.	Part No.	Part Name	Description	Local
R528	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	UN,US,UX
R529	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	UN,US,UX
R530	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	UN,US,UX
R531	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	UN,US,UX
R533	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	UN,US,UX
R534	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R535	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R536	QRE141J-303Y	C RESISTOR	30kΩ 1/4W J	
R537	QRE141J-303Y	C RESISTOR	30kΩ 1/4W J	
R538	QRE141J-274Y	C RESISTOR	270kΩ 1/4W J	
R539	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R540	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R541	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R542	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R543	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R544	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R545	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R546	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R547	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R548	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R549	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J	
R550	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J	
R551	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	
R552	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	
R553	NRSA63J-132X	MG RESISTOR	1.3kΩ 1/16W J	
R554	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R555	NRSA63J-124X	MG RESISTOR	120kΩ 1/16W J	
R556	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R557	QRE141J-202Y	C RESISTOR	2kΩ 1/4W J	
R558	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
R559	NRSA63J-113X	MG RESISTOR	11kΩ 1/16W J	
R560	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R561	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R562	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R563	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R564	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R565	QRE141J-513Y	C RESISTOR	51kΩ 1/4W J	
R566	NRSA63J-184X	MG RESISTOR	180kΩ 1/16W J	
R567	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R568	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R569	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R570	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R571	NRSA63J-271X	MG RESISTOR	270Ω 1/16W J	
R572	QRE141J-752Y	C RESISTOR	7.5kΩ 1/4W J	
R573	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R574	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R575	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R576	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R577	NRSA63J-243X	MG RESISTOR	24kΩ 1/16W J	
R578	NRSA63J-243X	MG RESISTOR	24kΩ 1/16W J	
R579	QRE141J-753Y	C RESISTOR	75kΩ 1/4W J	
R580	QRE141J-753Y	C RESISTOR	75kΩ 1/4W J	
R581	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R582	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R583	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R584	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R585	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R586	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R587	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R588	QRE141J-153Y	C RESISTOR	15kΩ 1/4W J	
R589	QRE141J-153Y	C RESISTOR	15kΩ 1/4W J	
R590	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R591	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R592	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R593	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R594	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R595	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R596	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R597	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R598	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R599	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R800	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R801	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R802	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R803	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R804	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R805	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R806	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R807	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R810	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R811	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R812	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R813	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R814	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R815	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R816	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R817	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R818	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R819	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R820	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R821	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R822	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R823	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R824	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R825	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R826	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R827	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R828	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R829	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R830	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R831	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R832	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R833	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R834	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R835	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R836	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R837	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R838	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R839	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R840	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R841	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R842	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R843	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R844	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R845	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R846	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R847	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R848	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R849	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R850	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R851	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R852	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R853	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R854	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	UN,US,UX
R856	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R857	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R858	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R859	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R860	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R861	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R862	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R863	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R864	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R865	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R866	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R867	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R868	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R869	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R870	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R871	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R872	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R873	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R874	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R875	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R876	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R877	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R878	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R879	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R880	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R881	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R882	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	

⚠ Symbol No.	Part No.	Part Name	Description	Local
R883	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
R884	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R885	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R886	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R887	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R888	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R889	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R890	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R891	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R892	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	UN,US,UX
R893	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	UN,US,UX
R894	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R895	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R896	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R897	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R898	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R899	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R900	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R901	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R902	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R903	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R904	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R905	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R906	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R907	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R908	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
VR320	QVP0004-203Z	TRIM RESISTOR	20kΩ	
L317	QQL244K-100Z	COIL	10uH K	
L320	QQR1118-002	OSC COIL(BIAS)		
L812	QQL231K-2R2Y	COIL	2.2uH K	
L813	QQL231K-2R2Y	COIL	2.2uH K	
CN11	QGF1036C1-05	CONNECTOR	FFC/FPC (1-5)	
CN21	QGF1205C1-11	CONNECTOR	FFC/FPC (1-11)	
CN211	QGB2510K1-09	CONNECTOR	B-B (1-9)	
CN216	QGB2510J1-11	CONNECTOR	B-B (1-11)	
CN217	QGD2504C1-05Z	CONNECTOR	(1-5)	
CN218	QGD2504C1-04Z	CONNECTOR	(1-4)	
CN219	QGD2504C1-03Z	CONNECTOR	(1-3)	
CN301	QGA2001C1-07	CONNECTOR	W-B (1-7)	
CN302	QGA2001C1-03	CONNECTOR	W-B (1-3)	
CN303	QGF1205C1-13	CONNECTOR	FFC/FPC (1-13)	
CN410	QGF1205C1-12	CONNECTOR	FFC/FPC (1-12)	
CN454	QGA2501C1-03	CONNECTOR	W-B (1-3)	UW
CN522	QGF1036C1-09	CONNECTOR	FFC/FPC (1-9)	
CN523	QGF1036C1-17	CONNECTOR	FFC/FPC (1-17)	
CN524	QGF1036C1-15	CONNECTOR	FFC/FPC (1-15)	
CN531	QGF1036C1-08	CONNECTOR	FFC/FPC (1-8)	
CN860	QGF1205C1-17	CONNECTOR	FFC/FPC (1-17)	
CN880	QGF1205C1-12	CONNECTOR	FFC/FPC (1-12)	
HS420	LE40505-001A	HEAT SINK		
J454	QNN0420-001	SURROUND JACK		UN,US,UX
J812	QNS0089-001	3.5 JACK		
J814	GP1FA553TZ	OPT TRANSMITTER		
PP301	QZW0038-001	WIRE CLAMP		
SP300	LV30225-011A	SPACER		
SP400	LV30225-011A	SPACER		
SP444	LV30225-011A	SPACER		
SP810	VYH7653-001	IC HOLDER		
TW300	QUB230-06A4A4	WIRE		
TW400	QUB230-06A4A4	WIRE		
TW444	QUB230-12HPHP	S.WIRE		
X510	QAX0768-001Z	C OSCILLATOR		
X801	QAX0724-001Z	CRYSTAL	12.000000MHz	

Front board

Block No. [0][3]

⚠ Symbol No.	Part No.	Part Name	Description	Local
IC900	SN74HCU04N	FL DRIVER		
IC920	PT6305	FL DRIVER		
IC930	GP1UM281XK	IR DETECT UNIT	38kHz	
IC970	BU9253AS	IC		UN,US,UX
IC971	RC4580IP	IC		UN,US,UX
Q926	KRA102M-T	DIGI TRANSISTOR		
Q933	KRC102M-T	DIGI TRANSISTOR		
Q934	KRC102M-T	DIGI TRANSISTOR		
Q935	KRC102M-T	DIGI TRANSISTOR		
Q936	KRC102M-T	DIGI TRANSISTOR		
Q937	KRC102M-T	DIGI TRANSISTOR		
Q938	KRC102M-T	DIGI TRANSISTOR		
Q980	KRA111M-T	DIGI TRANSISTOR		UN,US,UX
Q981	KRA111M-T	DIGI TRANSISTOR		UN,US,UX
Q982	KRA111M-T	DIGI TRANSISTOR		UN,US,UX
Q987	2SC3576-JVC-T	TRANSISTOR		UN,US,UX
⚠ Q2010	KTC2026/OY/	TRANSISTOR		
Q2011	KTC3199/GL/-T	TRANSISTOR		
D925	SLA-362LT-T	LED		
D926	SELU2E10C-P	LED		
D933	SLA-362LT-T	LED		
D934	SLA-362LT-T	LED		
D935	SLA-362LT-T	LED		
D936	SLA-362LT-T	LED		
D937	SLA-362LT-T	LED		
D938	SLA-362LT-T	LED		
D957	1SS133-T2	DIODE		UW
D958	1SS133-T2	DIODE		UW
D971	MTZJ5.1B-T2	Z DIODE		UN,US,UX
D991	MTZJ2.4B-T2	Z DIODE		UN,US,UX
D992	1SS133-T2	DIODE		UN,US,UX
⚠ D2010	1N5402M-20	DIODE		
⚠ D2011	1N5402M-20	DIODE		
⚠ D2012	1N5402M-20	DIODE		
⚠ D2013	1N5402M-20	DIODE		
D2016	1N4003S-T5	SI DIODE		
D2018	MTZJ20B-T2	Z DIODE		
D2019	MTZJ18B-T2	Z DIODE		
D2020	MTZJ6.8B-T2	Z DIODE		
C903	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C904	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C905	QCBB1HK-103Y	C CAPACITOR	0.01uF 50V K	
C920	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	
C921	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	
C922	QEKC1AM-107Z	E CAPACITOR	100uF 10V M	
C923	QCBB1HK-104Y	C CAPACITOR	0.1uF 50V K	
C924	QEKC1HM-226Z	E CAPACITOR	22uF 50V M	
C925	QETN1HM-226Z	E CAPACITOR	22uF 50V M	
C926	QCFB1HZ-104Y	C CAPACITOR	0.1uF 50V Z	
C930	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C931	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C957	QCBB1HK-222Y	C CAPACITOR	2200pF 50V K	UW
C970	QCBB1HK-101Y	C CAPACITOR	100pF 50V K	UN,US,UX
C971	QCFB1HZ-104Y	C CAPACITOR	0.1uF 50V Z	UN,US,UX
C972	QETN1CM-107Z	E CAPACITOR	100uF 16V M	UN,US,UX
C973	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	UN,US,UX
C974	QDXB1CM-472Y	C CAPACITOR	4700pF 16V M	UN,US,UX
C975	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	UN,US,UX
C976	QEKC1CM-226Z	E CAPACITOR	22uF 16V M	UN,US,UX
C977	QEKC1HM-474Z	E CAPACITOR	0.47uF 50V M	UN,US,UX

⚠ Symbol No.	Part No.	Part Name	Description	Local
C978	QDXB1CM-332Y	C CAPACITOR	3300pF 16V M	UN,US,UX
C979	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	UN,US,UX
C980	QEKC1HM-475Z	E CAPACITOR	4.7uF 50V M	UN,US,UX
C981	QEKC1HM-224Z	E CAPACITOR	0.22uF 50V M	UN,US,UX
C982	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	UN,US,UX
C983	QCBB1HK-151Y	C CAPACITOR	150pF 50V K	UN,US,UX
C984	QCBB1HK-331Y	C CAPACITOR	330pF 50V K	UN,US,UX
C985	QCBB1HK-151Y	C CAPACITOR	150pF 50V K	UN,US,UX
C986	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	UN,US,UX
C987	QETN1CM-107Z	E CAPACITOR	100uF 16V M	UN,US,UX
C988	QEKC1AM-227Z	E CAPACITOR	220uF 10V M	UN,US,UX
C989	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	UN,US,UX
C990	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	UN,US,UX
C991	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	UN,US,UX
C992	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	UN,US,UX
C993	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	UN,US,UX
C994	QDXB1CM-222Y	C CAPACITOR	2200pF 16V M	
C995	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C996	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C997	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C998	QDXB1CM-392Y	C CAPACITOR	3900pF 16V M	
C999	QDXB1CM-392Y	C CAPACITOR	3900pF 16V M	
C2011	QETN2AM-476Z	E CAPACITOR	47uF 100V M	
C2012	QETN1HM-226Z	E CAPACITOR	22uF 50V M	
C2013	QETN1HM-226Z	E CAPACITOR	22uF 50V M	
C2014	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	
C2015	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C2017	QCFB1HZ-104Y	C CAPACITOR	0.1uF 50V Z	
C2018	QCFB1HZ-104Y	C CAPACITOR	0.1uF 50V Z	
R920	QRE141J-202Y	C RESISTOR	2kΩ 1/4W J	UW
R920	QRE141J-122Y	C RESISTOR	1.2kΩ 1/4W J	UN,US,UX
R921	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	UN,US
R921	QRE141J-911Y	C RESISTOR	910Ω 1/4W J	UW
R921	QRE141J-511Y	C RESISTOR	510Ω 1/4W J	UX
R922	QRE141J-201Y	C RESISTOR	200Ω 1/4W J	UX
R924	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R925	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
R926	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R927	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R928	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R929	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R930	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R933	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R934	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R935	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R936	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R937	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R938	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R940	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
R941	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
R942	QRE141J-121Y	C RESISTOR	120Ω 1/4W J	
R943	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
R944	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R945	QRE141J-271Y	C RESISTOR	270Ω 1/4W J	
R946	QRE141J-391Y	C RESISTOR	390Ω 1/4W J	
R947	QRE141J-561Y	C RESISTOR	560Ω 1/4W J	
R948	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R949	QRE141J-182Y	C RESISTOR	1.8kΩ 1/4W J	
R950	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
R951	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
R952	QRE141J-121Y	C RESISTOR	120Ω 1/4W J	

⚠ Symbol No.	Part No.	Part Name	Description	Local
R953	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
R954	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R955	QRE141J-271Y	C RESISTOR	270Ω 1/4W J	
R960	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
R961	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
R962	QRE141J-121Y	C RESISTOR	120Ω 1/4W J	
R963	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
R964	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R965	QRE141J-271Y	C RESISTOR	270Ω 1/4W J	
R966	QRE141J-391Y	C RESISTOR	390Ω 1/4W J	
R967	QRE141J-561Y	C RESISTOR	560Ω 1/4W J	
R969	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	UN,US,UX
R970	QRE141J-333Y	C RESISTOR	33kΩ 1/4W J	UN,US,UX
R971	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	UN,US,UX
R972	QRE141J-822Y	C RESISTOR	8.2kΩ 1/4W J	UN,US,UX
R973	QRE141J-203Y	C RESISTOR	20kΩ 1/4W J	UN,US,UX
R974	QRE141J-203Y	C RESISTOR	20kΩ 1/4W J	UN,US,UX
R975	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	UN,US,UX
R976	QRE141J-203Y	C RESISTOR	20kΩ 1/4W J	UN,US,UX
R977	QRE141J-272Y	C RESISTOR	2.7kΩ 1/4W J	UN,US,UX
R978	QRE141J-562Y	C RESISTOR	5.6kΩ 1/4W J	UN,US,UX
R979	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	UN,US,UX
R980	QRE141J-203Y	C RESISTOR	20kΩ 1/4W J	UN,US,UX
R981	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	UN,US,UX
R982	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	UN,US,UX
R983	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	UN,US,UX
R984	QRE141J-153Y	C RESISTOR	15kΩ 1/4W J	UN,US,UX
R985	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	UN,US,UX
R986	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	UN,US,UX
R987	QRE141J-561Y	C RESISTOR	560Ω 1/4W J	UN,US,UX
R988	QRE141J-203Y	C RESISTOR	20kΩ 1/4W J	UN,US,UX
R989	QRE141J-510Y	C RESISTOR	51Ω 1/4W J	UN,US,UX
R990	QRE141J-475Y	C RESISTOR	4.7MΩ 1/4W J	UN,US,UX
R991	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	UN,US,UX
R992	QRE141J-152Y	C RESISTOR	1.5kΩ 1/4W J	UN,US,UX
R993	QRE141J-391Y	C RESISTOR	390Ω 1/4W J	UN,US,UX
R994	QRE141J-123Y	C RESISTOR	12kΩ 1/4W J	UN,US,UX
R995	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	UN,US,UX
R996	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	UN,US,UX
R997	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	UN,US,UX
R998	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	UN,US,UX
R999	QRE141J-152Y	C RESISTOR	1.5kΩ 1/4W J	UN,US,UX
⚠ R2010	QRJ146J-4R7X	UNF C RESISTOR	4.7Ω 1/4W J	
R2011	QRE141J-153Y	C RESISTOR	15kΩ 1/4W J	
R2012	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
⚠ R2014	ERX12SJR33E	UNF C RESISTOR		
VR970	QVQ0299-B54	V RESISTOR		UN,US,UX
L996	QQL231K-470Y	COIL	47uH K	
L997	QQL231K-470Y	COIL	47uH K	

⚠ Symbol No.	Part No.	Part Name	Description	Local
L998	QQR1183-001Z	FERRITE BEADS		
CN101	QGD2504C1-03Z	CONNECTOR	(1-3)	
CN119	QGA3901F1-08	CONNECTOR	W-B (1-8)	
CN250	QGA7901C1-02	CONNECTOR	W-B (1-2)	
CN810	QGB2024K1-04S	CONNECTOR	B-B (1-4)	
CN820	QGB2024J1-04S	CONNECTOR	B-B (1-4)	
CN870	QGF1205C1-17	CONNECTOR	FFC/FPC (1-17)	
CN890	QGF1205F1-12	CONNECTOR	FFC/FPC (1-12)	
FT111	QNG0003-001Z	FUSE CLIP		
FT112	QNG0003-001Z	FUSE CLIP		
FT131	QNG0003-001Z	FUSE CLIP		
FT132	QNG0003-001Z	FUSE CLIP		
FT151	QNG0003-001Z	FUSE CLIP		
FT152	QNG0003-001Z	FUSE CLIP		
FT511	QNG0003-001Z	FUSE CLIP		
FT512	QNG0003-001Z	FUSE CLIP		
FT521	QNG0003-001Z	FUSE CLIP		
FT522	QNG0003-001Z	FUSE CLIP		
FT531	QNG0003-001Z	FUSE CLIP		
FT532	QNG0003-001Z	FUSE CLIP		
FW116	QUM153-29DGZ4	FLAT WIRE		
FW241	QUM153-18DGZ4	FLAT WIRE		
FW444	QJP001-033600	SINGLE WIRE		UW
J970	QNS0236-001	PHONE JACK		UN,US,UX
J971	QNS0235-001	PHONE JACK		UW
J971	QNS0236-001	PHONE JACK		UN,US,UX
J995	QNS0237-001	PHONE JACK		
JS920	QSW0857-001	ROTARY SW		
⚠ S500	QSW0812-001	VOLTAGE SWITCH		
S920	QSW0825-001Z	TACT SW		
S939	QSW0825-001Z	TACT SW		
S940	QSW0825-001Z	TACT SW		
S941	QSW0825-001Z	TACT SW		
S942	QSW0825-001Z	TACT SW		
S943	QSW0825-001Z	TACT SW		
S944	QSW0825-001Z	TACT SW		
S945	QSW0825-001Z	TACT SW		
S946	QSW0825-001Z	TACT SW		
S947	QSW0825-001Z	TACT SW		
S948	QSW0825-001Z	TACT SW		
S949	QSW0825-001Z	TACT SW		
S950	QSW0825-001Z	TACT SW		
S951	QSW0825-001Z	TACT SW		
S952	QSW0825-001Z	TACT SW		
S953	QSW0825-001Z	TACT SW		
S954	QSW0825-001Z	TACT SW		
S955	QSW0825-001Z	TACT SW		
S960	QSW0825-001Z	TACT SW		
S961	QSW0825-001Z	TACT SW		
S962	QSW0825-001Z	TACT SW		
S963	QSW0825-001Z	TACT SW		
S964	QSW0825-001Z	TACT SW		
S965	QSW0825-001Z	TACT SW		
S966	QSW0825-001Z	TACT SW		
S967	QSW0825-001Z	TACT SW		
SP920	GV40205-004A	IC HOLDER		
TW920	QUB220-32HPDM	WIRE		
TW991	QUB220-18HPDM	S.WIRE		

DVD servo board

Block No. [0][4]

⚠ Symbol No.	Part No.	Part Name	Description	Local
IC201	LA6502-X	IC		
IC301	MN2DS0004AA-H	IC		
IC302	LM1117MP-ADJ-X	IC		
IC305	MM1563DF-X	IC	3.3V Regulator	
IC453	S-80830CNNB-G-W	IC		
IC505	K4S643232F-TC60	IC		
IC505 or	K4S643232H-TC60	IC		
IC509	AT49BV322AT70TI	IC(FLASH)		
IC509 or	MBD32TF70TN	IC(MICRO C ROM)		
IC512	SN74LVC373APW-X	IC(DIGITAL)		
IC513	SN74LVC373APW-X	IC(DIGITAL)		
IC701	AK4384VT-X	IC		
IC702	AK4384VT-X	IC		
IC703	AK4384VT-X	IC		
IC704	CS5342-CZZ-X	IC(DIGITAL)		
IC705	MM1615AN-X	IC		
Q101	KTA1001/Y/-X	TRANSISTOR		
Q101 or	2SB1424/R/-W	TRANSISTOR		
Q102	2SC4617/R/-X	TRANSISTOR		
Q103	KTA1001/Y/-X	TRANSISTOR		
Q103 or	2SB1424/R/-W	TRANSISTOR		
Q104	2SC4617/R/-X	TRANSISTOR		
Q105	UN2119-X	TRANSISTOR		
C101	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C102	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C103	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C104	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C105	NEA70JM-476X	E CAPACITOR	47uF 6.3V M	
C106	NEA70JM-476X	E CAPACITOR	47uF 6.3V M	
C107	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C108	NEA70JM-476X	E CAPACITOR	47uF 6.3V M	
C204	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C205	NCB31HK-271X	C CAPACITOR	270pF 50V K	
C206	NDC31HJ-151X	C CAPACITOR	150pF 50V J	
C211	NCB31HK-223X	C CAPACITOR	0.022uF 50V K	
C217	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C251	NCB31AK-474X	C CAPACITOR	0.47uF 10V K	
C256	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C257	NCB31HK-822X	C CAPACITOR	8200pF 50V K	
C258	NCB31CK-153X	C CAPACITOR	0.015uF 16V K	
C259	NCB31CK-153X	C CAPACITOR	0.015uF 16V K	
C260	NCB31EK-223X	C CAPACITOR	0.022uF 25V K	
C261	NCB31EK-223X	C CAPACITOR	0.022uF 25V K	
C262	NCB31EK-223X	C CAPACITOR	0.022uF 25V K	
C300	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C301	NEA70GM-227X	E CAPACITOR	220uF 4V M	
C302	NEA70GM-476X	E CAPACITOR	47uF 4V M	
C303	NEA70GM-476X	E CAPACITOR	47uF 4V M	
C304	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C305	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C306	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C307	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C308	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C309	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C310	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C311	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C312	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C313	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C314	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C315	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C316	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C317	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C318	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C319	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C320	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C321	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C322	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C323	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C324	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C325	NDC31HJ-180X	C CAPACITOR	18pF 50V J	
C326	NDC31HJ-150X	C CAPACITOR	15pF 50V J	
C328	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C329	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C330	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C331	NCB31CK-333X	C CAPACITOR	0.033uF 16V K	
C332	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C333	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C334	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C335	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C337	NCB31CK-183X	C CAPACITOR	0.018uF 16V K	
C338	NCB31HK-562X	C CAPACITOR	5600pF 50V K	
C339	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C340	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C341	NCF31AZ-105X	C CAPACITOR	1uF 10V Z	

⚠ Symbol No.	Part No.	Part Name	Description	Local
C347	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C348	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C349	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C350	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C351	NCB31CK-103X	C CAPACITOR	0.01uF 16V K	
C352	NCB31CK-153X	C CAPACITOR	0.015uF 16V K	
C353	NCB31HK-561X	C CAPACITOR	560pF 50V K	
C354	NCB31HK-561X	C CAPACITOR	560pF 50V K	
C356	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C371	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C380	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C381	NCB21AK-225X	C CAPACITOR	2.2uF 10V K	
C382	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C391	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C455	NCB31CK-103X	C CAPACITOR	0.01uF 16V K	
C551	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C552	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C553	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C554	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C555	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C556	NCF31AZ-105X	C CAPACITOR	1uF 10V Z	
C557	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C558	NEA70GM-476X	E CAPACITOR	47uF 4V M	
C701	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C702	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C703	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C704	NEA70JM-476X	E CAPACITOR	47uF 6.3V M	
C706	NEA71AM-106X	E CAPACITOR	10uF 10V M	
C707	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C708	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C709	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C711	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C712	NCB31CK-103X	C CAPACITOR	0.01uF 16V K	
C713	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C741	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z	
C742	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z	
C743	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z	
C748	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z	
C749	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z	
C761	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
R101	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R102	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R103	NRSA63J-243X	MG RESISTOR	24kΩ 1/16W J	
R104	NRSA63J-303X	MG RESISTOR	30kΩ 1/16W J	
R105	NRS125J-270X	MG RESISTOR	27Ω 1/2W J	
R106	NRSA63J-2R2X	MG RESISTOR	2.2Ω 1/16W J	
R107	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R108	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R109	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R110	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R111	NRSA63J-243X	MG RESISTOR	24kΩ 1/16W J	
R112	NRSA63J-303X	MG RESISTOR	30kΩ 1/16W J	
R113	NRS125J-270X	MG RESISTOR	27Ω 1/2W J	
R114	NRSA63J-2R2X	MG RESISTOR	2.2Ω 1/16W J	
R115	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R116	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R117	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R118	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R119	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R120	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R122	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R123	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R125	NRS125J-1R0X	MG RESISTOR	1Ω 1/2W J	
R126	NRSA63J-181X	MG RESISTOR	180Ω 1/16W J	
R127	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R128	NRSA63J-163X	MG RESISTOR	16kΩ 1/16W J	
R204	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J	
R205	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J	
R206	NRSA63J-303X	MG RESISTOR	30kΩ 1/16W J	
R207	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R213	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R214	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R219	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	
R220	NRSA63J-243X	MG RESISTOR	24kΩ 1/16W J	
R221	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J	
R251	NRS125J-R47X	MG RESISTOR	0.47Ω 1/2W J	
R252	NRSA63J-2R2X	MG RESISTOR	2.2Ω 1/16W J	

⚠ Symbol No.	Part No.	Part Name	Description	Local
R257	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R259	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R302	NRSA63J-240X	MG RESISTOR	24Ω 1/16W J	
R303	NRSA63J-270X	MG RESISTOR	27Ω 1/16W J	
R306	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R307	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R308	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R309	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R312	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R313	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R314	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R315	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R316	NRSA63J-6R8X	MG RESISTOR	6.8Ω 1/16W J	
R317	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R319	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R320	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R330	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R331	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R332	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R334	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R335	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R336	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R337	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R338	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R339	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R340	NRSA63D-303X	MG RESISTOR	30kΩ 1/16W D	
R341	NRSA63D-362X	MG RESISTOR	3.6kΩ 1/16W D	
R342	NRSA63D-222X	MG RESISTOR	2.2kΩ 1/16W D	
R343	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R345	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R346	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R347	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J	
R351	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J	
R352	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
R353	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R354	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R355	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R356	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R357	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R358	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R359	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R360	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R362	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R363	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R367	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R368	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R369	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R372	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R373	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R384	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R385	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R388	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R392	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R393	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R394	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R395	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R399	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R452	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R457	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R458	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R501	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R502	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R530	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R531	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R533	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R534	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R562	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R701	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R703	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R704	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R705	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R706	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R707	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R708	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R714	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R715	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R716	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R718	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	

⚠ Symbol No.	Part No.	Part Name	Description	Local
R731	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R732	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R733	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R734	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R735	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R741	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R742	NRSA63J-5R1X	MG RESISTOR	5.1Ω 1/16W J	
R743	NRSA63J-4R7X	MG RESISTOR	4.7Ω 1/16W J	
R744	NRSA63J-4R7X	MG RESISTOR	4.7Ω 1/16W J	
R745	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R749	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R990	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
CN101	QGF0523F1-24W	CONNECTOR	FFC/FPC (1-24)	
CN201	QGF1037F1-08W	CONNECTOR	FFC/FPC (1-8)	
CN501	QGF1016F2-08W	CONNECTOR	FFC/FPC (1-8)	
CN502	QGF1016F2-09W	CONNECTOR	FFC/FPC (1-9)	
CN503	QGF1016F2-17W	CONNECTOR	FFC/FPC (1-17)	
CN504	QGF1016F2-15W	CONNECTOR	FFC/FPC (1-15)	
K101	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
K102	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
K350	NQR0502-001X	FERRITE BEADS		
K352	NQR0502-001X	FERRITE BEADS		
K551	NQR0129-002X	FERRITE BEADS		
K552	NQR0129-002X	FERRITE BEADS		
K553	NQR0129-002X	FERRITE BEADS		
K554	NQR0129-002X	FERRITE BEADS		
K555	NQR0022-005X	FERRITE BEADS		
K556	NQR0129-002X	FERRITE BEADS		
K710	NQR0129-002X	FERRITE BEADS		
TH301	NAD0025-103X	N THERMISTOR	10kΩ	
X351	NAX0550-001X	CRYSTAL	27.000MHz	

DVD loading switch board

Block No. [0][5]

⚠ Symbol No.	Part No.	Part Name	Description	Local
CN1	QGF1016F3-05	CONNECTOR	FFC/FPC (1-5)	
S1	QSW1007-001	DETECT SWITCH		

Packing materials and accessories parts list

Block No. M 3 M M

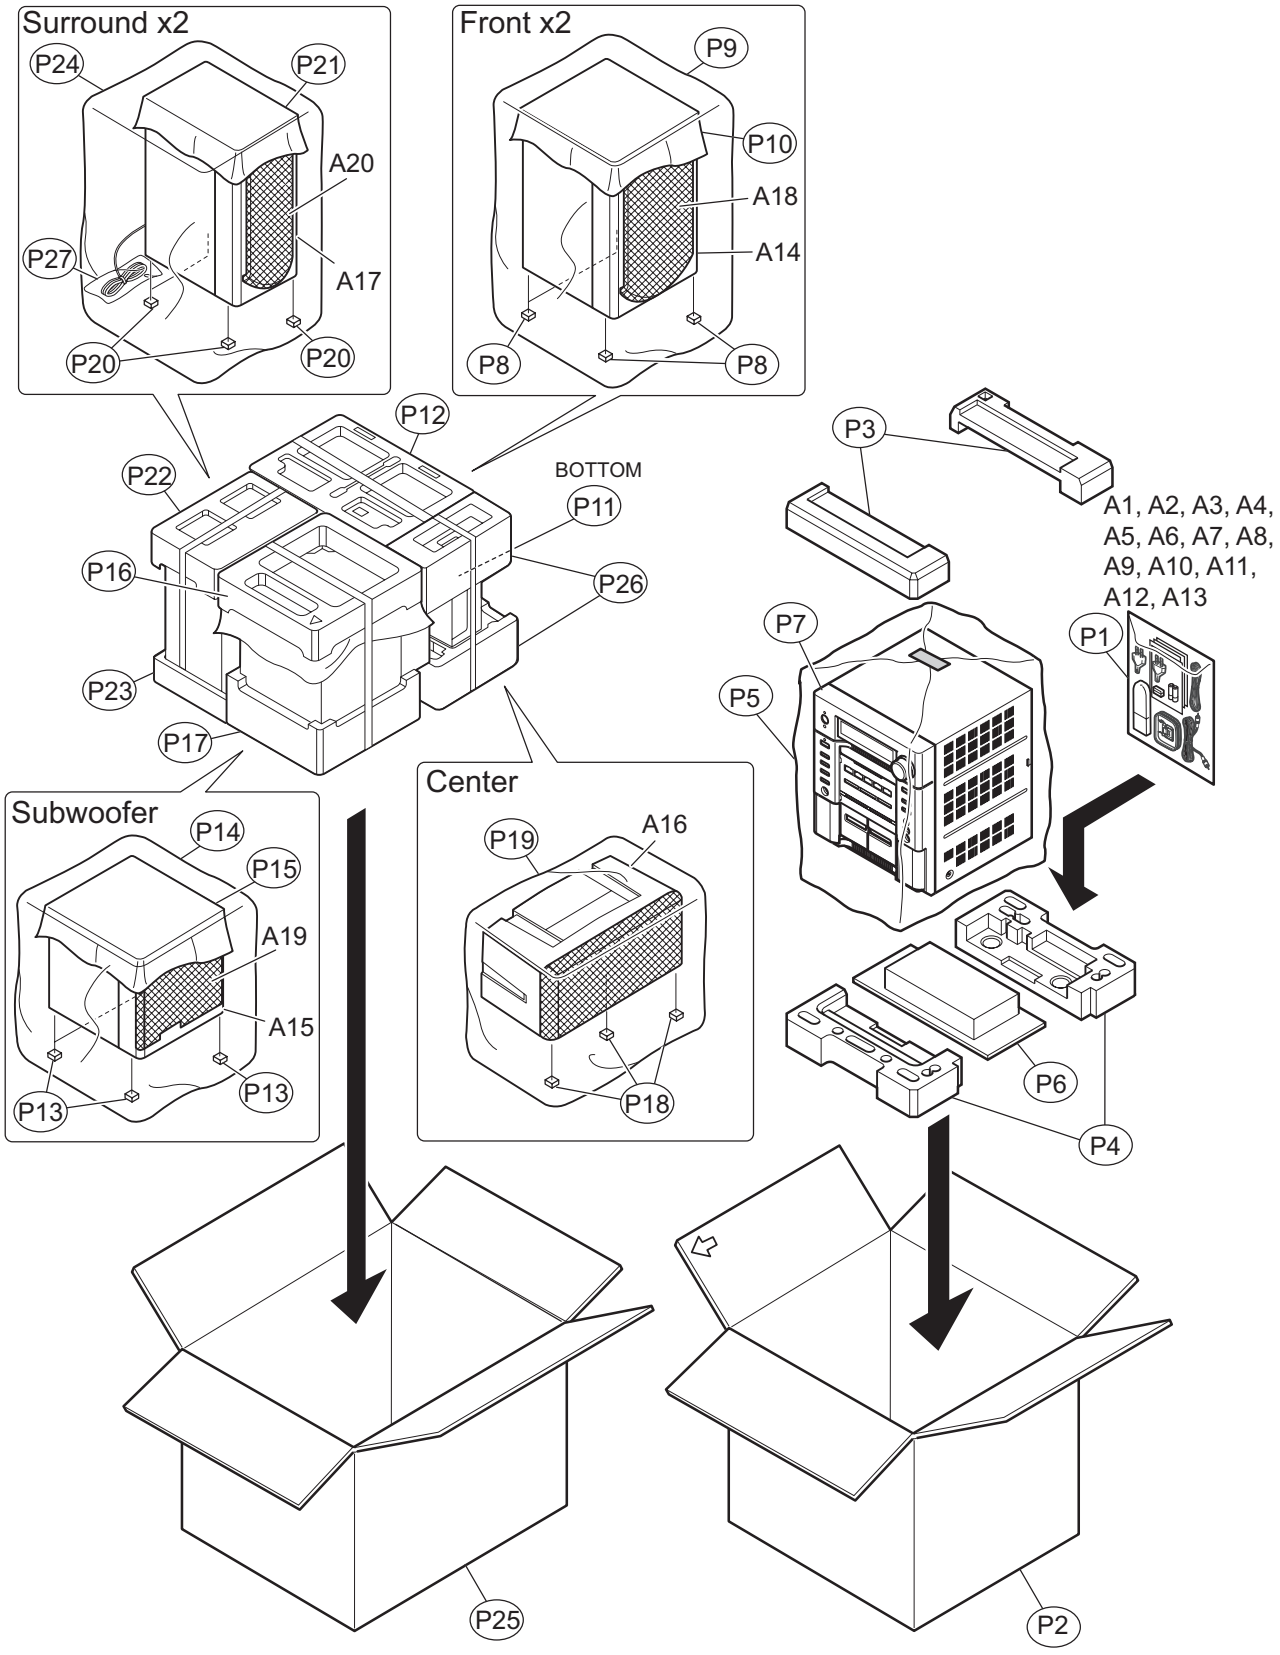

Packing and Accessories

Block No. [M][3][M][M]

⚠	Symbol No.	Part No.	Part Name	Description	Local
	A 1	QAL0014-001	AM LOOP ANT		
	A 2	QAL0457-001	ANT.WIRE		
⚠	A 3	QAM0112-002	PLUG ADAPTOR		UN,US,UW
	A 4	QAM0216-001	SIGNAL CORD		
	A 5	RM-SMXJD5A	REMOCON		UW
	A 5	RM-SMXJD5U	REMOCON		UN,US,UX
	A 6	----------	BATTERY	(x2)	
	A 7	GV40538-001A	INFO. SHEET		
	A 8	GV40548-001A	INFO. SHEET		UN,US,UX
	A 9	GVT0127-001A	INST.	ENG CHI(PEKIN)	UN,US
	A 9	GVT0127-004A	INST.	ENG SPA POR	UW
	A 9	GVT0127-002A	INST.	ENG CHI(PEKIN)	UX
	A 10	GV40524-002A	NOTICE SHEET		UW
	A 10	GV40524-001B	NOTICE SHEET		UN,US,UX
	A 11	QQR1607-001	NOISE FILTER		
⚠	A 12	VMZ0139-001	CONTHI PLUG		UX
	A 13	GVT0127-006A	INST.	ARA PER	UX
	A 14	SPMXJD5FK-SPBOX	SPK WITH BOX-F	(x2)	
	A 15	SPMXJD8WK-SPBOX	SPK WITH BOX-W		
	A 16	SPMXJD8CK-SPBOX	SPK WITH BOX-C		
	A 17	SPMXJD8SK-SPBOX	SPK WITH BOX-S	(x2)	
	A 18	J201-XJD301G-10	NET ASSY	FRONT(x2)	
	A 19	J201-XJD501G-10	NET ASSY	SUBWOOFER	
	A 20	J201-XJD8R1G-10	NET ASSY	SURROUND(x2)	
	P 1	QPA02503503P	POLY BAG	25cm x 35cm	
	P 2	GV20276-001A	CARTON ASSY.		UN,US
	P 2	GV20276-004A	CARTON ASSY.		UW
	P 2	GV20276-005A	CARTON ASSY.		UX
	P 3	GV10210-001A	CUSHION (TOP)		
	P 4	GV10211-001A	CUSHION (BOTTOM		
	P 5	QPC06507030P	POLY BAG	65cm x 70cm	
	P 6	GV30209-008A	CARTON SPACER		
	P 7	GV40437-003A	CLOTH		
	P 8	441-802104-00	LEG CUSHION	FRONT(x8)	
	P 9	700-120034-20	HDPE BAG	FRONT(x2)	
	P 10	715-250031-00	MIRAMAT SHEET	FRONT(x2)	
	P 11	720-XJD5FB-00	BOTTOM CUSHION	FRONT	
	P 12	720-XJD5FT-00	TOP CUSHION	FRONT	
	P 13	441-802104-00	LEG CUSHION	SUBWOOFER(x4)	
	P 14	700-120094-20	POLY BAG	SUBWOOFER	
	P 15	715-140015-01	MIRAMAT SHEET	SUBWOOFER	
	P 16	720-XJD8WT-00	TOP CUSHION	SUBWOOFER	
	P 17	720-XJD8WB-00	BOTTOM CUSHION	SUBWOOFER	
	P 18	441-802104-00	LEG CUSHION	CENTER(x3)	
	P 19	700-120082-10	POLY BAG	CENTER	
	P 20	441-802104-00	LEG CUSHION	SURROUND(x8)	
	P 21	715-250093-00	MIRAMAT SHEET	SURROUND(x2)	
	P 22	720-XJD8RT-00	TOP CUSHION	SURROUND	
	P 23	720-XJD8RB-00	BOTTOM CUSHION	SURROUND	
	P 24	700-120095-20	POLY BAG	SURROUND(x2)	
	P 25	730-0XJD8U-10	CARTON BOX		UN,US
	P 25	730-XJD8UX-10	CARTON BOX		UX,UW
	P 26	720-XJD8CS-00	CUSHION	CENTER(x2)	
	P 27	700-210001-11	POLY BAG	SURROUND(x2)	